

TIPS FOR BEST RESULTS

- For an even closer and smoother close to skin trim use the main trimmer blade without an attachment comb and then use the detail trimmer blade to trim hairs back further. This will give you a clean shaver look without the irritation shaving can cause.
- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting until you are familiar with your body trimmer and how it works.

Note: This trimmer has been designed so that it can be used in the shower for greater ease and convenience. Do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower. Do not submerge the trimmer in water.

CLEANING AND MAINTENANCE

- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- Allow water to run into and through the wash out port to help wash any hair trimmings from the inside out.

Rinsing under water requires re-lubricating the cutting blades once a month. Use only light grade oils, such as the one supplied (sewing machine oil can also be used). Spread 1-2 drops of oil over the cutters with your fingertip. Wipe away all excess oil.

Use only light-grade oils as these will not evaporate or slow down the speed of the cutting blades.

Do not use hair oil, grease, or any oil mixed with kerosene or solvent as these too will evaporate.

STORAGE

When not in use, unplug the appliance and store it out of reach of children in a safe dry place. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Firstly, pry the detail blade head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely.



SUITABLE FOR USE IN BATH OR SHOWER.

This appliance conforms to radio frequency interference requirements. Any product purchases and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (Warranty Period). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON

REMINGTON SERVICE HOTLINE

☎ Australia 1800 623 118 (toll free)

☎ New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc.(SBI), or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 02/15

Part No. T22-0003225 P44-0250-503000



REMINGTON®

MAN TRIM BODY HAIR TRIMMER



USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au

2 YEAR WARRANTY

BHT250AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP THE POWER ADAPTOR AWAY FROM WATER

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired. Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Although this appliance is designed to be used around and with water, do not fully submerge the appliance or any of its attachments in water or any other liquid.
- Switch off this appliance before changing attachments
- Do not wrap the cord of the power adaptor around the unit.
- Do not use this appliance with damaged or broken attachments, as injury may occur.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not plug or unplug the appliance with wet hands.
- This appliance is not intended for commercial or salon use.
- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance with type SA050035D (AUS) or HK28AA-5.0-350 (AUS).



SAVE THESE INSTRUCTIONS

BHT250AU MAN TRIM BODY HAIR TRIMMER USE AND CARE MANUAL

Thank you for purchasing your new Remington® Body Hair Trimmer. This trimmer features innovative dual sided trim shave technology, which trims to 0.2mm length for a shaved look without the irritation shaving can cause.



KEY PARTS

1. On/Off switch
2. Main blade
3. Detail blade
4. Fixed combs (2, 4, 6mm)
5. Hang loop
6. Washout port

7. Charging indicator

- Also includes:**
- Lubricating oil
 - Storage pouch
 - Adaptor

BHT250AU SPECIFICATIONS	
Power System	Cordless (rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	4 Hours
Runtime	60 Minutes
Indicators	Charging
Voltage Type	Single 220-240V

CHARGING

PLEASE ENSURE TO READ OVER ALL INSTRUCTIONS BEFORE YOUR FIRST USE.

- Before using your trimmer for the first time, charge it for 24 hours. Note during this charge ignore the electronic indicators as they are in "start-up cycle".
- Plug the adaptor into your trimmer and then plug the charging adaptor unit into a 220-240 volt domestic power outlet. Check to ensure that the trimmer On/Off switch is OFF. The Charging Indicator Light will glow to indicate that it is connected to a power source. The light will remain on until the adaptor is disconnected from the power source.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the trimmer stored away if it will not be used for an extended period of time (2-3 months).
- The trimmer will be fully charged in 4 hours.
- To preserve the life of the batteries, discharge them by running the trimmer until the blades move slowly. Switch off and recharge for 24 hours. Do this every 6 months.
- Use the trimmer only with the charging adaptor supplied.

NOTE: This product is for cordless use only, it cannot be used while it is connected to the mains power outlet or while it is charging.

ATTACHING THE ATTACHMENTS

Note: Before attaching or removing the combs please ensure the unit is Off.

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer blade. Slide the comb down the grooves until it clicks into place.

- To remove the comb, unclick the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.

Note: Using the detail blade side of trimmer with no combs attached will trim down to 0.2mm.

Using the main trimmer blade with no combs attached will trim hair to 1mm.

INSTRUCTIONS FOR USE

DELICATES TRIMMING

- Choose and attach the desired fixed comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair around your delicates, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.

Note: Take your time when trimming the delicates area by using slow and even strokes.

BODY TRIMMING

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.

EDGING AND SHAPING OR CLOSE TRIM

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.