

REMINGTON |[®]
EST. NEW YORK 1937

T-SERIES ULTIMATE PRECISION TRIMMER



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

3 YEAR WARRANTY

MB7000AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- For use on facial hair only.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug the power adaptor from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- **WARNING:** For recharging the battery, only use the adaptor supplied with the appliance.
- Always replace the adaptor with one of the original type.
- Do not use an extension cord or a voltage converter with this appliance.

SAVE THESE INSTRUCTIONS

MB7000 T-SERIES ULTIMATE PRECISION TRIMMER

Use & Care Instruction Manual

Thank you for purchasing your Remington® T-Series Multi Grooming Kit. Inside this manual you will find instructions on using and caring for your groomer.



KEY PARTS

- | | |
|--------------------------|--------------------------------|
| 1. On/Off Switch | 6. Precision Dial Comb (1-5mm) |
| 2. Fuel Gauge | 7. Fixed combs x 6 |
| 3. Precision T-Blade | |
| 4. Charging connector | Also Includes: |
| 5. Micro Detailing blade | • Power Adaptor |
| | • Storage Pouch |

Note: The trimming guide attachments supplied are of various lengths. When first becoming familiar with your T-Series Trimmer, begin with a longer numbered setting. Adjust cutting length as desired.

ABOUT YOUR TRIMMER

MB5000AU SPECIFICATIONS	
Power System	Cordless (Rechargeable)
Full Charge Time	4 Hours
Run Time	60 Minutes
Quick Charge	Yes (5 Minutes)
Indicators	Fuel Gauge (see chart)
Voltage Type (adaptor voltage type)	Worldwide 100-240V

CHARGING

- Before using your groomer for the first time, charge it for 4 hours. The groomer will be fully charged in 4 hours.
- Plug the adaptor into your groomer and then plug the charging adaptor unit into a 100-240V domestic power outlet. The fuel gauge will illuminate to indicate that it is charging. When the battery is full the fuel gauge will remain illuminated until disconnected from the power outlet.
- The battery cannot be overcharged, but it is recommend that charging be discontinued and the groomer stored away if it will not be used for an extended period of time (2-3 months).
- To preserve the life of the battery, discharge it by running the groomer until the blades move slowly. Switch off and recharge for 4 hours. Do this every 6 months.
- Use the groomer only with the charging adaptor supplied.

CHARGING YOUR APPLIANCE

Before using your trimmer for the first time, charge for 4 hours.

1. Ensure the product is switched off.
2. Connect the charging adaptor to the product and then to the mains.

Fuel Gauge

Charge Level	Fuel Gauge Lights	
	During Charging	During Use
Charging	Lights will cycle in an upwards pattern	-
Fully Charged	All lights will remain lit for 5 minutes and then switch off	Lights will cycle in an upwards and downwards pattern
Battery charge is low (3 minutes or less run time available)	-	Bottom light will flash

- In addition, the fuel gauge shows the level of charge for 5 seconds after the unit has been switched off after use.

Lights	Remaining Charge Level
Bottom light will flash	Battery charge low
Bottom light on	33%
Bottom and middle light on	33 - 66%
All lights on	66 - 100%

- Run time from fully charged is up to 60 minutes.
- Unplug the charger when the unit is fully charged .
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

ATTACHMENTS

Ensure that the device is switched off before fitting or removing attachments.

To Fit and Remove Blades

- To remove, pull the blade upwards out of the body of the device.
- To fit, position the blade as desired then insert it into the opening and press it downwards until it clicks into place.
- The T-blade and micro detail blade can be positioned facing upwards or downwards to help you trim difficult to reach areas.

Fitting and Removing Fixed/Adjustable Combs: To Fit

- Hook the front of the guide comb over the teeth of the T-blade
- Press the back of the guide comb down until it clicks into place.

Fitting and Removing Fixed/Adjustable Combs: To Remove

- Lift the tab on the back of the guide comb upwards until it comes free from the T-blade.

GROOMING TIPS

- Comb facial hair with a fine comb before you start trimming.
- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Hair should be dry and free from any waxes or lotions.
- If hair builds up during use, switch the unit off, remove any attachment in use and clean any excess hair clippings from the attachment and groomer.

Beard Styling and Maintenance:

1. Fit the T-blade and desired comb.
 2. Use the dial on the adjustable comb, or select a fixed comb for the desired length setting.
 3. Start trimming under the chin following the line of the jaw.
 4. Work upwards towards the ear and upper beard line.
 5. Tidy the beard edges using the precision T-blade or micro detail blade.
- Note: Use the beard trimmer without the combs for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

Fine Detailing, Contouring and Edging:

1. Fit the desired blade (without a comb) in whichever orientation that gives the best access.
2. Start with the blades resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
3. Shape as desired.

CLEANING, CARE & MAINTENANCE

- To ensure long lasting performance clean after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- To keep the unit in optimal condition we recommend re-oiling the blades after cleaning.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled is at the end of the product's useful life before it is discarded.

- The MB7000AU contains a lithium-ion battery. Once the groomer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.



This product is suitable for cleaning under an open water tap.

This product conforms to radio frequency interference requirements

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2020 Spectrum Brands Inc.

Rev. 08/20

Part No. T22-0005666

Type: MB20A

