

REMINGTON®

EST. NEW YORK 1937

AIR3D® STYLING GIFT SET

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

3 YEAR WARRANTY

D7777XAU

IMPORTANT SAFEGUARDS

Warning: When the appliances are used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliances are switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.
Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.

- Do not use the straightener on wet hair.
- An appliance should never be left unattended when plugged in to a power outlet.
- These appliances are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Keep the appliances and the power cords away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.


- These appliances are not toys. Children shall be supervised to ensure they do not play with the appliances.
- Use these appliances only for their intended uses as described in this manual. Do not use attachments not recommended by Remington.
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner.
- There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of these appliances.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- When using the hair dryer, do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the hair dryer, keep your hair away from the air inlet grille. Do not let your hair get drawn into it.
- During the use of the straightener, the plates will be very hot. Do not let bare skin touch heated surfaces.
- Do not place the heated straightener on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.
- Please check the voltage ratings on the product prior to use to ensure it matches the voltage of the local area.

SAVE THESE INSTRUCTIONS

D7777XAU AIR3D® STYLING GIFT SET HAIR DRYER & STRAIGHTENER

Thank you for purchasing your new Remington® AIR3D® Styling Gift Set. Our AIR3D® hair dryer features the unique 3D airflow and Smooth Conditioning Technology. The styling gift set also comes with a special straightener with suspension plates coated with Advanced Ceramic for a smooth glide and shiny-looking hair.

HAIR DRYER USE & CARE INSTRUCTION

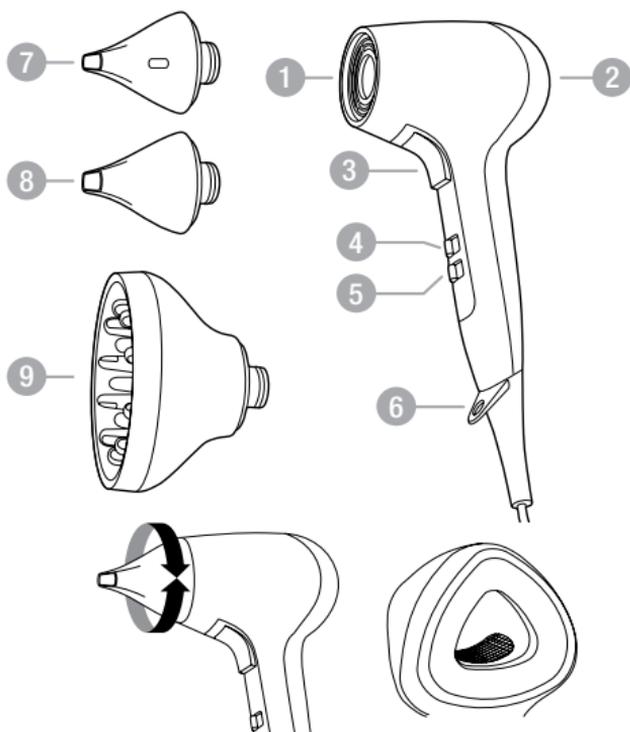

KEY PARTS

- | | |
|----------------------------|----------------------------------|
| 1. Ceramic back-lit grille | 7. 7mm ultra slim concentrator |
| 2. Air inlet grille | 8. 11mm fast drying concentrator |
| 3. Cool shot | 9. Diffuser |
| 4. Heat settings (⊞) | 10. Storage pouch (not shown) |
| 5. Speed settings (⚙) | |
| 6. Hang loop | |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture.

Note: This hair dryer is not suitable for use on synthetic wigs or hair extensions.

UNIQUE 3D AIRFLOW TECHNOLOGY

The AIR3D® Hair Dryer features a unique design with 3D Airflow Technology to deliver precise, evenly heated airflow for optimal styling performance.

SMOOTH CONDITIONING TECHNOLOGY

Besides the ionic generator, this hair dryer is infused with micro-conditioners to eliminate static hair, smooth down the hair cuticles for intensified softness, achieving the ultra-smooth finish.

LIGHTWEIGHT & BALANCED

With the motor located vertically in the handle, this hair dryer allows optimised weight distribution to provide maximum comfort and control.

FITTING ATTACHMENTS

1. Push the desired attachment onto the front of your hair dryer.
2. Concentrator can be rotated as required.

HOW TO USE YOUR REMINGTON® AIR3D® HAIR DRYER

1. Plug the hair dryer into a 220-240V wall power outlet.
Note: Please note this hair dryer is only suitable for use on 220-240V wall power outlets.
2. Switch the hair dryer on and select the desired speed setting (1 Low or 2 High) using the speed setting switch (). The number below the switch will light up to show you which setting you have selected. The back-lit grille will light up white when you switch the hair dryer on.
3. Select the desired heat setting (1 Low, 2 Medium or 3 High) using the heat setting switch (). The number above the switch will light up and show you which setting you have selected.
4. Press and hold the cool shot button to direct cool air onto your hair to help set your style. The back-lit grille will illuminate blue when you use the cool shot feature.
5. After use, turn your hair dryer off and unplug it.
6. Let your hair dryer cool down before cleaning or storing away.

QUICK DRYING

Select the high heat and high speed setting and roughly dry your hair. Use a brush or your hand to shake out excess moisture whilst drying and keep the hair dryer in constant motion.

STRAIGHTENING

Select the high heat and high speed setting and roughly dry the hair. When the hair is nearly dry, attach the concentrator nozzle (which minimises frizz) and reduce the heat & speed. Section the hair according to thickness and begin with straightening bottom layers first. Using your brush, follow the concentrator from above, while slowly gliding down each section of hair from roots to tips. Once bottom layers have been straightened, then straighten the mid section and complete by straightening top layers.

NATURAL WAVY TEXTURE

Using the low heat and low speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand while directing airflow through your fingers. Once you have reached the desired effect, use the cool shot on each section of hair to hold style. For more volume lean forward and dry hair in the upside down position.

LIFT & VOLUME

Use the hair dryer on the low heat and low speed setting, work from the roots of hair and begin at the back of the head. Section your hair and use a round brush to dry against the natural growth pattern of your hair. This creates lift at the roots, which creates a style with volume.

STYLING

Set the hair dryer to the low heat and low speed setting and attach the concentrator nozzle for precision drying. Section the hair and style using a round brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2-5 seconds on each section while curling under or over for additional hold.

USING THE DIFFUSER

This hair dryer comes with a professional style diffuser. This diffuser dries hair fast without blowing out the style. Perfect for naturally curly, wavy, permed and fine hair or to give your hair a boost for volume.

NOTE: Always select the lowest heat setting when using the diffuser, as damage may occur to the diffuser if higher heat settings are used.

DRY YOUR HAIR USING THE DIFFUSER

Dry your hair beginning at the roots and using the circular motions, always moving in the same direction. Use the diffuser with the hair dryer set at the low heat and low speed setting. Continue drying, keeping the hair dryer at a 90-degree angle to the scalp. This will lift the roots away from the scalp giving your hair volume. Finish by drying the ends.

ADD VOLUME TO YOUR HAIR USING THE DIFFUSER

To add volume to your hair, tilt your head upside down and dry so that the roots fall away from your scalp. Use the diffuser with the hair dryer set at the low heat and low speed setting. Point the hair dryer at the roots to give your hair maximum volume. Continue the process to the ends of your hair.

Important Note: Remington AIR3D® hair dryer is constructed differently from other Remington hairdryers. When drying your hair, at all times please avoid your hair covering the back of the dryer to prevent it from being caught in the grille.

CLEANING AND MAINTENANCE

To maintain peak product performance and to prolong motor life, it is important to regularly clean the air inlet grille.

Unplug the hair dryer and allow it to cool.

Use a lint free cloth or soft brush to gently remove dust and debris from the grille.

STRAIGHTENER USE & CARE INSTRUCTION



KEY PARTS

- | | |
|-----------------------------------|-------------------------------|
| 1. Advanced ceramic coated plates | 4. On/off switch & Hinge lock |
| 2. Indicator light | 5. Salon swivel cord |
| 3. Suspension plates | 6. Storage case |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair, then dry your hair thoroughly and make sure that it is tangle free prior to straightening.

NOTE: The AIR3D® Styling Gift Set Straightener is not suitable for use on synthetic wigs or hair extensions.

ADVANCED CERAMIC COATED PLATES

Advanced Ceramic is an exclusive layer of CeraSol Ceramic. Advanced Ceramic Coated plates are proven to have 10x more ceramic* for superior high even heat across the plates with no hot spots. Its 2x smoother* creating an effortless glide during straightening for silky smooth results and 2x longer lasting* ensuring plate durability.

*vs. standard Remington straightener ceramic coating

HOW TO USE YOUR REMINGTON® AIR3D® STYLING GIFT SET STRAIGHTENER

Before use, ensure the hair is clean, dry and tangle free. Section the hair prior to styling and style the lower layers first.

Plug in to any household (120-240V AC) wall power outlet, and move the on/off switch into the “I” position, this will unlock the plates and also switch the straightener on. The on indicator light will begin to flash and continue to flash until the straightener has heated up to 200°C. The straightener will be ready to use in 30 seconds from switched on. Take extra care when using the straightener, as it can get very hot. Ensure you test the straightener on a small section of hair first.

To switch your straightener off, move the on/off switch into the “O” position but not close the plates and only close the plates once they are fully cooled down.

TO STRAIGHTEN YOUR HAIR

To make styling easier, part the hair either in the middle or to the side and use clips to section your hair, top, sides and back.

You may need to comb through your hair before straightening to ensure that it is tangle free.

Start at the nape of the neck and straighten the underneath sections of hair first. When the underneath sections of hair are complete, move to the next layers, finishing with the hair around the part line.

Take about a 5cm section of hair and pull taut and down and away from the

scalp. Holding the straightener with the other hand, start at the roots and clamp the hair firmly between the plates.

Firmly holding the plates together, run the straightener down through the entire length of the section of hair from roots to ends, in one smooth stroke.

Repeat until the desired amount of straightening has been achieved.

TO CURL YOUR HAIR

Section your hair as above. Take about a 5cm section of hair and firmly grip it between the plates, close to the roots. Note: The smaller the section the tighter the curl.

Keeping tension firm, gently rotate the straightener 180° whilst pulling through the length of the hair section. Make sure to keep rotating the straightener. Remove straightener and holding the hair length, allow the curl to spring into shape.

AUTOMATIC WORLDWIDE VOLTAGE

The AIR3D® Styling Gift Set Straightener features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

NOTE: Some countries will require the use of a plug adaptor that is not included with your straightener.

HINGE LOCK

Safely store your AIR3D® Styling Gift Set Straightener with the plates locked together.

To unlock, slide the hinge lock into the “I” position. To lock, slide the hinge lock into the “O” position

NOTE: Do not heat the straightener in the locked position. Ensure the plates are fully cooled down before put away your straightener.

MAINTENANCE

This straightener is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the straightener from the power outlet, allow it to cool, then wipe the exterior surface and the plates with a soft damp cloth.

Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the plates as this will scratch the surface and deteriorate the effectiveness of the surface.

HAIR DRYER & STRAIGHTENER STORAGE

When not in use, always unplug the hair dryer & straightener from the power outlet. Allow the hair dryer & straightener to cool and store out of the reach of children in a safe dry place. Never wrap the power cords around the hair dryer & straightener as this will cause the cords to wear prematurely and break. Handle the cords carefully for long life and avoid jerking, twisting or straining especially at the power plug and hair dryer & straightener connections. If the cords become twisted in use, periodically straighten them.

Note: Store your straightener with the plates locked. This will ensure that the plates are protected and prevented from being easily scratched.

We suggest you use local waste management centres to recycle this product at end of life.



WARNING: Do not use these appliances near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

These products conform to radio frequency interference requirements. Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

①New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 08/19

Part No. T22-7001077

Type: D7777

