

REMINGTON®
EST. NEW YORK 1937

TRIBECA COLLECTION

YOUR HIGH PERFORMANCE STYLING SET



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

DS9420AU

IMPORTANT SAFEGUARDS

Warning: When the appliances are used in a bathroom, unplug them after use since the proximity of water presents a hazard even when the appliances are switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER**

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- These appliances are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Keep the appliances and the power cords away from the edge of table or counter tops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- These appliances are not toys. Children shall be supervised to ensure they do not play with the appliances.
- Use these appliances only for their intended uses as described in this manual. Do not use attachments not recommended by Remington.

- If the supplied cords are damaged, they must be replaced by the manufacturer, their service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of these appliances.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

SAVE THESE INSTRUCTIONS

DS9420AU TRIBECA COLLECTION HAIR DRYER & STRAIGHTENER

Thank you for purchasing your new Remington® Tribeca Collection Hair Dryer & Straightener pack. The Tribeca Collection Hair Dryer delivers 2300 watts performance that helps dry your hair fast with less hear for more protection*, and the Straightener features Advanced Ceramic coated floating plates for a smooth glide and shiny-looking hair.

*vs. standard Remington 2300W hair dryer



KEY PARTS

- | | |
|--|-------------------|
| 1. Air outlet with ceramic coated grille | 6. Speed settings |
| 2. Air inlet grille | o Off |
| 3. Removable filter | ⌘ Low speed |
| 4. Cool shot | ⌘ High speed |
| 5. Heat settings | 7. Hang loop |
| { Low heat | 8. Concentrator |
| }} Medium heat | |
| }}} High Heat | |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to straightening or styling. Dry hair thoroughly before using the hair dryer and make sure it is tangle free.

Note: The Tribeca Collection Hair Dryer & Straightener are not suitable for use on synthetic wigs or hair extensions.

COOL SHOT

This hair dryer is equipped with a cool shot button that is used to hold your hair style. Press and hold the cool shot button to rapidly cool and hold your hair once it has been styled.

QUICK DRYING

Select a high heat & high speed setting and roughly dry your hair. Use the round brush or your hand to shake out excess moisture whilst drying and keep the hair dryer in constant motion.

STRAIGHTENING

Select high heat and high speed and roughly dry the hair. When the hair is nearly dry, attach the concentrator nozzle (which minimises frizz) and reduce the heat & speed. Section the hair according to thickness and begin with straightening bottom layers first. Using the round brush, follow the concentrator from above, while slowly gliding down each section of hair from roots to tips.

Once bottom layers have been straightened, then straighten the mid-section and complete by straightening top layers.

NATURAL WAVY TEXTURE

Using a low heat and low speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand while directing airflow through your fingers. Once you have reached the desired effect, use the cool shot on each section of hair to hold the style. For more volume, lean forward and dry the hair in the upside down position.

LIFT & VOLUME

Use the hair dryer on a low heat and low speed setting, work from the roots of hair and begin at the back of the head. Section your hair and use the round brush to dry against the natural growth pattern of your hair. This creates lift at the roots, which creates a style with volume.

STYLING

Set the hair dryer to a low heat and low speed setting and attach the

concentrator nozzle for precision drying. Section the hair and style using the round brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2-5 seconds on each section while curling under or over for additional hold.

USER INSTRUCTIONS

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet grilles. In the event that the hair dryer stops during use, turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet grilles are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

MAINTENANCE

Your hair dryer is designed for household use and is virtually maintenance free. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

To maintain peak product performance, it is important to clean the air inlet grille and filter at the back of the dryer. To access the air inlet grille and filter, grasp the air inlet grille retaining ring with your hand and twist it anti-clockwise until it unlocks. Pull it away from the hair dryer. The filter can now be cleaned with a soft brush or a vacuum cleaner. Take the air inlet grille retaining ring and position it so the lugs on the ring are aligned with the notches on the side of the dryer. To lock, turn the air inlet grille retaining ring clockwise. The exterior of the hair dryer can be cleaned by wiping it with a damp cloth.

STRAIGHTENER USE & CARE INSTRUCTION



KEY PARTS

- | | |
|--|--------------------------------|
| 1. Advanced ceramic coated floating plates | 4. On/off button |
| 2. + Temperature increase button | 5. Digital temperature display |
| 3. – Temperature decrease button | 6. Hinge lock |
| | 7. Salon swivel cord |

ADVANCED CERAMIC COATED FLOATING PLATES

Advanced Ceramic is an exclusive layer of CeraSol Ceramic. Advanced Ceramic coated plates are proven to have 10x More Ceramic* for superior high even heat across the plates with no hot spots. It is also 2x Smoother* creating an effortless glide during straightening for silky smooth results and 2x Longer lasting* ensuring plate durability. The floating plates provides constant contact and faster styling.

*vs. standard Remington ceramic coating

HOW TO USE YOUR REMINGTON® TRIBECA COLLECTION STRAIGHTENER

Place the straightener on a flat, hard, heat resistant surface ensuring the sides of the plates do not come into contact with the surface. Plug in to any household (120/240V AC) power outlet. Press and hold the on/off switch for 1 second until you hear a 'beep'. The LCD digital display window will light up, and the temperature setting will default to 190°C. The bars in the right of the digital display window will flash while the plates are heating to the temperature selected. When the temperature selected has been reached the bars in the right of the window will be steady and there will be an audible 'beep'. To select a higher temperature press the '+' temperature increase button. To select a lower temperature press the '-' temperature decrease button.

RECOMMENDED TEMPERATURES

Temperature	Hair type
150°C - 170°C	A short bar will be displayed in the right hand corner of the digital display window. Suitable for fine hair.
180°C - 200°C	2 bars will be displayed in the right hand corner of the digital display window. Suitable for medium hair.
210°C - 235°C	3 bars will be displayed in the right hand corner of the digital display window. Suitable for thick hair.

The straightener will be ready to use in 10 seconds depending on the temperature selected.

Take extra care when using the straightener, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use, to prevent over drying or damage to your hair.

If in doubt, start with the low temperature setting first, and increase the temperature gradually by pressing the "+" temperature increase button.

To switch your straightener off, press and hold the on/off switch for 1 second until you hear an audible 'beep'.

AUTOMATIC WORLDWIDE VOLTAGE

The Tribeca Collection Straightener features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

NOTE: Some countries will require the use of a plug adaptor that is not included with your straightener.

TURBO BOOST FUNCTION

This straightener features a turbo boost function which will automatically select the highest temperature of 235°C. To operate the turbo boost function press and hold the '+' temperature increase button for 2 seconds. An audible 'beep' will confirm your selection.

TEMPERATURE LOCK

This straightener has a temperature lock to prevent the selected temperature from being accidentally altered during use. When the selected temperature has been reached, simply press and hold the '-' temperature decrease button for 2 seconds. An audible 'beep' will confirm your selection. This will lock the current heat setting and a padlock icon will be seen in the digital display window. To unlock the temperature lock, simply press and hold the '-' temperature button for 2 seconds. An audible 'beep' will confirm your selection.

AUTOMATIC SAFETY SHUT OFF

If the straightener is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

TO STRAIGHTEN YOUR HAIR

To make styling easier, part the hair either in the middle or to the side and use clips to section your hair, top, sides and back.

You may need to comb through your hair before straightening to ensure that it is tangle free.

Start at the nape of the neck and straighten the underneath sections of hair first. When the underneath sections of hair are complete, move to the next layers, finishing with the hair around the part line.

Take about a 5 cm section of hair and pull taut and down and away from the scalp. Holding the straightener with the other hand, start at the roots and clamp the hair firmly between the plates.

Firmly holding the plates together, run the straightener down through the entire length of the section of hair from roots to ends, in one smooth stroke.

Repeat until the desired amount of straightening has been achieved.

TO CURL YOUR HAIR

Section your hair as above.

Take about a 5cm section of hair and firmly grip it between the plates, close to the roots.

Note: The smaller the section the tighter the curl.

Keeping tension firm, gently rotate the straightener 180° whilst pulling through the length of the hair section.

Make sure to keep rotating the straightener.

Remove straightener and holding the hair length, allow the curl to spring into shape.

MAINTENANCE

This straightener is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the straightener from the power outlet, allow it to cool, then wipe the exterior surface and the plates with a soft damp cloth.

Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the plates as this will scratch the surface and deteriorate the effectiveness of the surface.

HAIR DRYER & STRAIGHTENER STORAGE

When not in use, always unplug the hair dryer & straightener from the power outlet. Allow the hair dryer & straightener to cool and store out of the reach of children in a safe dry place. Never wrap the power cords around the hair dryer & straightener as this will cause the cords to wear prematurely and break. Handle the cords carefully for long life and avoid jerking, twisting or straining especially at the power plug and hair dryer & straightener connections. If the cords become twisted in use, periodically straighten them.

Note: Store your straightener with the plates locked. This will ensure that the plates are protected and prevented from being easily scratched.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

①New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2018 Spectrum Brands Inc.

Rev. 11/18

Part No. T22-7000741

Type: D13A (Hair Dryer) & S9500 (Straightener)

