

**REMINGTON®**  
EST. NEW YORK 1937

# **CURL & STRAIGHT CONFIDENCE HAIR DRYER**



**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**3 YEAR WARRANTY**

**D5706AU**

## IMPORTANT SAFEGUARDS

**Warning: When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.  
Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.**

- An appliance should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy.  
Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner.
- There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- Never block the air openings of this hair dryer or place it on a soft surface, such as a bed or couch, where the air openings may become blocked. Keep the air openings free of lint, fluff and hair.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.
- Please check the voltage ratings on the product prior to use to ensure it matches the voltage of the local area.

## **SAVE THESE INSTRUCTIONS**

# D5706AU CURL & STRAIGHT CONFIDENCE HAIR DRYER

## USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® The Curl & Straight Confidence Hair Dryer. It features 2200 watts of power and Tourmaline Ceramic Technology. With its unique curling concentrator and the 45mm round brush, this hair dryer will allow you to achieve the salon blow dry results quickly with ease.



### KEY PARTS

- |                                          |                                            |
|------------------------------------------|--------------------------------------------|
| 1. Air outlet with ceramic coated grille | 8. Heat settings                           |
| 2. Air inlet grille                      | ☺ Low heat                                 |
| 3. Removable filter                      | ☺☺ Medium heat                             |
| 4. Cool shot                             | ☺☺☺ High heat                              |
| 5. Turbo boost function                  | 9. Hang loop                               |
| 6. Ion indicator light                   | 10. Curling concentrator                   |
| 7. Speed settings                        | 11. Diffuser                               |
| 0 Off                                    | 12. Extra wide slim smoothing concentrator |
| ☺ Low speed                              | 13. 45mm round brush                       |
| ☺☺ High speed                            |                                            |

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture.

Note: This hair dryer is not suitable for use on synthetic wigs or hair extensions.

## **TOURMALINE CERAMIC TECHNOLOGY**

Tourmalines are precious gemstones with highly unique properties. Heating crushed tourmalines results in the powerful natural emissions of ions and far-infrared heat. The Pearl Shine Hair Dryer features Tourmaline Ceramic Technology with 4x more Tourmaline\* to provide a natural source of ions to reduce frizz and create a smooth and shiny finish.

## **IONIC CONDITIONING TECHNOLOGY**

The Curl & Straight Confidence Hair Dryer provides 90% more ions for less frizz\*.

## **COOL SHOT**

This hair dryer is equipped with a cool shot button that is used to set your hairstyle. Press the cool shot button upwards to rapidly cool and set your hair once it has been styled.

## **TURBO BOOST FUNCTION**

This hair dryer features a turbo boost function, which is used to increase airflow speed by 10%\*\* . Move the switch to the left to turn the turbo function on to rapidly dry your hair.

## **QUICK DRYING**

Select the high heat and high speed setting and roughly dry your hair. Use a brush or your hand to shake out excess moisture whilst drying and keep the hair dryer in constant motion.

## **CURLING WITH THE CURLING CONCENTRATOR**

For best results, dry your hair as normal until it is about 70% dry. Then turn off your dryer and section your hair into manageable areas. Fit the curling concentrator to the front of the hair dryer then twist clockwise to lock in place. Take care when you do this because the concentrator can become hot in use. Starting on the lower areas of hair, working on one section at a time brush through with the round brush and then wrap hair around the barrel starting at the ends.

\*vs. standard Remington dryer

\*\*vs. standard Remington dryer DC motor

Select the high heat and low speed setting using the speed and heat selector switches. The shape of the curling concentrator maximises the air and heat coverage around the brush. For best results seat the brush, with hair wrapped, directly within the concentrator until the section is 100% dry. When the section is dry, press the cool shot button upwards and hold it for a few seconds to set your curl in place.

Switch off the dryer and carefully unwind the section of hair from the brush.

## **STRAIGHTENING WITH THE EXTRA WIDE SLIM SMOOTHING CONCENTRATOR**

For best results, dry your hair as normal until it is about 70% dry. Then turn off your dryer and section your hair into manageable areas. Fit the extra wide slim smoothing concentrator to the front of the hair dryer then twist clockwise to lock in place. Take care when you do this because the concentrator can become hot in use. Starting on the lower areas of hair, working on one section at a time brush through with the round brush.

Using the round brush, follow the concentrator from above, while slowly gliding down each section of hair from roots to tips. Once bottom layers have been straightened, then straighten the midsection and complete by straightening top layers.

## **USING THE DIFFUSER**

This hair dryer comes with a professional style diffuser. This diffuser dries hair fast without blowing out the style. Perfect for naturally curly, permed and fine hair or to give your hair a boost of volume.

Note: Always select the lowest heat setting when using the diffuser, as damage may occur to the diffuser if higher heat settings are used.

## **DRY YOUR HAIR USING THE DIFFUSER**

Dry your hair beginning at the roots and using circular motions, always moving in the same direction. Use the diffuser with the hair dryer set at the low heat and low speed. Continue drying, keeping the hair dryer at a 90-degree angle from the scalp. This will lift the roots away from the scalp giving your hair volume. Finish by drying the ends.

## **ADD VOLUME TO YOUR HAIR USING THE DIFFUSER**

To add volume to your hair, tilt your head upside down and dry so that the roots fall away from your scalp. Use the diffuser with the hair dryer set at low heat and low speed. Point the hair dryer at the roots to give your hair maximum volume. Continue the process to the ends of your hair.

## **USER INSTRUCTIONS**

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet openings. In the event that the hair dryer stops during use turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet openings are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

## **MAINTENANCE**

Your hair dryer is designed for household use and is virtually maintenance free. No lubrication is needed. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

To maintain peak product performance, it is important to clean the air inlet grille at the back of the hair dryer. To remove the air inlet grille, grasp the air inlet grille retaining ring with your hand and twist it anti-clockwise until it unlocks. Pull it away from the hair dryer. It can now be cleaned with a soft brush or a vacuum cleaner. Once clean, take the air inlet grille retaining ring and position it so the lugs on the ring are aligned with the notches on the side of the dryer. To lock, turn the air inlet grille retaining ring clockwise. The exterior of the hair dryer can be cleaned by wiping it with a damp cloth.

## STORAGE

When not in use, always unplug the hair dryer from the power outlet. Allow the hair dryer to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the hair dryer since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it.

You may also use the hang loop to store the hair dryer within convenient reach, ensuring that water cannot be splashed on to it when it is hung up.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements. Any product purchased and used commercially carries a limited 90 Day Warranty.

# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON**<sup>®</sup>  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 05/19

Part No. T22-7001075

Type: D14A

