

Size: 19.685" x 17.5"

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for operation.
- To switch off the appliance turn Toast/Timer knob to "OFF" position.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
- As they may create a fire or risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- Touch electrical parts, creating a risk of electric shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and Use extreme caution when removing tray or disposing of hot grease.
- Do not use appliance for other than intended use.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not use outdoors.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- Unplug from outlet when not in use and before cleaning. Allow to cool before plugging in or taking off parts.
- Children should be supervised to ensure that they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Read all instructions.

When using electrical appliances, basic safety precautions should always be followed including the following:

IMPORTANT SAFETY INSTRUCTIONS

Please Read and Save this Use and Care Book.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.

- 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

ELECTRICAL CORD

Repair should be done only by authorized service personnel.

Warning: this appliance is equipped with a tamper-resistant screw to prevent attempt to remove the outer cover. There are no user-serviceable parts inside.

TAMPER-RESISTANT SCREW

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature.

Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

GROUND PLUG

This product is for household use only.

SAVE THESE INSTRUCTIONS.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Note: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

BAKE FUNCTION

1. Set temperature control dial to the desired setting from 200 °F to 450 °F.
2. Turn time selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself. Be sure to use a kitchen timer.)
3. The indicator light comes on and will remain lit during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.
5. Once oven has preheated, open oven door and insert food. Close oven door.

Note: You can cook your food two ways:

- In the bake pan/drip tray placed on the slide rack (), or
- Directly on the slide rack with the bake pan/drip tray inserted on the rack support rails underneath the slide rack to catch drippings.

Note: Be sure food does not extend past the outer limits of the bake pan to prevent grease dripping onto the heating elements.

- Use a metal, glass or ceramic baking dish placed on the slide rack. (Be sure food or baking dish does not come within 1½ inches of the top heating elements.)

The first time you use the oven, follow the manufacturer’s or recipe directions and check for doneness at minimum suggested cooking time. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out.

If not using the oven timer, turn the oven to OFF once cooking cycle is complete.

Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.

Unplug appliance when not in use.

BROIL FUNCTION

Note: When broiling, preheat oven for 10 minutes.

1. Turn the temperature selector to Broil.
2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails.
3. Set the timer to desired number of minutes including preheat time or to STAY ON if you want to control cooking time or need to cook your food longer than 30 minutes.
4. Place food on the baking pan slide rack/broiling rack.

Note: Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.

Important: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

Cook food according to recipe or package instructions and check at minimum time to see if it is done.

When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF position. The power indicator light goes off.

Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.

Unplug appliance when not in use.

BROILING CHART

Cooking times are approximate and should be adjusted to individual preferences.

CAUTION

THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.

IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.


TOAST FUNCTION

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to TOAST position.
2. Open oven door.
3. Insert slide rack.
4. Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.
5. Turn toast shade selector knob to 10 and then turn back to desired toast shade.
6. For best results, on first toasting cycle set the toast selector knob to medium which will be midway between light and dark setting, then re-adjust for next cycle to lighter or darker to suit your preference.
7. The on indicator light comes on and remains on until toasting cycle is complete.
8. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
9. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
10. Unplug appliance when not in use.

Important: Bake pan/drip tray (Part #T01420B-01), T01342W-01) (Part #T01420B-03, T01342W-03) (Part #T01420B-03, T01342W-03) (Part #T01420B-02, T01342W-02) (Part #T01420B-02, T01342W-02) swing-down crumb tray (under unit) removable parts

Note: † indicates consumer replaceable/removable parts

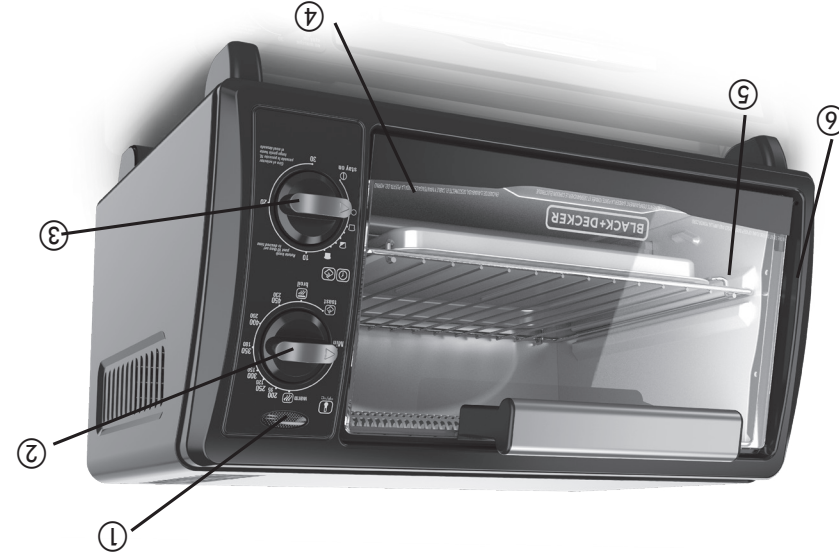

Product may vary slightly from what is illustrated.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in sudsy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.
4. To open crumb tray, tip back oven, push the crumb tray knob away from you then down. Wipe with a dampened cloth or paper toweling and dry thoroughly. To close, pull the crumb tray knob forward, swing the crumb tray closed, and then pull knob in to lock into place before operating the oven.

EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. dry thoroughly.

COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer’s instructions. Be sure the top edge of the container is at least 1½" (3.81 cm) away from the upper heating elements.

¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

¿Cómo se puede obtener servicio?

- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

¿Qué aspectos no cubre esta garantía?

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.

¿Por cuánto tiempo es válida la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

¿Qué relación tiene la ley estatal con esta garantía?

- Esta garantía le otorga derechos legales específicos y el consumidor podría tener otros derechos que varían de una región a otra.

BLACK+DECKER™

TOASTER OVEN HORNO TOSTADOR



MODEL/MODELO

T01342B-MX

722-9001396
2019/05/09

Made in China
Hecho en China

