

PLEASE READ AND SAVE THESE INSTRUCTIONS.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put blender base, cord or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment. Or, call the appropriate toll-free number listed on the cover.
- The use of attachments, including canning jars, not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let the plug or cord hang over the edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter assembly blades on base without the jar properly attached.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

## SAVE THESE INSTRUCTIONS

**This product is for household use only.**

#### POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

#### ELECTRICAL CORD

The cord of this appliance was selected to reduce the possibility of tangling in or tripping over a longer cord. If more length is needed, use an extension cord rated no less than 15-amperes. (For 120 volts rated products, use an extension cord rated no less than 6-amperes). When using an extension cord, do not let it drape over the working area or dangle where someone could accidentally trip over it. Handle cord carefully for longer life; avoid jerking or straining it at outlet and appliance connections.

#### TAMPER-RESISTANT SCREW

**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

#### HOW TO USE

This unit is for household use only.

##### GETTING STARTED

- Remove all packing material and any stickers from the product.
- Wash all removable parts as instructed in CARE AND CLEANING section of this manual.

##### BLENDER JAR ASSEMBLY


- Turn blending jar upside down and place flat on counter top or work surface.
- Place the blade assembly in bottom opening of the jar with blades down.
- Place jar base onto jar and rotate clockwise until it is tight (A).
- Turn assembled jar right side up.
- Place lid with lid cap on blender jar.
- Uncoil power cord from storage area under the base.
- Blender is now ready for use.



##### USING YOUR BLENDER


 
**Important:** Appliance should always have lid in place when in use.

**Caution:** Do not place blender jar onto base when motor is running.

- Make sure appliance is  (OFF).
- Place foods to be blended into jar.
- Place lid on jar; make sure lid cap is in place.
- Plug power cord into outlet.

**Note:** When in use, do not leave blender unattended. When using hard foods, such as ice or cheese, keep one hand on the lid to keep blender in place.




 
 

- Select the speed that best suits your desired task.

- For blending tasks – or when blending thick mixtures – use the PULSE button for several seconds, then release. Repeat until food has desired consistency. Releasing the  (PULSE) button automatically turns the blender off (B).
- Open the lid cap to add ingredients while the blender is running and drop ingredients through the opening (C).
- Important:** Do not remove the lid while the blender is running.
- When finished, press the  (PULSE) (OFF) button. Make sure blades have completely stopped before attempting to remove the blending jar from the base.
- To remove the jar, grasp the handle and lift up.
- Remove lid to pour.
- Always unplug the appliance when not in use.

**INTELI-FUSE™** protection:

- Your blender comes with intelligent protection. The blender may overheat when blending extremely heavy loads or mis-operation. If this occurs, the blender will automatically shut off.
- Unplug the blender; wait 20 minutes and then resume use of the blender. DO NOT RETURN THE BLENDER.

 

##### BLENDING TIPS AND TECHNIQUES

- Cut food into pieces no larger than ¾” for use in the blender.
- When preparing foods that have several different kinds of ingredients, always add liquid ingredients first.
- We recommend using the Blender for 3 minutes of continuous use for 1 minute of rest for all your functions or speed.
- When ingredients splatter onto the sides of the jar or the mixture is very thick, press the  (PULSE) (OFF) button to turn appliance off. Remove the lid and use a rubber spatula to scrape down the sides of the jar and to redistribute the food, pushing food toward the blades. Replace the lid and continue blending.
- The lid cap holds up to 2 oz. of liquid and can be used as a measure when adding ingredients such as juices, milk, cream or liquor.
- When making bread crumbs make sure blender jar is completely dry.
- When using  (PULSE) function, use short bursts. Allow the blades to stop rotating between pulses.
- Do not use  (PULSE) for more than 2 minutes.
- Use the  (ICE CRUSH) button when preparing beverages that include ice cubes or anything frozen; this helps to produce a smoother texture.
- The  (PULSE) function is helpful when short bursts of power are needed, such as when preparing thick smoothies or milkshakes.
- It is helpful to begin the blending process on the lowest speed and then increase to a higher speed, if necessary.
- To stop blending at any time, press the  (PULSE) (OFF) button.
- When blending hot ingredients, remove the lid cap and then put it back partly open, with the opened side tilted away from you. Cover lid with a cloth to avoid splattering and only use the lowest speed. Do not blend more than 2 ½ to 3 cups at a time.

**DO NOT PLACE ANY OF THE FOLLOWING IN THE BLENDER:**

- Large pieces of frozen foods
- Tough foods such as raw turnips, sweet potatoes and potatoes
- Bones
- Hard salami, pepperoni
- Boiling liquids (cool for 5 minutes before placing in blending jar)

**OTHER DONT’S:**

- Do not operate blender without the lid on the blending jar.
- Do not store foods in the blending jar.
- Do not overfill the blender (the blender is more efficient with less rather than more).
- Do not put boiling liquids into blender.
- Do not use  (PULSE) for more than 10 seconds at a time; release the  (PULSE) (OFF) button regularly, allow the blender to rest briefly, then continue.



- Do not run blender for longer than 1 ½ minutes at a time. Scrape down sides of blending jar, if necessary, and continue blending.
- Do not use if blending jar is chipped or cracked.

**TASKS NOT RECOMMENDED FOR THE BLENDER:**

- Beating egg whites
- Mixing dough
- Mashing potatoes
- Grinding meats

#### CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

 
CLEANING

- Before cleaning, turn off and unplug the appliance.
- Lift the blending jar by the handle off the base turning slightly counterclockwise.
- Remove jar base by turning it counterclockwise until loose.
- Remove the blade assembly.

**Caution:** Blades are sharp, handle carefully.

- Remove lid and lid cap.
- Wash removable parts by hand or in the dishwasher. Place the jar on the bottom rack and the rest of the parts on the top rack only.

**Helpful Tips:**

- For quick cleanup, combine 1 cup hot water and a drop of liquid dish soap in the blending jar.
- Cover and blend on  CLEAN for about 30 seconds.
- Discard liquid and rinse thoroughly.

**Important:**

- Do not place the jar parts in boiling liquids.
- Do not immerse the base in liquid. Wipe the base with a damp cloth and dry thoroughly.
- Remove stubborn spots by rubbing with a damp cloth and nonabrasive cleaner.

**Note:** If liquids spill onto the base, wipe with a damp cloth and dry thoroughly. Do not use rough scouring pads or cleansers on parts or finish.

POR FAVOR LEA ESTE INSTRUCTIVOANTES DE USAR EL PRODUCTO.

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Cuando se utilizan aparatos eléctricos, siempre se debe respetar ciertas medidas de seguridad, incluyendo las siguientes:

- Por favor lea todas las instrucciones.
- A fin de protegerse contra el riesgo de un choque eléctrico, asegúrese que la base de la licuadora, el cable y el enchufe no puedan entrar en contacto con agua u otro líquido.
- Todo aparato eléctrico utilizado en la presencia de menores de edad o por ellos mismos requiere la supervisión de un adulto.
- Desconecte el aparato del tomacorriente cuando no esté en funcionamiento, antes de instalar o retirar las piezas y antes de limpiarlo.
- Evite el contacto con las piezas móviles.
- No se debe utilizar ningún aparato eléctrico que tenga el cable o el enchufe averiado, que presente un problema de funcionamiento o que esté dañado. Devuelva el aparato al centro de servicio autorizado más cercano para que lo examinen, reparen o ajusten o llame gratis al número que aparece en la cubierta de este manual.
- El uso de accesorios no recomendados por el fabricante del aparato, podría ocasionar fuego, descarga eléctrica o lesiones personales.
- Este aparato no se debe utilizar a la intemperie.
- No permita que el cable cuelgue del borde de la mesa ni del mostrador.
- Mantenga las manos y utensilios fuera del vaso cuando esté licuando para reducir el riesgo de lesiones graves a personas o daños a la licuadora. Una espátula se puede utilizar, pero debe usarse sólo cuando la licuadora no esté en funcionamiento.
- Las cuchillas tienen filo y se deben manejar con prudencia.
- A fin de evitar el riesgo de lesiones, nunca coloque el montaje de las cuchillas sobre la base sin antes ajustar bien la jarra.
- Siempre haga funcionar la licuadora con la tapa en su lugar.
- Para licuar líquidos calientes, se debe retirar el tapón del centro de la tapa.
- Este aparato se debe utilizar solamente con el fin previsto.
- Este aparato no está diseñado para ser usado por personas (incluido niños) con capacidad limitada física, mental o sensoriales disminuidas y falta de experiencia o conocimiento que les impida utilizar el aparato con toda seguridad sin supervisión o instrucción.

- Se debe asegurar la supervisión de los niños para evitar que usen el aparato como juguete.
- Cuidado, si vierte líquido caliente en el procesador/licuadora, el líquido puede ser expulsado debido a la súbita generación de vapor.

## CONSERVE ESTAS INSTRUCCIONES

**Este aparato eléctrico es para uso doméstico únicamente.**

#### ENCHUFE POLARIZADO (SOLAMENTE PARA LOS MODELOS DE 120V)

Este aparato cuenta con un enchufe polarizado (un contacto es más ancho que el otro). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en un tomacorriente polarizada en un solo sentido. Si el enchufe no entra en el tomacorriente, inviértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad.

#### CABLE ELÉCTRICO

El cable de este aparato fue escogido a fin de evitar el riesgo de enredarse o de tropezar con un cable de mayor longitud. Cualquier cable de extensión que se deba emplear, deberá estar calificado para nada menor de 15 amperios. (Para aquellos productos de 120 voltios, se deberá utilizar un cable de extensión no menor de 6 amperios). Cuando utilice un cable de extensión, asegúrese que no interfiera con la superficie de trabajo ni que cuelgue de manera que alguien se pueda tropezar. A fin de aumentar la vida útil del cable, no tire de él ni maltrate las uniones del cable con el enchufe ni con el aparato.

#### TORNILLO DE SEGURIDAD

**Advertencia:** Este aparato cuenta con un tornillo de seguridad para evitar la remoción de la cubierta exterior del mismo. A fin de reducir el riesgo de incendio o de choque eléctrico, por favor no trate de remover la cubierta exterior. Este producto no contiene piezas reparables por el consumidor. Toda reparación se debe llevar a cabo únicamente por personal de servicio autorizado.

**Nota:** Si el cordón de alimentación es dañado, debe sustituirse por personal calificado o en América Latina por el centro de servicio autorizado.

#### COMO USAR

Este producto es para uso doméstico solamente.

##### PASOS PRELIMINARES

- Retire todo el material de embalaje y las pegatinas.
- Lave todas las piezas desmontables siguiendo las instrucciones indicadas en la sección de CUIDADO Y LIMPIEZA de este manual.


##### ENSAMBLAJE DE LA JARRA

- Ponga la jarra boca abajo y colóquela plana sobre la encimera o la superficie de trabajo.
- Coloque las cuchillas y la junta en la apertura del fondo de la jarra, con las cuchillas hacia abajo.
- Ponga la jarra en la base de la licuadora y gire en sentido horario hasta que quede herméticamente colocada (A).
- Una vez ensamblada la jarra, póngala boca arriba.
- Coloque la tapa con el tapón en la jarra de la licuadora.
- Extraiga el cable de alimentación de su alojamiento situado bajo la base de la licuadora.
- La licuadora ya está lista para el uso.

**Important:** Licuadora debe tener siempre la tapa en su lugar cuando está en uso.

**Precaución:** No coloque la jarra en la base cuando el motor está en marcha.

##### USO DE LA LICUADORA

- Asegúrese de que el aparato esté apagado  (OFF).
  - Introduzca los alimentos que desee batir en la jarra.
  - Coloque la tapa y asegúrese de que el tapón esté en su lugar.
  - Enchufe el aparato en una toma eléctrica estándar.
- Nota:** Vigile la licuadora en todo momento durante el uso. Cuando vaya a utilizar alimentos sólidos como hielo o queso coloque una mano sobre la tapa para evitar que la licuadora se mueva.

- Seleccione la velocidad que mejor se ajuste a la función

