

Size: 19.685" x 17.5"

PROCESSED FOOD	SUGGESTED SETTING	SUGGESTED PROCEDURE
Smoothies - Juices	MAX SPEED 20 seconds	250g Carrot pieces (size 15mm x 15mmx15mm), 50g Beet and 450ml water. (if you prefer, pass the mixture in a fine sieve and add orange juice and honey)

BLENDING TIPS AND TECHNIQUES

1. Remove the jar lid or the Small measuring cup from the jar and place ingredients into the jar.
2. Do not exceed the maximum indicated level.
3. Place the jar lid with the measuring cup back onto the jar.
4. Set the control to Pulse for a few seconds, then release for quick or delicate blending tasks or for crushing ice. Releasing the pulse automatically turns the blender off.
5. Setting 1,2,3 will provide continuous blending until the Speed control knob is turned to the '0' position.
6. You can add further ingredients while blending through the hole of the measuring cup (especially for a small amount of liquid mixture).
7. After you have completed blending, turn the Speed control knob to the '0' position.

USING YOUR BLENDER

1. Be sure the knob is in the off '0' position.
2. Rotate the jar lid to left or right until the two ribs on the lid slide into the locking ribs on the jar.
3. Place the jar assembly on the main body and rotate clockwise to lock into place.
4. Now the blender is ready for use.

BLENDER JAR ASSEMBLY

- Remove and save literature.
- Remove all labels, tags and stickers attached to the body or jar.

GETTING STARTED

This product is for household use only.

How to Use

- Cut food into small pieces of approximately (2 cm) before adding to the blender.
- Do not overfill the blender jar above the indicated 1.5 L level.
- When ingredients stick or spatter along the sides of the jar, stop the blending action and remove the lid. Use a rubber spatula to push food toward the blades. Replace the lid, and then continue blending.
- When preparing foods with several different kinds of ingredients, always add liquids first and then add dry ingredients.
- Always ensure seeds are removed from fruit and bones from meat as these can damage the blades.
- When making bread crumbs, chopping nuts or grinding coffee beans make sure blending jar is completely dry. Do not run for longer than 30 seconds.
- When blending hot ingredients, always let them cool at least 5 minutes. Begin blending on the lowest speed with the lid measuring cup off to allow steam to escape. Cover the lid cup hole with a towel or hot pad.

Care and Cleaning

1. For quick cleanup, combine 1 cup hot water and a drop of liquid dish soap in the blending jar.
2. Place the lid with lid cup securely on jar and blend on the Pulse function for 1-2 seconds and release. Repeat 3-4 times.
3. Then remove the jar and rinse it under running water.
4. For thorough cleaning, wash the Jar lid, the Small measuring cup, and the jar in warm soapy water.
5. **Caution:** Take care when cleaning the blades as they are extremely sharp.

Note: Do not clean any part of the mentioned above in the dishwasher.

TO CLEAN THE BLENDER BASE

Use a damp, soft sponge with detergent and wipe over the blender base. Do not use rough scouring pads or cleansers on parts or finish.

Note: Never immerse the blender base in water.

STORAGE

1. For convenient storage, wrap the cord around the feet on the bottom of the blender base.
2. Store in a cool and dry place.



1. Plastic jar (48-oz./1.5L)
2. Lid cap
3. Lid for glass jar
4. Handle
5. Blade assembly
6. Jar base
7. Blender base
8. Rotary control

Product may vary slightly from what is illustrated.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty

(Applies only in the United States)

What does it cover?

- Any defect in material or workmanship provided; however, liability will not exceed the purchase price of product.

For how long?

- Two years after date of purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Blades are sharp. Handle carefully.
- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the blender is not running.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

WARNING: This appliance is equipped with a tamper-resistant screw to prevent attempt to remove the outer cover. To reduce the risk of fire or electric shock, do not repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent attempt to remove the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

Sello del Distribuidor:	Comercializado por: Spectrum Brands de México SA de CV Autopista México Querétaro No.3069-C, Oficina 004 Col. Centro Industrial Tlalnepantla CP 54030 Municipio Tlalnepantla, Estado de México
Fecha de compra:	Servicio y Reparación Art. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc
Modelo:	Servicio al Consumidor, Venta de Refacciones y Accesorios 01 800 714 2503
Código de fecha / Date Code / Le code de date:	
500 W 220-240 V ~ 50 Hz	

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER y los logos y nombres de productos de BLACK+DECKER son marcas registradas de The Black & Decker Corporation, usados bajo licencia. Todos los derechos reservados.

Made in Brazil
Fabricado en Brasil

© 2018 The Black & Decker Corporation and Spectrum Brands, Inc.
Middleton, WI 53562


Importado y Distribuido por:
RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Piso# 3
C1425FUG) C.A.B.A. Argentina
C.U.I.T NO. 30-70706168-1

Importado por / Imported by:
Spectrum Brands de México SA de CV
Autopista México Querétaro No.3069-C,
Oficina 004
Col. Centro Industrial Tlalnepantla CP
54030
Municipio Tlalnepantla, Estado de México
Para atención de garantía marque:
01 (800) 714 2503

Importado por / Imported by:
Spectrumbrands En Chile,
Household Products Chile Ltda
Av. Del Valle 570, Ofic. 704
Ciudad Empresarial, Huechuraba
Santiago - Chile
Fono: (562) 2571 3700

Importado por / Imported by:
Spectrum Brands Colombia S.A.
Carrera 17 No.89-40
Bogotá, Colombia
Línea de atención al cliente:
018000510012

T22-9000783
2018/05/08

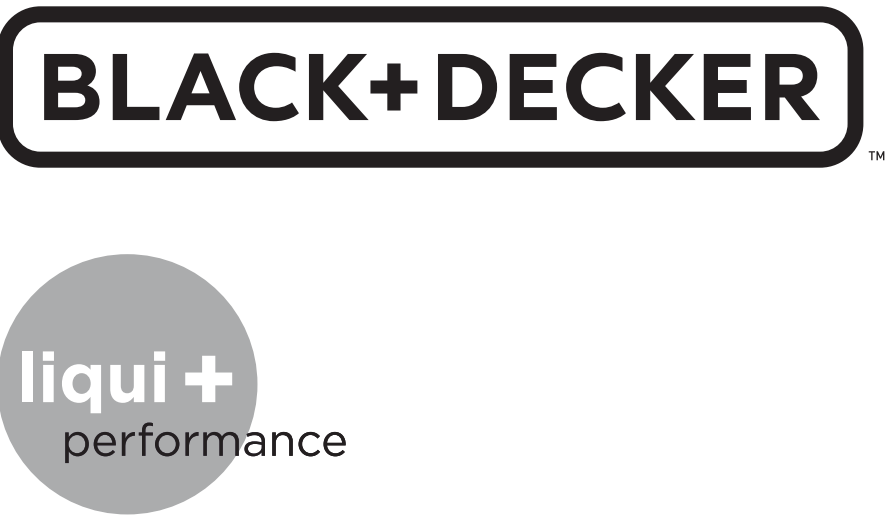

MODEL/MODELO

- BLX3-AR

SAVE THESE INSTRUCTIONS.

This product is for household use only.

