

**Size: 19.685" x 17.5"**

- Unlock workbowl by turning it counterclockwise and lift off base.
- Press the OFF/PULSE button and allow blades to stop revolving before removing cover. Twist cover toward (■) to remove.
- Replace food pusher in chute.
- Food can be added while processor is running; remove food pusher and insert food through the **from processor.**

**Important: Be sure chopping blade has completely stopped spinning before removing cover from processor.**

**Note:** Process foods for no more than a few seconds at a time. Pulsing produces excellent results and offers greater control.

- Select your desired speed (PULSE, LOW or HIGH).

**Important: Never use your fingers to direct food through the chute.**

- Place the wide-mouth feed chute and food pusher in place.
- Place cover on workbowl and lock into place by rotating clockwise.

**Caution: Blade attachments are very sharp. Use caution when handling and storing.**

- Hold chopping blade by center shaft and insert onto center post.

#### CHOPPING IN THE WORKBOWL

- Lock workbowl into position.
- Turn workbowl upside down.
- Place the wide-mouth feed chute on top of the cover with the small tab to the right of the workbowl's handle. Turn clockwise until it clicks into position over the handle.
- Insert the food pusher into the central tube of the wide-mouth feed chute. Turn clockwise to lock in place. The pusher is used to guide food through the feed chute and can be removed when adding liquid or additional foods while the processor is running. To remove, turn counterclockwise.

**Important: For your Protection this appliance has an interlock system. The processor will not operate unless the workbowl, cover and wide-mouth feed chute are properly locked in place.**

- Place cover over workbowl with the small latch to the right of the workbowl's handle.
- Hold feed chute of workbowl cover and rotate cover clockwise until cover locks into place.

#### Locking Cover

- Hold handle and rotate workbowl clockwise toward the lock symbol (■) until it clicks firmly into place. Be sure to lock the workbowl in place before attaching the blades and cover.
- Attach center post to workbowl on the base with handle turned to the right of the locking mechanism over the unlock symbol (■).

#### Locking Large Workbowl in Position

- Return to its original position, place center post into smaller opening in bottom of workbowl and turn counterclockwise until tabs snap into place.
- Turn the bowl upside down.
- Grasp the clear outer tabs and turn the center post clockwise until the lower tabs are free. Lift the post out.

#### Inserting / Removing Center Post

#### ASSEMBLING THE PROCESSOR

- Select a level, dry countertop where the appliance is to be used, allowing air space on all sides to provide proper ventilation for the motor.
- Wash removable parts as instructed in CARE AND CLEANING section.

**They are very sharp.**

**Important: Handle chopping blades and slice/shred disc carefully.**

- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.

#### GETTING STARTED

This product is for household use only.

## How to Use

**Note:** Remove bowl from appliance before removing blade to prevent food from leaking through the center opening of the bowl.

- Carefully remove chopping blade.
- Unplug appliance when not in use.

#### SLICING / SHREDDING IN LARGE WORKBOWL

- Lock workbowl into position.
- Place disc stem onto center post in workbowl.
- Carefully place slice/shred disc on stem with appropriate side up (depending on work to be done).
- Place cover on workbowl and lock into place by rotating cover clockwise.
- Fill feed chute with food. Select regular opening or wide-mouth, depending upon size of food to be processed. Position food pusher over food.
- Select PULSE, LOW or HIGH; press firmly on food pusher to guide food through processor, but do not force it.

**Note:** Heavy pressure on the pusher does not speed the work; use the pusher only as a guide. Let the processor do the work.

- When finished, press OFF/PULSE and wait for disc to stop rotating before removing cover. Twist cover toward (■) to remove.
- Carefully remove slice/shred disc. Unlock workbowl by turning it counterclockwise and lifting it off the base.

- Unplug appliance when not in use.

#### USING YOUR BLENDER

##### BLENDING JAR ASSEMBLY

- Turn blending jar upside down and place flat on counter top or work surface.
  - Put the gasket on top of the blade assembly. Place the blade assembly with gasket in bottom opening of the jar with blades down.
  - Place jar base onto jar and rotate clockwise until it is tight.
  - Turn assembled jar right side up.
  - Place lid with lid cap in place on blending jar.
  - Place jar on power base with tab on base slightly to the right of the locking mechanism and rotate clockwise until blender locks into place.
- Blender is now ready for use.

#### BLENDER

- Make sure appliance is OFF.
- Place foods to be blended into jar.
- Place lid on jar; make sure lid cap is in place.
- Plug power cord into standard electrical outlet.
- Note:** When in use do not leave blender unattended. When using hard foods, such as ice, nuts and coffee beans, keep one hand on the lid to keep blender in place.
- Select the speed that best suits your desired task.

**Note:** For blending tasks such as grinding coffee beans or nuts, or when blending thick mixtures, use the PULSE button for several seconds; then release. Releasing the PULSE button automatically turns the blender off.

- Open the lid cap to add ingredients while the blender is running, and drop ingredients through the opening.
- Note:** Do not remove the lid while the blender is running.
- When finished, press the OFF/PULSE (O/(P)) button.
- To remove the jar, using thumb and forefinger, push tab on blender base to the right to release the locking mechanism.
- Grasp the handle of the blending jar and lift up.
- Remove the lid to pour.

- The motor of the processor will run as long as the OFF/PULSE button is held down.
- The OFF/PULSE button must be pressed and held for the appliance to operate in PULSE mode. When released, the appliance stops.
- The OFF/PULSE button must be pressed and held for the appliance to operate in PULSE mode. When released, the appliance stops.
- Use PULSE for short processing tasks. This lets you control the size and uniformity of and unplugged when not in use.
- Processor should be stored in OFF position control the size of the foods, from coarse to fine.
- Pulsing gives better control when chopping, mixing and blending foods. You can fall to the bottom of the workbowl.
- Press the button and then release to allow the blades to stop running and the food to fall to the bottom of the workbowl.

#### CONTROLS

The controls are located on the front of the base. Press PULSE, HIGH or LOW to select a function (see directions below).

- Lid cap with measurement units (Part # FP2650S-12)
- Lid (Part # FP2650S-13)
- Handle (Part # FP2650S-14)
- 6-cup (11.83m) glass blending jar (Part # FP2650S-16)
- Blade assembly (Part # FP2650S-16)
- Jar base (Part # FP2650S-17)
- Gasket (Part # FP2650S-15) (not shown)



Product may vary slightly from what is illustrated.

## SAVE THESE INSTRUCTIONS.

Sello del Distribuidor:	<b>Comercializado por:</b> Spectrum Brands de México, SA de CV. Autopista México Querétaro No 3069-C Oficina 004 Colonia San Andrés Atenco, Tlalnepantla Estado de México, C.P. 54040 México. Teléfono: (55) 5831 – 7070
Fecha de compra:	<b>Servicio y Reparación</b> Art. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc <b>Servicio al Consumidor,</b> Venta de Refacciones y Accesorios 01 800 714 2503
Modelo:	

Código de fecha / Date Code	600 W 220 V~ 50 Hz
-----------------------------	--------------------

© 2016 The Black & Decker Corporation and Spectrum Brands, Inc.  
Middleton, WI 53562

Made and Printed in People's Republic of China  
Fabricado e Impresso na República Popular de China

**IMPORTADO POR / IMPORTED BY:**  
**RAYOVAC ARGENTINA S.R.L.**  
Humboldt 2495 Piso# 3  
C1425FUG) C.A.B.A. Argentina  
C.U.I.T No. 30-70706168-1

**IMPORTADO POR / IMPORTED BY:**  
**SPECTRUM BRANDS DE MÉXICO, SA DE CV.**  
Autopista México Querétaro  
No 3069-C Oficina 004  
Colonia San Andrés Atenco, Tlalnepantla  
Estado de México, C.P. 54040  
México. Teléfono: (55) 5831 – 7070

Para atención de garantía marque:  
01 (800) 714 2503

BLACK + DECKER and the BLACK + DECKER Logo are registered trademarks of The Black & Decker Corporation, or one of its affiliates, and used under license.

BLACK + DECKER y el logo BLACK + DECKER son marcas registradas de The Black & Decker Corporation o de una de sus compañías afiliadas y se utilizan bajo licencia.

- Be careful! If hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Children should be supervised to ensure that they do not play with the use of the appliance by a person responsible for their safety.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance.
- Do not attempt to defeat the cover interlock mechanism.
- Never feed food by hand. Always use food pusher.
- Be certain cover is securely locked in place before operating appliance.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- Blades are sharp. Handle carefully.
- processor is not running.
- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used, but must be used only when the food Do not let cord hang over edge of table or counter.
- Do not use outdoors.
- cause fire, electric shock or injury.
- The use of attachments, not recommended or sold by the manufacturer may on the cover of this manual.
- electrical or mechanical adjustment. Or, call the appropriate toll-free number appliance to the nearest authorized service facility for examination, repair or electrical rating not less than the appliance. When using an extension cord, do not let tripping over a longer cord. If more length is needed, only extension cords having an electrical rating not less than the appliance.

- The cord of this appliance was selected to reduce the possibility of tangling in or tripping over a longer cord. If more length is needed, only extension cords having an electrical rating not less than the appliance. When using an extension cord, do not let it drape over the working area or dangle where someone could accidentally trip over it.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction's, or is dropped/damaged in any manner. Return to avoid contacting moving parts.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Read all instructions.

When using electrical appliances, basic safety precautions should always be followed, including the following:

**IMPORTANT SAFETY INSTRUCTIONS**

Please Read and Save this Use and Care Book.

# BLACK+DECKER™

Model/Modelo: FP2620S-AR

## 10-CUP FOOD PROCESSOR PROCESADOR DE ALIMENTOS DE 10 TAZAS



T22-5001739

2016/4-22-72E/S

