

Size: 19.685" x 17.5"

1. Turn the temperature selector to the desired setting and lock the steam button in the DOWN position. For extended periods of dry ironing, empty the water from the iron.
2. Turn the temperature selector between settings 5 and 7.
3. Unlock the steam button to the UP position. If steam does not start, gently bump the soleplate on the ironing board a few times. If water drips from vents, turn the selector to a higher setting.

DRY IRONING

1. Be sure there is water in the water tank.
2. Turn the temperature selector to a higher setting.
3. Unlock the steam button to the UP position. If steam does not start, gently bump the soleplate on the ironing board a few times. If water drips from vents, turn the selector to a higher setting.

STEAM IRONING

- As soon as you pick up the iron, it will start heating again. Wait for iron to reheat completely before resuming operation.
 - Once the iron reaches appropriate temperature, it will turn off after 30 seconds of inactivity if left on its soleplate or tipped over on its side. If left vertically on its heel rest, it will shut off after 8 minutes.
- The automatic shutoff feature in your iron works as follows:

3-WAY AUTOMATIC SHUTOFF

1. When finished ironing, place iron on its heel rest, turn temperature selector to OFF and unplug the iron.
2. Once you determine the fabric type, set the temperature selector to the appropriate setting for your fabric. Once the iron reaches the selected temperature, the power indicator light will turn off. The light will cycle on an off during ironing.
3. When finished ironing, place iron on its heel rest, turn temperature selector to OFF and unplug the iron.

SELECTING TEMPERATURE

1. Use the fabric guide on the iron to select the proper temperature setting for the fabric.
2. Plug in the iron and let it stand on its heel rest. The power indicator light will turn on.
3. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.

FILLING WATER TANK

1. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.
2. Plug in the iron and let it stand on its heel rest. The power indicator light will turn on.
3. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.

How to Use

This product is for household use only.

GETTING STARTED

- Remove any labels, stickers or tags attached to the body or soleplate of the iron.
- Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.
- Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.
- Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.
1. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.
 2. Plug in the iron and let it stand on its heel rest. The power indicator light will turn on.
 3. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.

ANTI DRIP SYSTEM

The anti drip system prevents water spotting at low temperatures.

EMPTYING WATER TANK (OPTIONAL)

1. Unplug the iron and let it cool.
2. To release the water, hold the iron over a sink with the tip pointing down and to one side. Water will empty out of the water-fill opening.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

1. Move the temperature selector to OFF, unplug the iron and allow the iron to cool completely.
2. Wipe the soleplate and outer surfaces with a soft cloth or sponge dampened in water. Never use abrasives, heavy duty cleansers, or scouring pads that may scratch or discolor the iron.

STORAGE

1. Turn the temperature selector to OFF, unplug the iron and allow to cool completely.
2. Lock the steam button in the DOWN position. This helps keep the water valve clean and prevents water from entering the steam chamber, which could cause spitting during next use.
3. Store iron on its heel rest. Storing the iron on its soleplate can cause leaks or damage.
4. Wrap the cord.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.
- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?


- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

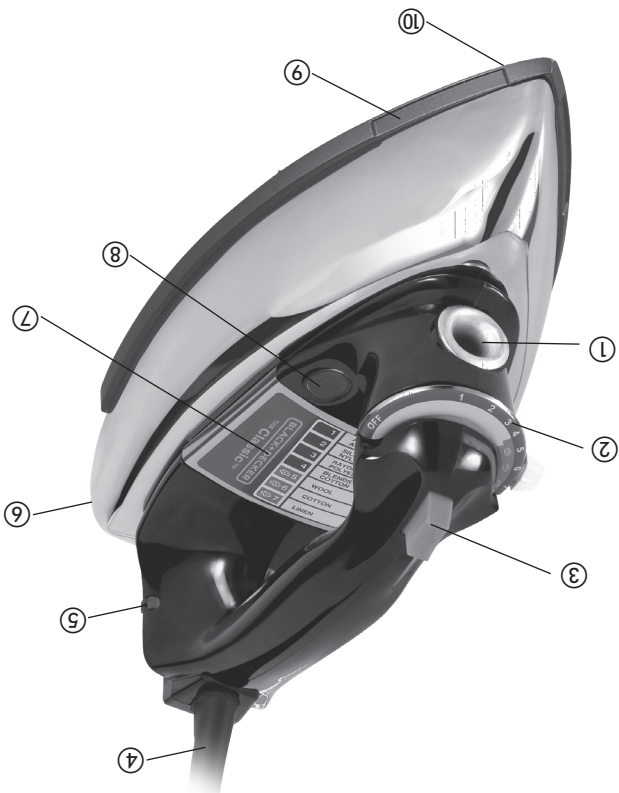

Product may vary slightly from what is illustrated.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a cord with an amperage equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange in water or other liquid.
- Read all instructions before using.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the water tank. Avoid rapid movement of iron to minimize hot water spillage.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a cord with an amperage equal to or greater than the max rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange in water or other liquid.
- Read all instructions before using.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the water tank. Avoid rapid movement of iron to minimize hot water spillage.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Do not attempt to modify the plug in any way. If it still does not fit, contact a qualified electrician.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

BLACK+DECKER

THE CLASSIC



When using your iron for the first time, you may notice water residue inside the unit. This is normal.

Cuando use su plancha por primera vez, notará que hay agua adentro de la plancha. Esto es normal.

MODEL/MODEL

○ F67E

○ F67E-50

IMPORTANT SAFEGUARDS

Please Read and Save this Use and Care Book.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or use the surge of steam—there may be hot water in the water tank. Avoid rapid movement of iron to minimize hot water spillage.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

