

Size: 19.685" x 17.5"

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.**
- Only use iron for its intended use.
- To avoid risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn iron off before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the iron when storing.
- Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
- Do not operate the iron with a damaged cord or in the event the iron has been dropped or damged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
- Close supervision is necessary for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down— there might be hot water in the reservoir.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
 - When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
 - The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The iron must not be left unattended while it is connected to the supply mains.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

the fabric.

DRY IRONING

- Turn the steam/dry selector t to dry (☞).
- Turn the fabric select dial to appropriate setting for your fabric.
- When Finished ironing, make sure to unplug the iron.

EMPTYING WATER TANK

Note: It is not necessary to empty the water after each use.

- Unplug the iron and let it cool.
- If you want to empty the water, hold the iron over a sink with the tip pointing down. Water will empty out the water-fill opening.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING OUTSIDE SURFACES

- Make sure iron is unplugged and has cooled completely.
- Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent.
- Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
- After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

AUTO CLEAN™ SYSTEM

Tip: To keep the steam vents free of any buildup, follow these instructions about once a month:

- Fill the water tank well below the MAX line. Plug in the iron.
- Turn the fabric select dial to 6 and stand the iron on its heel rest. Allow it to heat.
- Turn fabric select dial to min, unplug the iron and hold over a sink with the soleplate facing down.
- Press and hold the AUTO CLEAN™ button. Be careful, as hot water and steam will come out of the steam vents. Continue to hold the AUTO CLEAN™ button until all the water has emptied. If necessary, rock iron side-to-side and front-to-back.
- When finished, release the button, stand the iron on its heel rest and plug it in. Heat for about 2 minutes to dry out any remaining water.

STORING YOUR IRON

- Check that the fabric-select dial is set to min.
- Unplug the iron and let it cool completely.
- Store iron on its heel rest. Storing iron on its soleplate can cause leaks or damage.

- The plug must be removed from the socket-outlet before the water reservoir is filled with water
- To avoid a circuit overload, do not operate an iron on the same circuit with another high wattage appliance.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V models only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.



PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

- Spray nozzle**
- Water-fill opening**
- Steam Selector**
- Auto Clean Button**
- Spray button**
- Steam surge button**
- Handle**
- Pivoting cord**
- Heel rest**
- Fabric and temperature dial**
- Water tank**
- CeramicGlide™ Soleplate**

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

PLEASE READ AND SAVE THIS USE AND CARE BOOK.