


# REMINGTON®

## MAN TRIM BODY HAIR TRIMMER

### Use and Care Guide BHT250

Product Features
1. Main blade
2. Trim/shave blade
3. Washout port
4. On/Off Switch
5. Charging indicator
6. Hang loop
7. Fixed combs (2, 4, 6mm)
8. Adaptor (not shown)

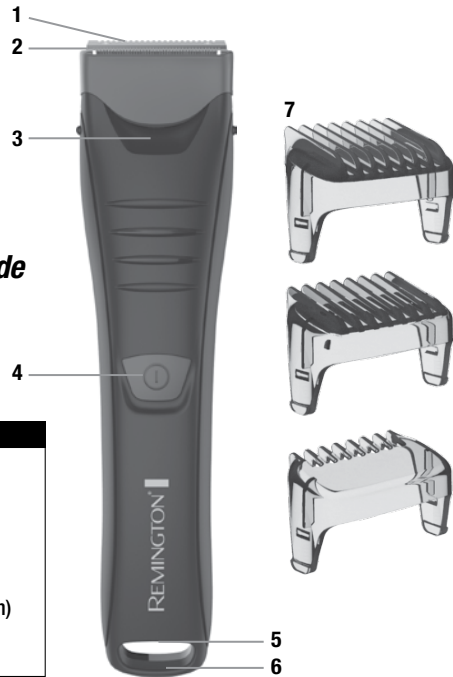

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

## DANGER

#### To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off trimmer before connecting to adaptor.
- Do not charge in shower or sink. The charger should not be exposed to water.

## WARNING

#### To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the trimmer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adaptor to outlet. To disconnect, turn all controls to OFF, then remove adaptor from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

## SAVE THESE INSTRUCTIONS

### Before Using

**Note:** Fully charge your trimmer 4 hours before using for the first time. Please refer to the charge times shown below.

- Ensure the product is switched off.
- Connect the product to the adaptor and then to the power outlet.

### Charge Level Indicators

Charge Level	Indicator
Charging	LED will show
Fully Charged	LED will show

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.

**Note:** To preserve the life of your batteries, let them run out every 6 months then fully charge.

### How To Use

**Note:** This product is for cordless use only. It cannot be used while plugged into a power outlet.

- Select the desired trim length prior to trimming by attaching one of the fixed combs.
- If trimming for the first time, always start with the longest length comb (6mm).
- Always ensure the trimmer is switched off before attaching or removing a comb.
- Switch the product on by pressing the on/off switch.

### USING TRIM/SHAVE BLADE

The Remington Man Trim features a dual sided blade. The rear side is the main trimmer blade. The front side is the trim/shave blade, offset behind a skin stretcher.

- First use the main trimmer blade to trim hair down to a short stubble.
- Flip the Man Trim around and use the trim/shave blade on pre-trimmed hair to trim to 0.2mm.

### CHANGING COMBS

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer blade. Slide the comb down the grooves until it clicks into place.
- To remove the comb, unclick the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.

**Note:** Using the trim/shave blade side of trimmer with no combs attached will trim down to 0.2mm. Using the main trimmer blade with no combs attached will trim hair to 1mm. Holding the main blade perpendicular to the skin will trim hair to 0.4mm.

### GROIN AREA TRIMMING

**Note:** Extra care should be used when trimming the groin or sensitive areas.

Take your time, using slow and even strokes.

- Choose and attach the desired fixed comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair around your groin, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.

## BODY TRIMMING

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, in the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.

## EDGING AND SHAPING OR CLOSE TRIM

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.



**This trimmer has been designed so that it may be used in the shower.**

**Note:** Do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower. Do not submerge the trimmer in water.

## TIPS FOR BEST RESULTS

- Avoid using lotions before using your trimmer.
- If you are trimming for the first time, start with the longest comb length.

## Cleaning, Care, and Maintenance

**Note:** Suitable for cleaning under water.

- To ensure long lasting performance clean after each use.
- Ensure the trimmer is switched off and unplugged from the power outlet.
- The easiest and most hygienic way to clean the trimmer is by rinsing the trimmer head under the tap after use while the blades are running.
- Allow water to run into and through the wash out port to help wash any hair trimmings from the inside out.
- Periodically oil the blades with a light grade machine oil. Use 1 to 2 drops, running blades to distribute.



## Product Disposal

The BHT250 contains a lithium-ion battery. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the Lithium-Ion battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

**CAUTION!** Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do no short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

### To Remove the Rechargeable Battery:

- The battery must be removed from the trimmer before it is scrapped.
- The trimmer must be disconnected from the power outlet when removing the battery.
- Ensure the trimmer is discharged of all power.
- Firstly, pry the TST (detail blade) head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely.

**U.S. residents:** To order accessories call 800-392-6544, visit your local retailer, or visit [RemingtonProducts.com](http://RemingtonProducts.com).

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

*No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.*

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

### Remington Guarantees Satisfaction After 30 Days!

### Remington Men's Shave and Groom 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® brand Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® brand Men's Shave and Groom product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.  
120 VAC 60 Hz  
® Registered Trademark of Spectrum Brands, Inc.

**Questions or comments:** Call 800-736-4648 in the U.S.

or visit [RemingtonProducts.com](http://RemingtonProducts.com)

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© 2016 Spectrum Brands, Inc. 11/16 16445-00

**Made in China. T22-0004559-A**