

REMINGTON®

ShortCut Pro Body Hair Trimmer

BHT6450

BHT6455

Use and Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off trimmer before attaching to adaptor.
- Do not charge in shower or sink. The adaptor should not be exposed to water.

WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the trimmer on your scalp.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store the charging adaptor in a moisture-free area. Do not store the appliance or adaptor in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the trimmer when storing.
- Do not use this appliance with a damaged or broken cutting blade, as injury may occur.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Product Features

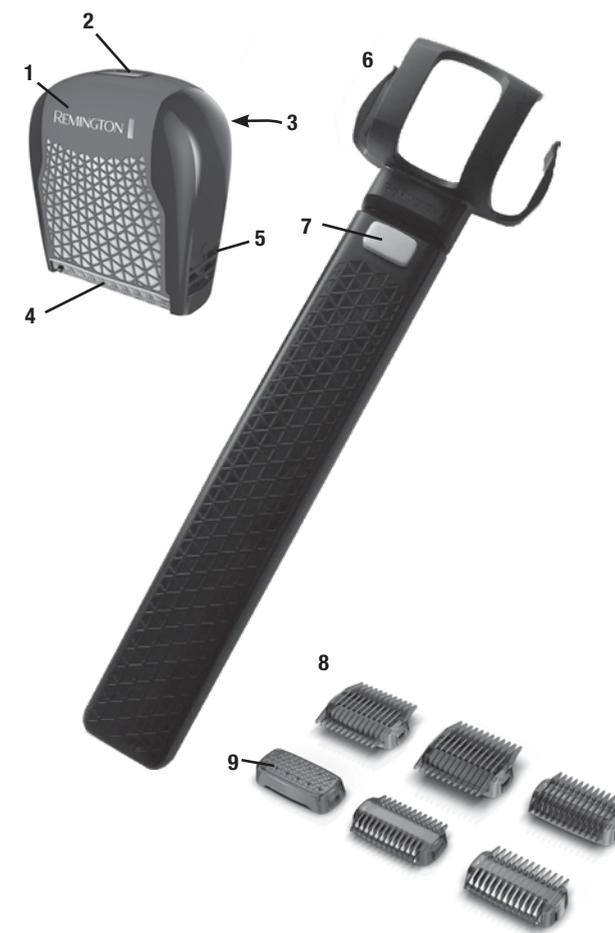

Product Features


- | | |
|------------------------------------|---------------------------------|
| 1 Trimmer Body | 9 Blade Guard |
| 2 On/Off Switch | 10 Charging adaptor (not shown) |
| 3 Charger connector/light | 11. Cleaning Brush (not shown) |
| 4 Dual-Sided Blade | 12 Oil (not shown) |
| 5 Washout port | |
| 6 Extendable Handle (BHT6455 only) | |
| 7 Extendable Handle Release Button | |
| 8 Fixed combs 2, 4, 6, 9, 12mm | |

Charging

Please refer to the safety instructions and warnings at the front of this manual before use.

Charge the device:

- Before using for the first time.
 - After it has not been used for a long time.
- Ensure the product is switched off.
 - Connect the charging adaptor to the charger connector on the trimmer (fig. A) and then to power outlet.
 - Charge for 4 hours.
 - With the charger attached, the charging light will flash during charging and stay on when fully charged.
- Run time from fully charged is up to 40 minutes.
 - To preserve the life of your batteries, let them run out every 6 months then fully charge.

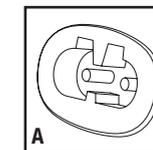

WARNING: Do not charge the trimmer in the shower or near water.
WARNING: Dry off any water and moisture before charging.

How to Use




The trimmer and combs are for wet/dry use and may be used in the shower or near water.

- Select the desired trim length prior to trimming by attaching one of the fixed combs.
 - If trimming for the first time, always start with the longest length comb (12mm).
 - Avoid using lotions before using your trimmer.
- Switch your trimmer on by pressing the on/off switch.
 - Stretch the skin with your free hand so the hairs stand upright.
 - Use short linear strokes.

CHANGING ATTACHMENTS

- Always ensure the trimmer is switched off before attaching or removing a comb.
- To attach a comb, center it over the main blade and push down until it clicks (fig. B).
- To remove the comb, unclick the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.

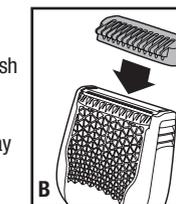

BODY TRIMMING

- Place your trimmer at a slight angle, following the angle of the comb teeth.
 - Slowly slide the trimmer through the hair, in the direction of hair growth.
- Longer/thicker body hair may take more passes from different angles.
 - If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
 - For closer more precise shaping, remove the comb.

TRIMMING WITHOUT A COMB

Your trimmer has been designed to trim any length of body hair to a length of 0.2 mm when it is used without a comb for a 'shaven' look.

EDGING AND SHAPING OR CLOSE TRIM

- Remove the trimmer comb attachment.
- Hold the trimmer so the blade is at a slight angle to your skin and gently press down.
- Using short, linear strokes slowly slide the trimmer through the hair, against the direction of hair growth.

Extendable Handle (BHT6455 only)

This body hair trimmer can be used with a compatible extendable handle to trim hard-to-reach areas such as the back.

TO ASSEMBLE

The extendable handle arrives in two pieces, which need to be assembled before the first use. Once assembled, the handle cannot be disassembled.


1. Align base of the trimmer holder with the top of the handle.
2. Push down on the holder until it snaps into place (fig. C).



TO ADJUST HANDLE LENGTH

The handle has five adjustable length settings to choose from.

1. To lengthen the handle, press the yellow button below the holder and slide the handle out until it locks into your selected length. (fig. D)
2. To shorten the handle, press the yellow button below the holder and push the handle down until it locks into the selected length.

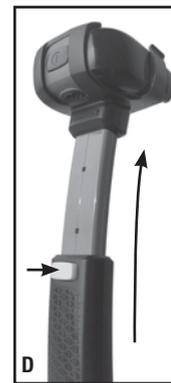

TRIMMING WITH THE HANDLE


1. To attach the trimmer, slide the top of the trimmer into the holder to align with the base. (fig. E)
2. Push down on the trimmer to lock it into the arms of the holder and "click" into place. (fig. F)
3. Turn the trimmer on and use the handle to gently glide the trimming blade across the skin in a slow, sweeping motion. For best results, make sure the blade or comb is at a slight angle to the skin.
4. To remove the trimmer, pull out on one arm of the holder and lift up on the trimmer.



Cleaning, Care, and Maintenance

The trimmer can be used in the shower. It is recommended to dry off excess water and moisture after each use.

- Clean after each use to ensure long lasting performance.
- Ensure the appliance is unplugged from the power outlet.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running. (fig. G)
- Allow water to run into and through the washout port to help wash any hair trimmings from the inside out.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

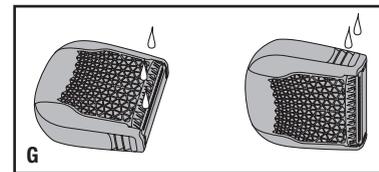

Battery Disposal

The BHT6450 and BHT6455 contain lithium-ion batteries. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the Lithium-Ion battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do no short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

We strongly recommend that a professional removes the rechargeable battery. Parts of the case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
 2. Use an appropriate tool to pry off the two black side covers.
 3. Remove the four screws at either side of the case then separate the two halves of the case.
 4. Remove the screws that secure the motor assembly to the case. Lift out the complete assembly.
 5. Remove the two screws securing the top half of the motor assembly.
 6. Pry open the three tabs then pry off the top half.
 7. Pry out the part which has the printed circuit board attached.
 8. The battery is located underneath the printed circuit board. The tabs at either end must be unsoldered before the battery can be removed.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the device once you have opened it.

U.S. residents: To order accessories call 800-392-6544, visit your local retailer, or visit RemingtonProducts.com.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability are assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. and Canada or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© Registered Trademark of Spectrum Brands, Inc.
© 2018 Spectrum Brands, Inc. 3/18 21583

100-240Vac, 50/60Hz TYPE: BHT6450
Made in China

T22-7000150-A