

REMINGTON®

CLEAN SENSITIVE SHAVE

SF4880

Use and Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this shaver.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Charge only when the shaver is in a dry condition.
- Detach the appliance from the power supply cord before cleaning or rinsing with water.
- Do not submerge in water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.

- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.

- Do not plug or unplug this appliance when your hands are wet.

- Do not use an extension cord or a voltage converter with this appliance.

- Do not wrap the cord around the appliance.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

- Detach removable power cords from appliance for storage.

- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.

- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.

- The power unit is intended to be correctly oriented in a floor mount position.

SAVE THESE INSTRUCTIONS

Product Features



Shaver Parts

- On/Off button
- Foils
- Cutter assembly
- Hair pocket
- Pop-up trimmer
- Head guard
- Power adapter
- Power port
- Cleaning brush

About Your Shaver

FEATURE	SF4880
POWER SYSTEM	cord/cordless
FULL CHARGE TIME	90 minutes
RUN TIME	up to 45 minutes
INDICATOR	charging/low charge/full charge
VOLTAGE TYPE	worldwide 100-240V
REPLACEMENT PART NO.	SPF4880

* See "How to order shaver accessories" section on replacement parts.

Indicators

Low Battery – green light flashes rapidly on and off when batteries need to recharge.

Charging Indicator – green light glows solid when the shaver is being charged.

Full charge – green indicator light turns off.

Cord/Cordless – shaver can be used with or without the power cord.

Charging

Before using, read the important safety instructions in front of the manual. CAUTION!

- Always ensure the shaver, charging cord and your hands are dry when connecting the shaver to the charger. Never rinse the shaver while charging.



- Your shaver will have an initial partial battery charge and should operate out of the package. For best performance give your new shaver a full charge before your initial use.

- To charge the shaver, first connect the charge cord to the shaver and then to the electrical wall outlet. The plug into the shaver will have a keyed shape to insure proper orientation and prevent an incorrect charger from being used. (A, B)

- Leave the shaver plugged in for 90 minutes to provide a complete charge. While charging a single green LED light will glow to show the shaver is charging. When the shaver is fully charged the green LED light will shut off.

- Your shaver should operate for up to 45 minutes on a single charge offering several shaves before requiring a recharge. When in need of a recharge, the green LED light will flash on and off when the shaver is turned on.

- It is best to run the shaver down until it indicates need for a charge rather than charging after every use. Charging daily increases the charging cycles and reduces the battery life.

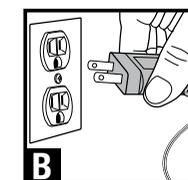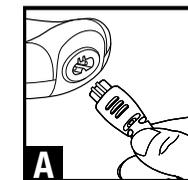

Shave

Before using, read the important safety instructions in front of the manual.

- Remove the protective head guard from the shaver head.

- Press the on/off switch to turn the shaver on.

- Hold the shaving head so both cutters are touching the skin.

- Move the shaver in short up and down strokes against the growing direction of the hair. It will likely require moving the shaver in a variety of directions to capture all hairs. (C)

- Use light force against your skin. The cutting heads will float to adjust to your facial contours. It will take several passes to capture all the hairs in the small slots of the cutters, especially in thick areas of your beard.


- Pulling your skin tight with your other hand will cause hairs to stand up and be captured more easily in the cutting slots.

- While shaving, the small combs and soft rubber bumps between the cutting heads will help lift and feed the hairs into the cutters.

- The pop up trimmer on the back of the shaver can also be used to trim stubborn or curly hairs that are difficult to feed into the cutting slots. It will help cut the hair short so it can more easily enter the cutting slots.

- The cutters are intended to cut the hairs slightly above the skin surface to help prevent ingrown hairs. You may feel a very short stubble at the completion of your shave
- Shaving once or twice daily is the best practice for controlling shave bumps and ingrown hairs.

Remington recommends that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system.

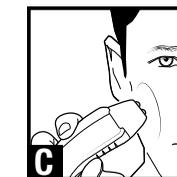



Shaving Tips

- Use the pop-up trimmer at the back of the shaver to trim longer or curly hairs before shaving. Use very light pressure.
- Based on your preference, use the shaver dry, or with foam or gel.
- After shaving, use a moisturizer or after shave lotion to soothe your skin.
- Dry exfoliating with a manual or rotating brush before or in between shaves will further to help control ingrown hairs.

Trimmer

Your shaver has a pop-up trimmer on the back for use in trimming sideburns or edging beards or goatees.

1. To activate the pop-up trimmer turn the shaver on, then slide the release button of the trimmer to pop the trimmer up. (D)
2. When trimming, pull the trimmer in the direction that keeps the trimmer rigid. Pushing in the flexible direction of the trimmer will cause it to close. (E)
3. To turn off the trimmer, flex the trimmer down against the shaver body and snap it closed. (F)

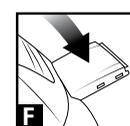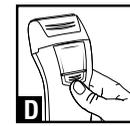

Cleaning and Care



The shaver is a washable appliance. The head assembly part may be cleaned under water.

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

For optimal shaver performance, clean your shaver after each use. The shaver is washable. The cutting head and hair pocket may be rinsed under running tap water. Do not submerge the entire shaver handle under water for cleaning.

Cleaning Instructions:

1. Turn the shaver off before cleaning.
2. Remove the cutting head by grasping the grips at the front and back of the cutting head and pulling up and away from the shaver body. (G)
3. Use the cleaning brush to remove loose clippings from the inside of the cutting head and in the hair pocket. (H)
4. The cutting head and open hair pocket may be rinsed under running tap water. (I)
5. Snap the cutting head back onto the shaver. (J) The cutting head may be left off to air dry if desired.



Product Disposal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

CAUTION! Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

1. Run the shaver until the battery is fully discharged.
2. Using a small tip screwdriver, unsnap the two front side panels of the shaver's body at the left and right side of the on/off switch.
3. Use a small screwdriver to remove the 4 exposed screw heads. Remove the front panel.
4. Remove the eight exposed screws to remove the back panel and open the inner core of the shaver. This will expose the battery.
5. Snip the battery wires with a scissors or wire cutter, and pry the battery from the circuit board.
6. Dispose of the battery appropriately.

Power Adaptor

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For connection to a power supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

How to Order Shaver Accessories

Please refer to the shaver comparison and features chart near the front of this manual that lists the correct replacement part number for your shaver.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Maintain your shaver's peak performance! Keep your shaver performing like new!

■ Because your satisfaction is important to us, we want to make it simple for you to keep your new shaver performing at its peak.

■ Did you know that for the best possible shave, it is necessary to replace the heads and cutters on your shaver every 6 months?

■ Remington makes this easy!

Two easy ways to order!

1. Call! U.S. Residents call 800-392-6544.
2. Order Online at RemingtonProducts.com

Product Registration

By registering your new Remington product you will receive these important benefits:

- Proof of ownership
- Product protection
- Product registration
- Special offers

Register online at:
RemingtonProducts.com

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S.

Warranty excludes: Foils and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
 - Servicing by unauthorized persons
 - Use with unauthorized accessories
 - Connecting it to incorrect current and voltage
 - Wrapping cord around appliance causing premature wear and breakage
 - Any other conditions beyond our control
- No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Performance Guarantee

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

*Applies to U.S. customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

® Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 10/17 18165-01

Made in China.

T22-0005137-B

Contains a listed adaptor