

# REMINGTON®

## SMART Beard Trimmer

MB4700



### Use and Care Guide

#### Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

### DANGER

#### To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off trimmer before connecting to charger.
- Unplug this appliance before cleaning it.

### WARNINGS

#### To reduce the risk of burns, fire, electric shock or injury to persons:


- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged. If any of these things happen, contact consumer support at the toll-free number listed

in the warranty section.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the trimmer while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.
- Do not allow the product to come in contact with water while plugged in.

## SAVE THESE INSTRUCTIONS

### PRODUCT FEATURES

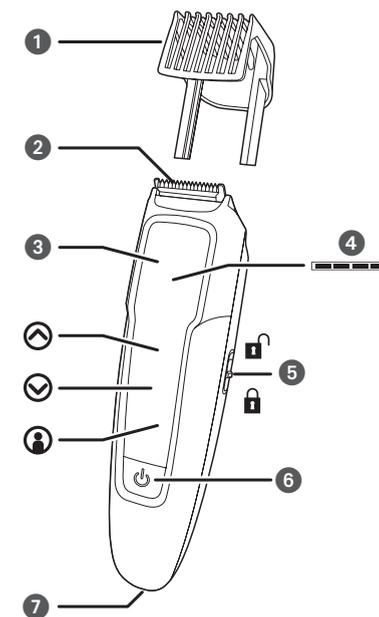

### KEY PARTS

1. Adjustable beard comb
2. Main blade
3. Display
4. Charge/profiles indicator
5. Travel lock
6. On/off button
7. Charger connector

#### Also includes:

- Charging adapter (not shown)
- Cleaning brush (not shown)
- USB charging cable (not shown)

### CHARGING

#### Charge your trimmer:

- Before using for the first time.
  - When only one charge indicator bar is showing.
  - After your trimmer has not been used for a long time.
1. Ensure that the travel lock is in the unlocked position and the device is not running.
  2. Connect the charging adapter to the trimmer and then to the power outlet.
  3. When charging, the four charge indicator bars will light up one after the other. When charging is complete, all four indicator bars will be lit.
  4. A first time charge should take approximately 4 hours. Top-up charges should take approximately 2 hours.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

**Note:** If this is the first time you have charged the device, or if it has not been charged in a long time, the display may not turn on immediately when charging.

#### USB charging via PC

1. Ensure that the travel lock is in the unlocked position and the device is not running
  2. Connect your USB cable to the USB port on the PC.
  3. Connect the USB cable to device.
- When charging the digital display will illuminate.

#### Corded/cordless use

- When fully charged, your trimmer should provide approximately 50 minutes of cordless use.
- You can also connect the charger (as if you were going to charge the trimmer) and operate the trimmer 'corded' if desired.

### ATTACHING/REMOVING THE ADJUSTABLE BEARD COMB

1. Switch your trimmer off.
2. Slide the comb up and out of the guides.
3. To refit the comb, slide the comb into the guides and press it all the way down until it clicks.

### ADJUSTING THE CUTTING LENGTH OF YOUR TRIMMER

Your trimmer can be adjusted manually in 0.1 mm increments. It can also store and recall the last four trimming lengths used (Profiles).

#### Adjusting manually

1. Use the up and down buttons to manually adjust the cutting length. Tap the appropriate button to move the comb up or down in 0.1 mm increments.
2. Hold your finger on the button to move the comb quickly.
3. The display will show the selected length setting.

**Note:** The length settings cannot be changed while the trimmer is running.

 
#### Using profiles

When you adjust the comb length and then operate your trimmer the length setting will automatically be stored in profile one. Your trimmer will store the four most recently used settings in the order of the most recently used. This allows you to recall the settings you use most often.

If all four profile locations have a setting stored and then you make a new cutting length adjustment (one that has not been previously stored) the oldest profile will be deleted and the new setting will be stored.

To recall a profile:

1. Ensure that the trimmer is stopped. Tap the profiles button .
2. Tap the up and down buttons to select a profile. The display will show the cutting length, and 1, 2, 3 or 4 horizontal bars to represent profile 1, profile 2, etc.



3. Tap the profile button again to select that profile.
4. The comb will then move to the position stored in the selected profile.

To exit profile mode:

To exit without selecting a profile, either press the on/off button, or don't press any button for 5 seconds. Profile mode will be exited without any changes being made to the comb length setting.

## SWITCHING YOUR TRIMMER ON AND OFF

### Waking up

Providing the travel lock has not been set to the locked position, your trimmer will wake automatically when you pick it up:

- The display will come on.
- The buttons will light up.
- The comb will move to the last selected length setting.

**Note:** Your trimmer will go into energy saving mode if it has not been used for several days. Use the on/off button to reactivate it.

### Stopping and starting your trimmer

- To start your trimmer, press the on/off button.
- To stop your trimmer, press the on/off button again.

### Hibernate

To place your trimmer into hibernate mode, press and hold the on/off button.

- The display will go out.
- The buttons will go out.
- The comb will fully retract.

For 20 seconds, your trimmer will not respond to touch signals. However, you can activate your trimmer during this time by pressing the on/off button. After 20 seconds, picking up your trimmer will wake it up again.

### Auto off

If left unattended your trimmer will auto shut down after a period of time. Your trimmer will wake up automatically when picked up.

### Travel lock

To prevent your trimmer accidentally switching on during travel, storage, etc. slide the travel lock switch to the lock  position. This will deactivate the touch control features of your trimmer. To reactivate, slide the lock

to the unlocked  position. The travel lock can also be set to the lock position to switch your trimmer off.

## INSTRUCTIONS FOR USE

During use, your trimmer will automatically adapt its speed and cutting rate according to the hair thickness being cut.

### Trimming your beard

For even cutting, allow your trimmer to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb length setting.

### Thinning or tapering the beard or moustache

1. Use the controls to set the trimmer comb to the desired length setting.
2. Place the flat top of the trimmer comb against the skin.
3. Slowly slide the trimmer through the hair. Repeat from different directions as required.
4. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

### Trimming your sideburns

1. Hold your trimmer with blade facing you.
2. Start with edge of your sideburns. With the trimmer blade resting lightly against your skin, move your trimmer carefully towards your sideburn until the desired shape is achieved.

### Trimming the nape of your neck


1. Remove the adjustable comb.
2. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
3. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
4. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.
5. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

## TIPS FOR BEST RESULTS

- Your beard, moustache or sideburn hair should be dry.
- Avoid applying lotions before use.
- If you are trimming for the first time, start with the adjustable comb set to its maximum length position.

## CARING FOR YOUR TRIMMER

**Never rinse, wash or otherwise subject this product to liquid while the charger is connected.**

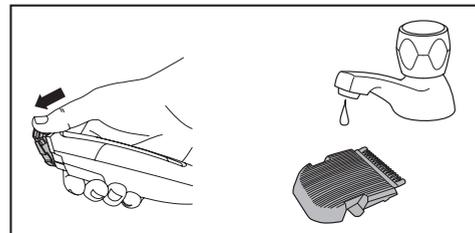


1. For best results, keep trimmer running while rinsing it under the tap.
2. For more thorough cleaning the blades can be easily removed to wash any hair trimmings from the blades.
3. Push the top of the blade away from the trimmer body using your thumb.
4. Wash, then refit the blade.
5. Place a small drop of cutter or sewing machine oil onto the blades at each end and at the middle point of the blades. Turn the unit on for a few seconds to distribute the oil then turn off and wipe off excess oil.

## PRODUCT DISPOSAL

When your rechargeable trimmer reaches the end of its useful life, the batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

**The following procedure should be followed for battery removal:**

- The rechargeable battery must be removed from the appliance before it is disposed of.
- Disconnect the charging adapter before removing the battery.

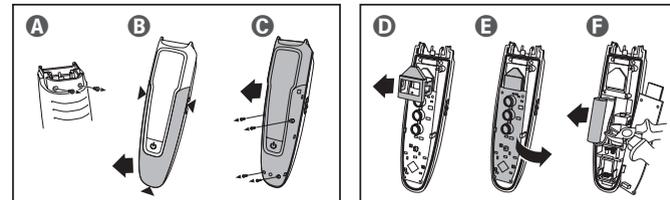

1. Ensure that the battery is fully discharged. To do this, operate the trimmer until it stops.
  2. Remove blade then remove the two screws (FIG A).
  3. Use an appropriate tool to pry off the front cover trim (FIG B) at the points indicated (►◄).
  4. Remove the four screws (FIG D).
  5. Unclip then lift off the display cover (FIG D).
  6. Unclip the circuit board (FIG E) and move it aside.
  7. Lift out the battery and cut the two wires (FIG F).
- The battery must be disposed of at an appropriate official recycling/col-lection point.
  - Do not attempt to operate the trimmer once you have opened it.

**CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS.** Do not put in fire or mutilate, as the battery may burst or release toxic materials. Do not short-circuit, as this may cause burns.

## WARRANTY

### Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada.

**This warranty does not cover products damaged by the following:**

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

## Remington Guarantees Satisfaction After 30 Days!

### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

100-240VAC, 50/60Hz **Type: MB4700**

**Questions or comments:** Call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562  
© Registered Trademark of Spectrum Brands, Inc.  
© 2018 Spectrum Brands, Inc. 11/18 22305

**Made in China.**  
**T22-7000776-A**

Contains a  
listed adaptor