



CI8019

## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

### KEEP AWAY FROM WATER.

### DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- WARNING: Contains traces of nuts.



KEEP AWAY FROM CHILDREN

## SAVE THESE INSTRUCTIONS

## Product Features

Thank you for purchasing this Remington® Auto Curler. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

### Key Features:

1. On/Off button
  2. LCD display screen
  3. Curling button
  4. Curling chamber opening
  5. Rubber flap
  6. Curling direction switch
  7. Curling temperature setting button
  8. Curling time button
  9. Swivel cord
  10. Chamber cleaning tool
- Automatic Shutoff: This styler is equipped with automatic shutoff. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair.



## How to Use

Hairspray contains flammable material – do not use while using this product.

- Before use, ensure the hair is clean, dry and tangle-free.
- Plug the product into the power supply.
- Section the hair prior to styling. Style the lower layers first.
- Ensure no stray strands of hair are near the curling chamber opening.
- When plugged in but not turned on, 'OFF' will be displayed on the digital display screen. This indicates the styler is in standby mode.
- Press the On/Off button to switch On, the product will make an audible beep indicating the product is on.

### Creating Curls

- This styler can create different curl sizes by utilizing different temperature and curling time combinations.
- See below for a guide on how to achieve different curl sizes but this will vary dependent on your hair type.

Style	Wavy Curls	Loose Curls	Tight Curls
Temp Setting	260°F to 340°F	340°F to 375°F	375°F to 450°F
Curl Time Setting	5 sec.	10 sec.	15 sec.


**TIP:** The size of the hair section also affects curl size; small sections create tighter curls, larger sections create looser curls.

- **DO NOT** use sections larger than 1 inch (3cm).
- Select your desired temperature. Press the temperature control button repeatedly ( ) until your desired temperature is displayed on the screen.
- The selected temperature will flash continuously on the LCD display until the desired temperature setting is reached. This will be indicated by a beep.

## How to Use

- **DO NOT** start styling until the selected temperature setting is reached.
- Select your desired curling time by pressing the curling time selection button, this will allow you to select between 5 and 15 seconds.
- Your selected curling time will be displayed on the LCD display.
- To turn the curling time off set the timer to 0. By doing this you will not receive any beeps to signal your curl time.
- The styler also allows you to create different curl directions.
- Select your desired curling direction by sliding the curling direction switch left ←, right →, or to the center position for alternating curls.
- To avoid tangles use only a small amount of hair, working on one section at a time.
- Hold the handle with the curling chamber opening facing towards your head.
- Place the opening of the curling chamber at the location in your hair where you want the curl to start.

**Warning:** Do not place too close to your head.

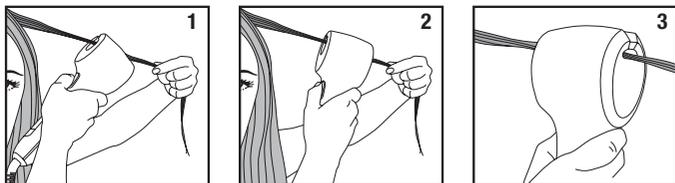

1. Holding a section of hair taut, insert the hair first into the front of the chamber (fig 1).
2. Guide the remainder of the hair into the chamber body ensuring the section stays together (fig 2).
3. Ensure hair is fully inserted into the chamber body (fig 3).

**TIP:** Twist your hair before inserting into the curling chamber, this will make it easier to insert.

4. Once the section of hair is in place in the chamber, let go of the hair and let the styler hold the hair in place.

5. Press and hold the curling button. The hair will then automatically be drawn into the curling chamber. Do not release the curling button until the barrel has stopped rotating. If you release the button too early the curler will stop winding and release the hair.
6. After your hair has curled into the chamber, and the barrel has stopped rotating, the curl timer will begin.
7. When your selected time has elapsed you will hear three beeps indicating you can remove your curl.

**NOTE:** If you select 0 on the timer, or you release the curling button before the barrel has stopped rotating, you will not hear any beeps.

**TIP:** Let the curls cool before further styling or brushing, this will ensure the curls set.

- Repeat this process around the head to create as many curls as desired.
- After use, press and hold the On/Off button for 2 seconds to turn off. Then unplug the appliance.

### Er2 Error Warning

**NOTE:** If you insert too much hair the unit may stop winding, beep, release hair, turn off and display Er2 on the digital display screen. This is to prevent the unit from jamming.

- If this occurs, remove hair, press the power button and repeat with a smaller section of hair.

### PRO+ Setting

- To activate, press the temperature setting button until the PRO+ icon appears on the LCD display.
- This automatically selects the temperature at 365°F for healthier styling.

### Memory Function

- Each time you use the product it will automatically set to the last temperature it was used on.

## Cleaning and Maintenance

### Cleaning

- After use, ensure the product is cool and wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Do not attempt to repair the appliance yourself.

**Note:** This appliance has no user serviceable parts.

### Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Drive, P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648.

**KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.**

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting the unit to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

### Remington Guarantees Satisfaction After 30 Days!

#### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

#### Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

#### 120VAC 60Hz

**Questions or comments:** Call 800-736-4648 or visit [RemingtonProducts.com](http://RemingtonProducts.com)

Dist. by: Spectrum Brands, Inc.,  
Middleton, WI 53562

® Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 11/17  
18738-01

**Made in China.**



T22-0005535-B