



## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
 Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

### KEEP AWAY FROM WATER.

### DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.



KEEP AWAY FROM CHILDREN

## SAVE THESE INSTRUCTIONS


## Product Features

Thank you for purchasing the Remington® Style Therapy Curling Iron. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

**Automatic shutoff:** This styler is equipped with automatic shut-off. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair.

### Key Features:

- (A) Ceramic Barrel
- (B) 20 Temperature Settings
- (C) On Indicator Light
- (D) ON/OFF Button
- (E) Swivel Cord

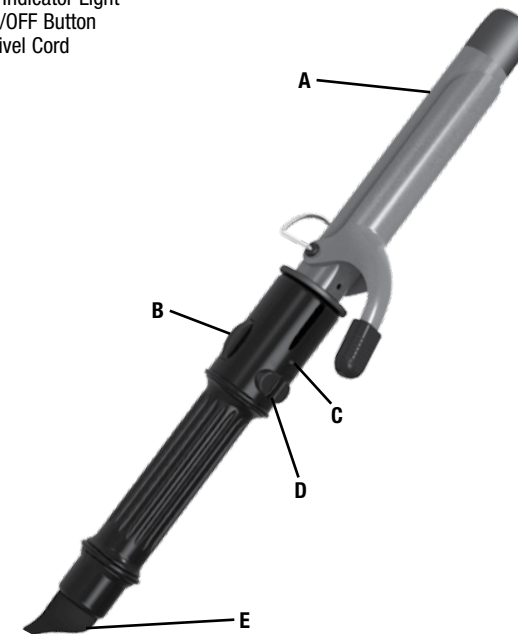

## How to Use

### How to Use

Hair should be clean, dry or nearly dry, and free of tangles before using. (This iron can also be used for quick touch-ups any time.)

1. Rest the iron on its stand on a smooth, flat surface, and plug it in.
2. Press and hold the ON/ OFF button until the unit turns on and the on indicator light up red.
3. Adjust the temperature using the dial to reach your desired heat.

### How to Get Professional Results with Your Curling Iron

This unique curling iron has been designed with multiple temperatures, providing very high heat settings for curling very coarse, thick, hard-to-curl hair; very low heat settings for curling extra fine, damaged or dry hair; and a full range of heat settings in between for all normal textures and thicknesses of hair.

### TEST A SMALL SECTION OF HAIR BEFORE USING; THEN ADJUST TEMPERATURE DEPENDING ON HAIR TYPE.

### Styling

1. Start by dividing hair into sections not more than 1 inch deep and 2 inches wide.
2. Keep the section smooth by brushing or combing through it while holding the ends taut with the other hand.
3. Taking one section at a time, place the ends of hair over the barrel with the clamp open. Then close the clamp, making sure that the ends extend just a tiny bit beyond the clamp.
4. Grasp the safety tip with the other hand, and it will be easy to roll hair.
5. Keep the section of hair taut as you wind it around the hot barrel. Wind the curl toward the scalp as far as you wish to go without touching scalp with the hot barrel.
6. Hold the curl in place for up to 20 seconds for tight curls or if hair is hard to curl. Hold for less time if hair is easy to curl, or if you want loose curls or just waves.
7. When ready to release curl, unwind about half a turn (for longer hair, unwind a bit more) and push down on the clamp release lever to open the clamp. Now, gently withdraw the barrel from the center of curl. Allow curl to cool, and try not to disturb curls while proceeding in the same manner around whole head.

8. When completely finished, and all curls have cooled thoroughly, gently brush and comb hair into the style desired.

**For a Flip**, the clamp should be under and the barrel over the section of hair at the start of the curl.

**For a Curl**, the clamp should be over and the barrel under the section of hair at the start of the curl.

**For Volume and Body**, roll hair loosely around the barrel. Allow hair to cool slightly before brushing.

## Maintenance

### Cleaning

- To clean the unit, be sure the unit is cool and unplugged. Wipe the handle and barrel with a damp cloth. No other maintenance is necessary.
- Do not attempt to repair the appliance yourself.

This appliance has no user serviceable parts.

### Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product. If the product should become defective within the warranty period, we will replace it free of charge. Please call 800-736-4648.

**SPECTRUM BRANDS SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

## Performance Guarantee

### Spectrum Brands Money-Back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120VAC 60Hz

**Questions or comments:**  
Call 800-736-4648 or visit  
[www.RemingtonProducts.com](http://www.RemingtonProducts.com)

Dist. by: Spectrum Brands, Inc., Madison, WI 53711

® Registered Trademark of Spectrum Brands, Inc. or one of its subsidiaries.

© 2010 SBI 09/10 Job #CS40811

**Manufactured to Remington's specifications in the PRC.**

T22-30957



Intertek