

# REMINGTON®

D5950 Series



## Use and Care Guide

**Register Your New Product Today!**

By registering your new Remington® product, you will receive these important benefits:  
Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

### DANGER

**As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:**

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

### WARNING

**To reduce the risk of burns, fire, electric shock or injury to persons:**

- An appliance should never be left unattended when it's plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces. **Do not wrap the cord around the appliance.**

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Attachments may be hot during use. Allow them to cool before handling.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not use in countries with 220/240 volt electrical systems; use only with 110/120 volt electrical systems.
- Do not use a voltage converter with this appliance.
- Do not use an extension cord with this appliance.
- This appliance is for household use only.

## SAVE THESE INSTRUCTIONS

### Safety Instructions

#### ALCI Safety Device

This hair dryer is provided with an appliance leakage circuit interrupter (ALCI) safety device built into the plug. This device is designed to make the unit inoperable under some abnormal conditions, such as accidental immersion in water. The ALCI safety device is equipped with a test button so that its operation can be checked. This unit should be tested before each use to confirm that the safety device is operational.

#### To test:

After plugging in your hair dryer:

1. Press the reset button on the ALCI device.
2. Press the test button. The reset button will pop out. This verifies that the safety device is operating properly.
3. Press the reset button to reactivate your ALCI safety device.
4. Your hair dryer is now ready for use.

**Note:** This unit may automatically trip when unplugged. If so, the unit must be reset after it is plugged in. If the dryer doesn't reset after following the above testing procedure, call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

1. Should the ALCI safety device trip (i.e., reset button pops out) during use, press the reset button. Should the hair dryer fail to reset, call 800-736-4648. Never operate this appliance if it has been dropped in water.
2. The dryer is designed to work on ordinary household current only, 125 volts A.C., 60 Hz. It is not intended for commercial use.
3. This appliance is equipped with an automatic thermal limiter, which will cycle off when overheated and come back on when cooled down. If the unit cycles off, unplug the cord for several minutes before restarting.
4. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



## THIS MESSAGE ABOUT

# GROUND FAULT CIRCUIT INTERRUPTERS

## CAN SAVE A LIFE!

**If you must use your hair dryer in the bathroom, install a GFCI\* now!**

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in bathrooms, garages, and outdoor outlets of all new homes.

**Why do you need a GFCI?**

Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you— even if *the switch is "off."*

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you greater protection.



**A GFCI can save your life!**  
Compared to that, the price is small!

**Don't wait... install one now!**

\*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

## Product Features

1875 Watts



## How To Use

### Basic Drying Techniques

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with towel – this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Be sure dryer is turned off. Plug dryer into an electrical outlet.
3. Turn the dryer on and set it to a high heat and speed. Remove some of the additional moisture from your hair by briskly blow drying it all over, using your fingers to “comb” through hair.
4. When hair is almost dry, lower the heat and speed to the desired settings and begin to style.
5. Divide hair into manageable sections. Begin at the nape of your neck and brush hair, following the movement of the brush with the dryer. Continue working your way up to your scalp, then to the sides and the front, drying small sections at a time.

### For straight, smooth hair:

Brush hair from underneath using a large, round brush or paddle brush. Pull hair down until the hair is fully extended and taut. Run the dryer slowly down the length of the hair several times until dry. Repeat with all sections of hair until it is completely dried.

### For curly hair:

With the dryer turned off, attach the diffuser to the end of the nozzle. Use the dryer on a low heat and speed setting and move it quickly about your head. As you dry your hair, scrunch it with your favorite styling product or twirl strands of hair around your fingers to add definition. When finished drying, lock in the style with the Cool Shot.

### Cool Shot:

The Cool Shot sets the style by blowing a cool stream of air. Press and hold the cool shot button to set style. Release the button to return to warm air flow.

## Hair Care Tips

- Keep the dryer about 8 inches away from your head to avoid burning scalp or damaging hair.
- Always keep the dryer pointed down the hair shaft to smooth the cuticle and create a silky, shiny style.
- To help prevent heat damage and add shine, spritz damp hair with a heat protection spray before blow drying.
- To create a style with lots of body, apply volumizing mousse to towel dried hair. Distribute it evenly from roots to ends, then blow dry as usual. Hair will be soft, shiny, and full of volume.
- For a super smooth, salon-like blow dry, finish by running a straightening iron over dried hair.
- For a quick touch-up between shampoos, mist hair to dampen it, then style with dryer.

## Cleaning, Care & Maintenance

### Maintenance Instructions

The dryer needs minimum maintenance to ensure the best performance and long life.

- Do not attempt to repair the appliance yourself.
- Do not attempt to tamper with any of the user-operated controls.
- Keep all intake openings clear of dust accumulation. See “Cleaning Instructions” below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store appliance and cord where they will not be damaged. Do not wrap cord around dryer.

### Cleaning Instructions

The air filter should be cleaned regularly, since a dirty or clogged filter will impair the efficiency of the dryer.

1. To clean air filter, make sure dryer is turned off and unplugged.
2. Turn the rear air inlet grill counter-clockwise and pull away from the dryer.
3. Use a soft bristle brush to gently remove any particles that are lodged in filter.
4. If the unit is dirty, wipe it with a damp cloth.
5. To replace the air inlet after cleaning, align on rear and turn clockwise until secure.

### Storage

When not in use, unplug the unit. Allow it to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance, as this will cause the cord to wear prematurely and break. Handle cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not include damage to the product resulting from accident or misuse, such as the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

### Spectrum Brands Money-Back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

### Remington Guarantees Satisfaction After 30 Days!

### Remington® 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington product:
  - a. The Remington product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

125 VAC 60Hz

Questions or comments: Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562  
©Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 6/17 18299-00

Made in China

T22-0000650-B

