

H5670

## Use and Care Guide



## JUMBO ROLLERS

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:  
 Proof of Ownership • Product Protection • Product Registration • Special Offers  
 Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

## DANGER

**As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:**

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

## WARNING

**To reduce the risk of burns, fire, electric shock or injury to persons:**

- This appliance is for household use only.
- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug; if it is not working properly; if it has been dropped, damaged, or dropped into water.

- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not touch the posts that hold the rollers. They are hot.
- Do not use an extension cord with this appliance.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## Product Features

- Ceramic Ionic conditioning for amazing shine.
- Wax core retains high heat and helps set long lasting curls more quickly.



- |   |                                |
|---|--------------------------------|
| 1 Velvety flocked rollers:<br>- 4 x 40mm rollers (large)<br>- 8 x 35mm rollers (medium) | 3 Color coded pins (not shown) |
| 2 Color coded clips (not shown)   | 4 On indicator light           |
|   | 5 Cool touch end               |
|   | 6 Base unit                    |

## How to Use

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.

### Hairsprays contain flammable material – do not use while using this product.

- Section the hair prior to styling. Style the lower layers first.

### CAUTION: the appliance will begin to heat-up as soon as the power supply is switched on.

- The lid should be in the down position until the rollers are ready to use.
- The rollers will start to heat up in 3 minutes. Allow 10 minutes for them to reach the optimal curling temperature.
- When you feel your setters are ready, open the lid for 1 minute and begin use.

## TO CURL

- Select the desired size of roller. Use the small rollers for tighter curls; the larger rollers give looser curls and waves.
- Take a section of hair, about the width of the roller.
- Wrap the ends of the hair around the roller, keeping the hair at right angles to the scalp.
- Wind the roller right down to the roots.
- Secure the roller firmly in place with the correct size pin or clip, as near to the scalp as possible.
- Repeat with the next section of hair.
- Leave all the rollers in the hair until the rollers and hair have fully cooled down and set the style.

**Note:** Use fixing spray to help set and keep your style for longer.

- Remove the rollers from your hair by gently unwinding.
- Let the curl spring back into place and leave the hair to cool fully before styling to ensure the optimum set.

## FOR VOLUME

- Use the largest rollers provided.
- Roll the top, front layer of the hair back to your crown, using one roller.
- Next, use three other rollers to roll the remaining hair in three equal sections on the back and sides of the head.
- Roll the hair under, up the nape of the neck.

## FLICKED OUT

- Use the largest rollers provided.
- Roll the hair back and under to the crown to give height.
- Take large sections all around the sides of your head, and roll up so the hair will flip out.
- You should roll the curlers up to the level of the top of your ear. Leave the rollers in place for approximately ten minutes.
- Unroll the curlers in the order that you put them in, let the curl cool for a minute to set.
- Next, brush your hair out, using your hands to shape the flip outward.
- Unplug the unit after you have used all the rollers you need.

## Maintenance

### Maintenance Instructions

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Dry rollers completely before replacing in the unit.

**Note:** To order accessories, please call 1-800-392-6544 or visit [RemingtonProducts.com](http://RemingtonProducts.com)

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting the unit to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### Remington Guarantees Satisfaction After 30 Days!

### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

**Questions or comments:** Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit [RemingtonProducts.com](http://RemingtonProducts.com)

© Registered Trademark of Spectrum Brands, Inc.  
©2016 Spectrum Brands, Inc. 7/16 15638-00

Dist. By: Spectrum Brands, Inc. Middleton, WI 53562  
Dist. By: Spectrum Brands Canada, Inc.  
131 Saramia Crescent, Vaughan, ON L4k 4P7

Made in China

**T22-0004484-A**



Intertek