

REMINGTON®



SLEEK • SMOOTH • SKIN™

WDF-5030



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits: Proof of ownership • Product protection • Product registration • Special offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

To reduce the risk of electric shock:

- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not use while bathing or in the shower if it is plugged in.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Plug charger directly into receptacle – do not use an extension cord.
- Unplug charger before plugging or unplugging appliance.
- Do not store it in temperatures exceeding 140°F (60°C).

- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.

- Never drop or insert any object into any of the appliance's openings.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.
- Do not use this appliance with a damaged or broken heads or cutters, as injury may occur.

SAVE THESE INSTRUCTIONS



This shaver is a wet shaver which may be used in a bath or shower.




This shaver was developed to be used with your favorite shave cream or gel, for an even smoother glide.

Thank you for choosing REMINGTON® products. Our products are designed to meet the highest standard of quality, functionality and design. The model you have chosen can be used in or out of the shower and is designed to provide a gentle, close shave. Please read the instructions for use carefully and keep in a safe place for future reference.

CAUTION

Use this appliance only for its intended use as described in this manual. Do not use this product if it is not working correctly, if it has been dropped or damaged, or submerged in water.

Product Features

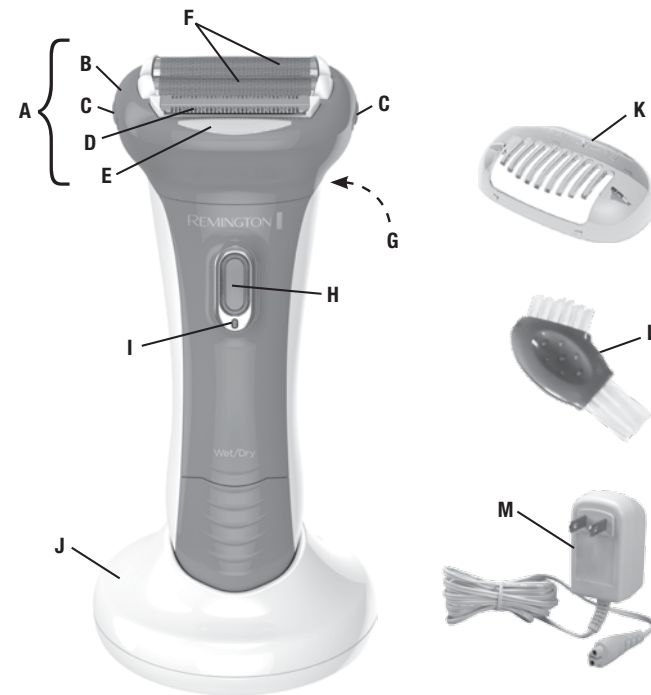

DESCRIPTION

- A Shaving head
- B Foil holder
- C Foil holder release buttons
- D Intercept trimmer with comfort tips
- E Almond oil moisturizing strip
- F Flexible outer foils
- G Shaving head release button (on back)
- H On/Off switch
- I Charging indicator light
- J Charge stand
- K Bikini trimmer headguard
- L Cleaning brush
- M Power adaptor

GETTING READY

Please be patient when first using your shaver, as with any new product, it may take a little while to familiarize yourself with the device. If you take the time to acquaint yourself with your shaver, we are confident you will receive years of enjoyable use and complete satisfaction.

INSTRUCTIONS FOR CHARGING

Always ensure that your hands, trimmer and charge stand are dry before charging.

Before using your REMINGTON® shaver for the first time, charge for 24 hours. For subsequent uses, charge 24 hours before use. The charging indicator light on your charge stand will light up to indicate that your shaver is charging. One full charge allows 30 mins. of cordless usage time.

Use product until the battery is low. This is indicated by the shaver running distinctly slower.

Your shaver cannot be overcharged, however, if the product is not going to be used for an extended time period (2–3 months), unplug it from the outlet and store. Fully recharge your shaver when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then recharge for 20 hours.

CHARGING CAUTIONS

- Do not attach the power adaptor to the outlet with wet hands.
- Always charge the shaver in a cool, dry place.
- Do not charge the shaver in close proximity to water.
- The shaver can be attached to an electrical outlet voltage of 120V only.

How To Use

Your shaver is suitable for legs, under-arms and the bikini area.

FOR EVERYDAY SHAVING

- Remove bikini trimmer headguard.
- Turn the shaver on.
- Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.

FOR SHAVING LONGER HAIR

Use the bikini trimmer headguard to cut hair short, and then use the flexible foils for a closer shave.

- Turn shaver on.
- Hold the shaver with the trimmer slightly tilted (approximately at a 45° angle).
- Move the trimmer slowly against the direction of the hair growth.
- After trimming, move the foils over the same area for a smooth, closer shave.

TRIMMING AND SHAPING

- Attach the bikini trimmer headguard.
- Turn the shaver on.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the area as desired.
- After shaving, turn off shaver.

FOR BEST SHAVING PERFORMANCE

We recommend that you use your new shaver daily for two or three weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

CAUTION

If your skin is easily irritated by shaving, or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.



NOTE:

- The shaver IS suitable for use in the bath or shower.
- Do not rinse with water hotter than 160°F.
- Do not completely submerge the shaver in water.

Cleaning and Maintenance

CARE FOR YOUR SHAVER

To ensure long lasting performance of your shaver, clean the shaving head assembly regularly. The easiest and the most hygienic way to clean the shaver is by rinsing the shaving head after use with warm water. Always keep the bikini trimmer headguard on the shaving head when the shaver is not in use.

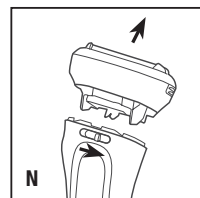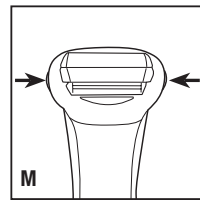

AFTER EACH USE

1. Ensure the shaver is turned off.
2. Press the foil holder release buttons on both sides of the shaving head and remove the foil holder. **(M)**
3. Blow on the foils to remove any loose debris.
4. Brush or rinse the accumulated hair from inside the cutter assembly.
5. On the back of the shaver, press the shaving head release button to the right and remove the rest of the shaving head. **(N)**
6. Clean any accumulated hair from this area as well. Leave the head assembly taken apart to let the shaver dry completely.
7. Reassemble parts when dry, securely snapping them into place.

NOTE:

- Ensure that the shaver is turned off when cleaning.
- Do not clean the shaving foils with the brush.
- At regular intervals, put a drop of mineral or sewing machine oil onto the foils and cutter head.

REPLACING THE FOILS AND CUTTERS

Signs that your foils and cutters need replacing:

- Irritation: As foils get worn, you may experience skin irritation.

- Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling on your hair.
- Wear: You may notice that the cutters have worn through the foils.

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced every 6 months.





NOTE: The replacement part for your shaver model is SPW-530NA.

Two easy ways to order!

1. U.S. Residents call 800-392-6544
2. Order Online at RemingtonProducts.com

HOW TO REPLACE THE INTERNAL CUTTERS

1. Turn off the shaver.
2. Press the foil holder release buttons on both sides of the shaving head and remove the foil holder. **(O)**
3. Grasp the old internal cutters and pull up firmly to detach them. **(P)**
4. Install the new cutters by inserting the protruding pin on the holder into the hole in the middle of the cutter and pressing down to snap into place.

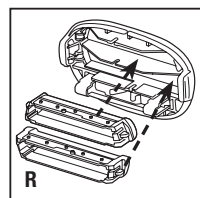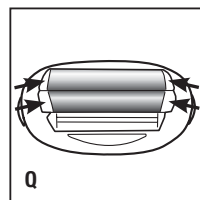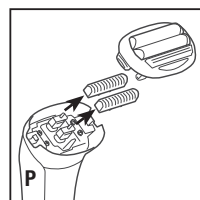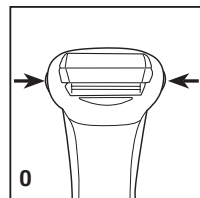

PRODUCT DISPOSAL






When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements.

NOTE: The rechargeable batteries are not replaceable.

How to Remove the Batteries from the WDF-5030

(See diagrams to right)

1. On the back of the shaver, press the shaving head release button to the right and remove the shaving head. **(S)**
2. Remove four screws from inside top of shaver body. **(T)**
3. Remove screw from bottom of shaver. **(U)**
4. Separate top and bottom housings. **(V)**
5. Push the inner frame up and out through the center of the top housing. **(W)**
6. Pry or cut the batteries from the inner frame. **(W)**
7. Insulate battery ends by (1) placing each battery individually into separate plastic bags or (2) covering the terminals of each battery completely with plastic or non-conductive electrical tape.

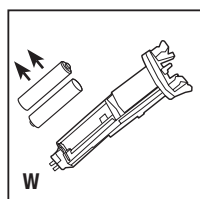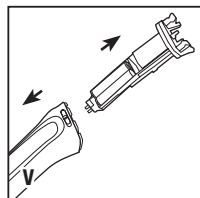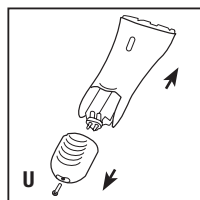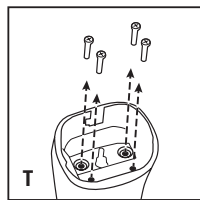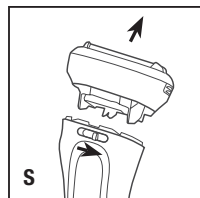

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

*Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to: Remington 60-Day MBG, 507 Stokely Drive, Box 1, DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

100–240 VAC, 50/60 Hz

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada. Or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
Dist. by: Spectrum Brands Canada, Inc., 131 Saramia Crescent, Vaughan, ON L4K 4P7

® Registered Trademark and TM Trademark of Spectrum Brands, Inc.

© 2015 Spectrum Brands, Inc. 10/15 13740-00

Made in China

T22-0003779

Contains a listed adaptor.