

BB1000



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
 Proof of Ownership • Product Protection • Product Registration • Special Offers
 Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- The adapter can not be used in a bath or shower.
- Do not reach for an appliance that has fallen into water while plugged in. Unplug it immediately.
- Do not place or drop into water or other liquid while plugged in.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while plugged in.
- This cleansing brush is designed for wet use and may be used in the shower. DO NOT fully submerge in water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNINGS AND SAFETY PRECAUTIONS

Before you start using the body brush, be sure to read all the warnings and safety information to check if the product is suitable for you.

TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

- For additional protection the installation of a residual current device (RDC) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice necessary.
- After use the appliance should be cleaned to avoid the accumulations of grease and other residues.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Avoid using on the delicate skin around the eyes.
- DO NOT use the body brush on the same area more than twice a day.

- DO NOT use the body brush on areas with open wounds, sunburnt skin, chapped or irritated skin.
- DO NOT use if you suffer from skin diseases or skin irritations such as severe/active acne or skin infection.
- DO NOT use if you are taking steroid-based medication.
- DO NOT use the body brush with cleansers containing harsh chemicals or rough particles.

- If you wish to share this product with other users, for hygiene reasons, ensure you changed the brush head. DO NOT share brush heads between multiple users.
- If you experience any pain or discomfort stop using this product and contact your doctor.

- If you experience any pain or discomfort stop using this product and contact your doctor.

- If you experience any pain or discomfort stop using this product and contact your doctor.

SAVE THESE INSTRUCTIONS

Getting Acquainted With The Rotating Body Brush

- The rotating bristles gently exfoliate the skin for smooth, radiant results.



- **UNIVERSAL BRUSH:** Ideal for use in the shower, with your favorite shower gel or body wash for gentle exfoliation and a deep cleanse.

Key Features



1. On/Off and Speed Setting Button
2. LED Indicator Lights
3. Soft Touch Handle
4. Universal Brush Head
5. Power Inlet
6. Power Inlet Cover
7. Extension Handle
8. Charging Adaptor (not shown)
9. Beauty Bag (not shown)

Getting Started

Be patient when first using your REVEAL Body Brush as with any new product it may take a little while to familiarize yourself with the product. Take the time to acquaint yourself with your Body Brush as we are confident you will receive years of enjoyable use and complete satisfaction.

Instructions for Charging

1. Always ensure that your hands, cleansing brush and power adapter are dry before charging.

NOTE: Before using for the first time, fully charge the Body Brush. One full charge will take 2 hours.

2. Ensure the appliance is switched off.

3. Insert the charging adaptor into the power inlet of the appliance. (Fig. 1)

4. Plug the adaptor into the wall outlet.

- The charging indicator lights will glow in a rotating sequence while the Body Brush is charging.

- When the Body Brush is fully charged, all charging indicator lights will remain illuminated for 5 minutes, then turn off.

- One full charge will take 2 hours.

- One full charge allows up to 40 minutes of cordless usage time.

NOTE: If the battery charge is low, all three LED lights will pulse on and off while in use.

Quick Charge Function

- The Body Brush is also equipped with a quick charge function.
- To utilize this function, charge the Body Brush for 30 minutes.
- This will provide approximately 5 minutes use.



Instructions for Use

NOTE: This product is suitable for wet use and may be used in the shower.


- DO NOT submerge in water.
- The charging adaptor cannot be used in a bath or shower.
- The Body Brush has 2 speed settings. Always choose the speed setting most comfortable for you.

NOTE: We recommend applying gentle pressure and selecting speed setting 1 for the first few uses while you become familiar with the sensation.

HOW TO USE


TO REMOVE THE BRUSH HEAD

- Gently pull the brush head from the Body Brush (Fig. 2)

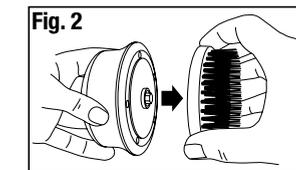

TO ATTACH THE BRUSH HEAD

- Gently push the brush head onto the Body Brush (Fig. 3).

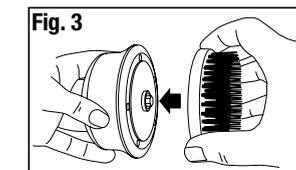

TO SWITCH THE BODY BRUSH ON

- Ensure the brush head is attached securely:
- Press the On/Off button once.
- The Body Brush will start to rotate on speed setting 1.

TO CHANGE THE SPEED SETTING:


- The Body Brush will automatically start on speed 1.
- Press the button again for speed 2.

TO SWITCH THE BODY BRUSH OFF:

- When using speed 1, press the On/Off button twice.
- When using speed 2, press the On/Off button once.



TO ATTACH THE EXTENSION HANDLE TO THE BRUSH

- Remove the brush head and press the rounded side of the body brush into the larger side of the extension handle until it snaps into place. (Fig. 4)
- Then attach the brush head.

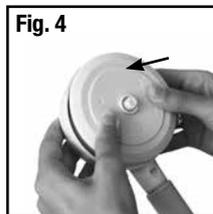

TO LENGTHEN THE EXTENSION HANDLE

- Twist handle counter-clockwise to loosen. (Fig. 5)
- Pull to desired length. (Fig. 6)
- Twist handle clockwise to tighten and secure in place. (Fig. 7)

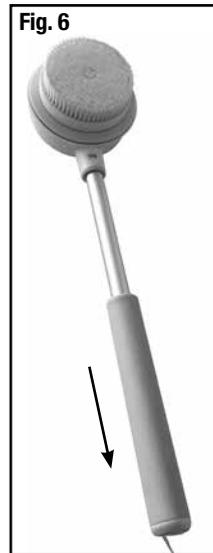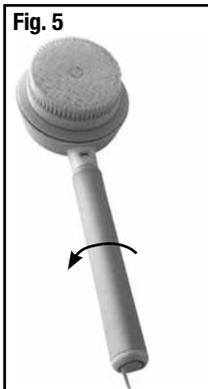

TO DETACH THE EXTENSION HANDLE FROM THE BRUSH

- Remove the brush head. While supporting the extension handle and the far side of the body brush, press firmly on the rounded side of the body brush until the brush comes free from the handle. (Fig. 8)



UNIVERSAL BRUSH HEAD

- The universal brush head is perfect for use in the shower for gentle exfoliation and a deep cleanse.
- It is not recommended for dry use.
- For best results, use the universal brush head with your favorite shower gel or body wash.

NOTE: Avoid any products containing harsh chemicals or rough particles.

- Ensure the brush is switched off.
- Moisten the bristles of the brush.
- Dampen your skin with water and apply shower gel or body wash directly onto the brush.
- Switch on using the On/Off button.
- Select the speed:
- The Body Brush will automatically start on speed 1.
- Press the button again for speed 2
- Gently glide the brush over the skin in circular motions to create a rich lather then rinse off under the shower.

NOTE: Try to avoid applying too much pressure with the brush when directly on the skin. If this happens the brush will automatically stop its cycle and switch off. This is perfectly normal and helps to ensure a comfortable treatment. The body brush can be restarted by pressing the On/Off button.

REPLACING THE BRUSH HEAD

- For best results, we recommend replacing the brush head approximately every 3 months.
- Replacement Brush Heads are available:
- Universal Brush: SP-BB1
- Natural Brush: SP-BB2

How to Order Parts and Accessories

Two easy ways to order spare parts and accessories are available.

- Order by Phone: U.S. Residents: 1-800-392-6544
- Order Online: RemingtonProducts.com

DRY BODY BRUSHING WITH THE NATURAL BRUSH (AVAILABLE BY SPECIAL ORDER)

TIP: When changing brush heads, test each head on different speeds to identify which is most comfortable for you.

- Dry body brushing is ideal for exfoliating and energizing the skin.
- For best results, use the dry body brush every day.
- Dry body brushing should be carried out in the morning, before you shower or bathe.
- Start from your feet and work upwards, move the brush from the soles of the feet and up the legs with long sweeping motions.
- When you reach the top of the legs, start to use circular motions and continue over the buttocks and around the abdomen.
- When brushing the upper back and the chest, use small strokes and stroke in the direction towards the heart.
- Lastly, finish with the hands and arms. Start at the palm of the hand and work up the arms with light strokes finishing at the shoulder.

TIP: the elbows and knees can be drier than other areas so you may wish to spend a little more time on those areas.

NOTE: for sensitive areas, apply less pressure.

- After dry body brushing, take a shower and finish by applying a body oil or lotion for soft, radiant skin.

Cleaning and Maintenance

- To ensure long lasting performance of your Body Brush, clean regularly.
- Ensure the Body Brush is switched off before cleaning.
- DO NOT attempt to clean any part of this product in a dishwasher.
- Do not submerge the brush handle in water.
- Universal brush head: after each use, detach the brush head, rinse under water and allow to dry on a flat surface with the bristles facing upwards.
- Brush Handle: To clean the handle, wipe with a damp cloth.

CAUTION: Ensure all parts are dry before connecting the charging adaptor into a power outlet.

Product Disposal

- The battery must be removed from the appliance before it is discarded.
- The appliance must be disconnected from the wall socket when removing the battery.
- Run the Body Brush until the motor stops.
- Remove brush head
- Remove the 5 screw caps from the bottom of the body brush handle and expose the screws.
- Use a screwdriver to remove the 5 screws.
- Take out the bottom housing and expose the printed circuit diagram board and battery assembly.
- Take the battery out and cut the connection strap from the printed circuit diagram board.
- Dispose of the battery safely.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S.

Warranty excludes:

- Brush heads

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around product causing premature wear and breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. *Applies to U.S. and Canadian customers' returns only. **Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:

Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. Or visit RemingtonProducts.com

Electrical Characteristics: BB1000 100-240V~ 50/60Hz 200mA

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
TM Trademark of Spectrum Brands, Inc.
© 2017 Spectrum Brands, Inc. 8/17 18313-00

Made in China T22-0005414-A