

REMINGTON™

CR4000



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits: Proof of ownership • Product protection • Product registration
• Special offers **Register online at: RemingtonProducts.com**

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store the appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not immerse the appliance in liquid. Do not use it near water in a bathtub, basin or other vessel.
- Keep long hair and loose clothing away from the product when in use.
- Do not switch the product on if the roller holder has been removed.

Warning: Keep the appliance dry.

- The Callus Remover is only designed for use on the feet.
- DO NOT use on any other part of the body.
- Only suitable for use on dry skin. DO NOT use on wet skin.
- DO NOT use on skin that is broken, sore or irritated. Avoid using it on warts or other protrusions.
- DO NOT use if you are diabetic or have poor blood circulation.
- If you experience any irritation or discomfort, stop using the product immediately.
- Do not use in the same area for more than 2-3 seconds at a time.

BATTERY SAFETY

Note: Remove batteries if the unit is not in use for long periods.

- 1 Non-rechargeable batteries are not to be recharged.
- 2 Rechargeable batteries are to be removed from the appliance before being charged.
- 3 Different types of batteries or new and used batteries are not to be mixed.
- 4 Do not short circuit the battery contacts.
- 5 Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way.

Key Features



- | | |
|------------------------------|------------------------------------|
| 1 Roller Holder | 6 Release Button for Roller Holder |
| 2 Coarse Roller (Purple) | 7 Battery Compartment Lid |
| 3 Extra Coarse Roller (Blue) | 8 Protective Cap (not shown) |
| 4 On/Off Switch | 9 Cleaning Brush (not shown) |
| 5 Handle | |

- The Callus Remover has been designed to gently remove hard, callused skin leaving feet silky smooth.
- The Callus Remover includes two rollers:
- Extra Coarse Roller (Blue): The extra coarse roller is designed to remove very hard callused skin.
- Coarse Roller (Purple): The coarse roller has a finer grain and is designed to remove and smooth hard skin

Getting Started

Be patient when first using your Callus Remover, as with any new product it may take a little while to familiarize yourself with the product. Take the time to acquaint yourself with your Callus Remover, as we are confident you will receive years of enjoyable use and complete satisfaction.

Inserting Batteries

- Your Callus Remover requires 2 'AA' alkaline batteries (included).
 - Make sure the product is turned off.
 - To open the battery compartment, slide the battery compartment lid downwards.
 - Insert the batteries into the battery compartment. Be sure to follow the guides shown in the battery compartment to insert the batteries correctly.
 - Slide the battery compartment lid upwards until it snaps closed.
- Note:** Your Callus Remover will not work if the batteries are inserted incorrectly.

Removing Batteries

- To open the battery compartment, slide the battery compartment lid downwards.
- Lift the batteries from the compartment.

Instructions for Use

ATTACHING AND REMOVING THE ROLLERS

- Choose the roller you wish to use.
- To remove the roller head, press the release button and lift the roller head off the handle.
- To attach the roller, place the roller holder on top of the handle, ensuring the wheels of the roller holder are aligned with the handle.
- Press the roller holder onto the top of the handle until you hear it 'click' and connect.

HOW TO USE

- Clean and dry the area you plan to treat.

Tip: Place a towel under your feet to catch any hard skin removed during treatment.

- Remove the protective cap from the roller head.
- To switch the Callus Remover on, slide the switch up and the roller will start to rotate.
- Glide the roller gently over the hard skin you wish to remove. Do not press too hard.
- After 2-3 seconds, stop and check the skin. Repeat until you have the desired effect.
- **DO NOT** use in the same area for more than 2-3 seconds at a time.
- If the skin becomes sore or inflamed, stop the treatment immediately.
- To switch the Callus Remover off, slide the switch downwards.
- After use, wipe or rinse your feet with warm water.
- Apply foot cream for smooth results.

REPLACING THE ROLLERS

- The rollers should last for several treatments.
- You should replace the rollers immediately if you see signs of damage, or it begins to take longer to achieve your normal results.
- Replacement rollers are available: SP-CR1.

Two Easy Ways to Order!

1. Call! U.S. residents call 1-800-392-6544
2. Order Online at RemingtonProducts.com

Cleaning and Maintenance

- To ensure long lasting performance of your Callus Remover, clean after each use.
- The easiest and most hygienic way to clean the roller head is by using the cleaning brush supplied.
- This product is not washable.
- Ensure the Callus Remover is turned off when cleaning.
- From time to time wipe the handle with a damp cloth.
- When not in use, store with the protective cap attached.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Warranty excludes:

- Rollers

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES

RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Remington Guarantees Satisfaction After 30 Days! Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

*Applies to U.S. customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.

2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).

4. Returns should be mailed prepaid (no collect returns accepted) to:

Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532

5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

TM Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 7/17 18322-00

Made in China

T22-0005424-A