

REMINGTON®

T-Series

Ultimate Precision Multigroomer

Use and Care Guide

PG3160



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

To reduce the risk of electric shock:

- Do not place or drop into liquid. This is a dry-only handle.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet.
- Do not charge in shower or sink. The charger should not be exposed to water.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the trimmer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then USB cable to computer or USB plug adaptor in an electrical outlet. To disconnect, turn all controls to OFF, then remove USB cable from power source, then detach cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Do not allow product to come in contact with water.


KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Feature Checklist

1. Reversible, Full Size T-Blade Trimmer Head
2. On/Off Slide Switch
3. 10-Length Adjustable Comb (1mm to 5mm)
4. 1.5mm (1/16")
5. 2.0mm
6. 2.5mm
7. 3mm (1/8")
8. 4.5mm
9. 6mm (1/4")
10. 9mm (3/8")
11. 12mm (1/2")
12. 15mm
13. USB Cable (not shown)
14. Storage Pouch (not shown)

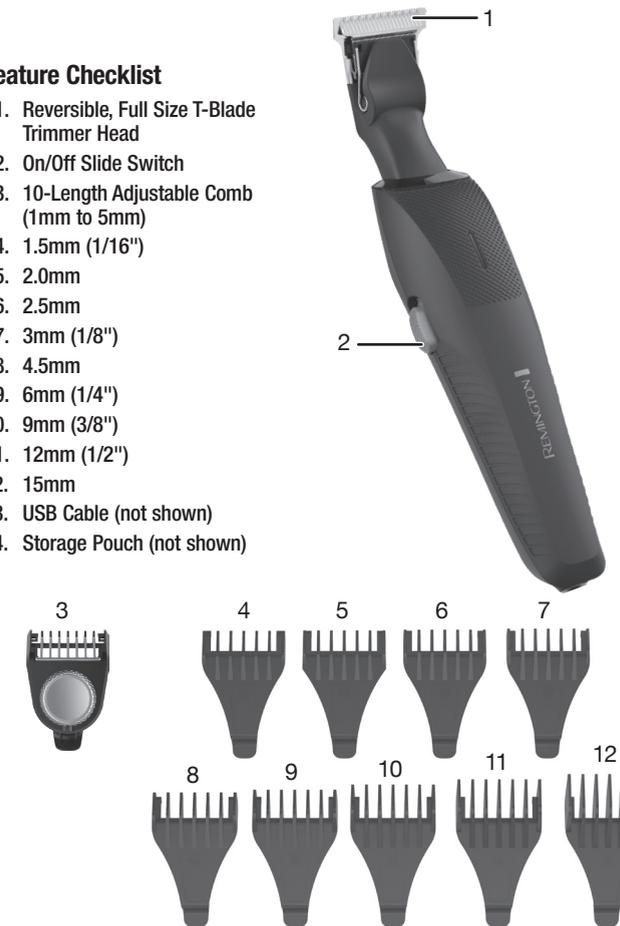

Before Using

CHARGING

- Before using your trimmer for the first time, fully charge the unit for 16 to 18 hours.
 - Run time from fully charged is up to 60 minutes.
1. Ensure the product is turned off.
 2. Connect the USB charging cable to the product. Plug into a USB port on a computer or a USB plug adaptor in an electrical outlet.
- Typical charging will take 16 hours.

Note: To preserve the life of your batteries, let them run out every 6 months then recharge for 16 to 18 hours.

WARNING: Do not charge the trimmer near water.

Instructions for Use

Note: This product is for cordless use only.

- Switch the product on by pushing up the on/off button. To turn it off push down the on/off button.

To Attach And Remove the Trimming Head

Note: Always ensure the trimmer is switched off before changing any attachments

The trimmer comes with the Precision T-Blade attached.

- To remove the T-Blade, pull upwards.
- The Precision T-Blade can be used facing forward or away from you for enhanced visibility and control (Reference image below).



Instructions for Use

Attaching and Removing Combs

- To attach, with the trimmer blade facing away from you, hook the guide comb on the front of the trimmer blade and push down to click into position.
- To remove, pull the tab on the back of the guide comb upwards and away from the trimmer blade.
- Use the trimmer without a comb for trimming hair close to the skin.

Before You Begin

- Ensure that blades are clean and oiled before each use.
- Comb facial hair with a fine comb before you start trimming.
- For best results, hairs should be dry and free of waxes or lotions before trimming.

To Thin and Taper the Beard/Moustache

- Attach a comb to the trimmer blade. If you are trimming for the first time start with the maximum trimming length.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimmer process, switch the unit off, pull the comb and brush the hair off.

Trimming Edge of Sideburns

- Hold the trimmer with the trimmer blade facing you.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.

Cleaning and Maintenance

After Each Use

- Turn the trimmer off.
- Release the head assembly from the trimmer body.
- Gently brush the remaining hairs away from the guide comb and trimmer blade.
- Rinse trimmer blade.
- Completely dry and oil trimmer blade.

Cleaning Cautions

- Do not use harsh or corrosive cleaners on the unit or their blades.
- At regular intervals, put a drop of lubricant onto the main trimmer head.

Storage

- Store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

Troubleshooting

The trimmer does not work when turned on:

- Trimmer must be charged for a full 16 to 18 hours initially.

Trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning and Maintenance section.

Trimmer does not hold charge:

- Fully discharge battery by running trimmer until it stops; then follow recharging instructions (see section on "Operating Your Trimmer").

Product Disposal

Battery Disposal

The PG3160 contains a NiMH battery. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

- The battery must be removed from the appliance before it is scrapped.
- Ensure the trimmer is discharged of all power.
- With the back side of the trimmer facing upwards, pry the panel off the unit to expose the fasteners.
- Remove the screws and pull the internal cover off the trimmer.
- Pry the small circuit board at the end of the trimmer out of the body.
- Pry up the main circuit board to expose the batteries.
- Pry the batteries from the trimmer body.
- Cut the leads which connect the batteries to the main circuit board and dispose of them properly.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked "Product Takeback: Please Recycle!"

To order accessories call 800-392-6544, visit your local retailer, or visit RemingtonProducts.com

Warranty

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

5VDC TYPE: RG001A

Questions or comments: Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com**.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

®/TM are owned by Spectrum Brands, Inc.
© 2020 Spectrum Brands, Inc. 7/20 27980

Made in China.
T22-7001687-A