

# REMINGTON®

**ALL-IN-ONE**  
Lithium Grooming Kit  
PG6125



**Use and Care Guide**

**Register Your New Product Today!**

By registering your new Remington® product, you will receive these important benefits:  
Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**

### DANGER

**To reduce the risk of electric shock:**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

### WARNING

**To reduce the risk of burns, fire, electric shock or injury to persons:**

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the mini shaver on your scalp.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

**SAVE THESE INSTRUCTIONS**

### Product Features

1. Full-Size Trimmer
2. Groomer Body
3. On/Off Switch
4. Beard and Stubble Combs: 3mm, 6mm, 9mm
5. Foil Shaver
6. Nose, Ear, and Eyebrow Trimmer
7. 10-Length Adjustable Comb
8. Adaptor (not shown)



### Before Using

Before using your Personal Groomer for the first time, charge the unit for 4 hours for optimal performance:

1. Ensure the product is turned off.
2. Connect the power adaptor cord to the product. Plug into electrical outlet.

### How To Use

**What Attachments to Use**

	Full Size Trimmer	Nose/Ear Trimmer	Hair Length Combs	Foil Shaver
Beard	x		x	
Beard line	x			x
Ear		x		
Eyebrow		x	x	
Mustache	x		x	
Nape of neck	x			
Nose		x		
Sideburns	x		x	x
Head Hair			x	

**Note:** this product is for cordless use only.

- Switch the product on by sliding the On/Off switch upward.

#### TO ATTACH AND REMOVE THE TRIMMING ATTACHMENTS

**Note:** Always ensure the groomer is switched off before changing any attachments.

- To attach place the desired trimming head on top of the groomer and rotate clockwise to lock into place.
- To remove rotate the trimmer head counter-clockwise until it unlocks and then lift off the groomer.

#### ATTACHING AND REMOVING FIXED GUIDE COMBS ON THE WIDE TRIMMER BLADE

**To Attach**

- With the trimmer blade facing away from you, hook front of comb onto blade teeth and push back end down until it clicks into position.

**To Remove**

- With the trimmer blade facing away from you, carefully push the tab on the back of the guide comb upwards and away from the trimmer blade.

## How To Use

### ATTACHING AND REMOVING ADJUSTABLE COMB ON THE WIDE TRIMMER BLADE

- To attach line up the comb rails and slot on the groomer until firmly secured. Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.
- To remove press and hold the adjustment button and push the comb up and off the groomer.

### BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

### TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the wide trimmer blade.
- Place either the adjustable comb or a fixed comb on the trimmer blade, select the desired length and switch on.
- Start trimming under the chin, following the jawbone line. Work toward the ear and upper beard line using an upward motion.

### TO TRIM EDGE OF BEARD OR MOUSTACHE

- Attach the trimmer blade.
- Hold the groomer with the cutting blade facing you.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

### TO TRIM SIDEBURNS

- Hold the groomer with the cutting blade facing you.
- Select the desired length on the adjustable comb or select the desired guide combs.
- Use light pressure and well-controlled movements to trim hair.

### TRIMMING THE NAPE OF YOUR NECK

- Attach the trimmer blade.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.

- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

### TO REMOVE HAIR FROM NOSE AND EAR

- Attach the nose, ear, eyebrow attachment.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

### TO REMOVE HAIR FROM EYEBROWS

- Attach the nose, ear, eyebrow attachment.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.
- Use short, well-controlled movements.

### USING THE MINI FOIL SHAVER

- Hold the groomer so the mini foil shaver gently touches your face.
  - Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note:** The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

### TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

## Cleaning, Care and Maintenance

**NOTE:** Always clean trimmer attachments regularly to ensure maximum performance and a proper operating life.

### DO NOT RINSE TRIMMER HANDLE.

### CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

### CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of power handle.

### CLEANING FOIL SHAVER

(Do NOT rinse nor oil foil shaver attachment as this is permanently lubricated.)

1. Remove attachment by pressing security latches on front of foil shaver.
2. Remove head, shake to remove excess clippings.
3. Replace attachment by gently snapping into place.

### OILING BLADES AND CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or visit [RemingtonProducts.com](http://RemingtonProducts.com).

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

*No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.*

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

### Remington Guarantees Satisfaction After 30 Days!

### Remington Men's Shave and Groom 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington® and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington® and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **[RemingtonProducts.com/60day](http://RemingtonProducts.com/60day)**.
3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

© Registered Trademark of Spectrum Brands, Inc.

**Questions or comments:** Call 800-736-4648 in the U.S. or visit **[RemingtonProducts.com](http://RemingtonProducts.com)**.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© 2016 Spectrum Brands, Inc. 8/16 Job# 16243-00

**Made in China**

**T22-0004582-A**

Contains a listed adaptor