

REMINGTON®

WETech™

Use and Care Guide

PG6250



Product Features

1. Full Size Trimmer Attachment
2. Head Release Buttons
3. Groomer Body
4. On/Off Switch
5. Body Hair Shaver Attachment
6. 5 Attachment Combs
[1.5mm (#0), 3mm (#1), 6mm (#2), 9mm (#3), 12mm (#4)]
7. Charge Clip
8. Clip Release
9. Adaptor (not shown)

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off groomer before placing in charger.
- Do not charge in shower or sink. The charger should not be exposed to water.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the mini shaver on your scalp.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the groomer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Before Using

- Included is a body groom head, full size trimmer and combs. The groomer and attachments are wet/dry and can be used in the shower.
- After being used in water, it is recommended to dry off the groomer and attachments.

CHARGING

- Before using your Personal Groomer for the first time, charge the unit for 16-18 hours.

NOTE: When fully charged, the groomer will provide up to 70 minutes of cordless use.

- The blue LED will turn on when charging.
- The blue LED will stay on while unit is plugged in.
- Using the charge clip provided, slide unit until clip "clicks" into position.
- To release the charger from the unit, hold the clip release tab on the charging clip and slide the unit up.

WARNING: Do not charge the groomer in the shower or near water.

WARNING: Dry off any water and moisture before charging.

What Attachments to Use

	Full Size Trimmer	Body Hair Shaver Attachment
Beard	x - with combs	
Mustache	x - with combs	
Nape of neck	x	
Body	x	x
Head hair	x - with combs	

How to Use

Note: This product is for cordless use only.

1. Select attachment that best fits your personal grooming needs.
2. Place attachment atop Groomer Body. Secure by carefully inserting until it clicks into place.
3. To remove attachment, press the head release buttons on the side and pull the attachment away from body of groomer.
4. Push On/Off Switch to power the Personal Groomer.

Cleaning, Care, and Maintenance

- The groomer can be stored in the shower. It is recommended to dry off excess water and moisture after use.
- The groomer should not be submerged in water, bath or sink.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse ONLY the attachment under warm running water. Do NOT use hot water as this might cause damage.

NOTE: Always clean trimmer attachments regularly to ensure maximum performance and a proper operating life.

OILING TRIMMER BLADES AND CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades of the full size trimmer attachment 1x monthly. Using only light-grade oils (e.g. sewing machine oil), spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.
- Do not oil the body hair shaver attachment as it is permanently lubricated.

QUICK CLEANING BODY HAIR SHAVER ATTACHMENT

To quickly clean body hair shaver attachment after each use, rinse it under running water while the motor is on.

- Do not oil the body hair shaver attachment as it is permanently lubricated.

DEEP CLEANING BODY HAIR SHAVER ATTACHMENT (monthly, or as needed)

1. Remove attachment head by pressing security latches on sides of foil shaver and pulling head upward.
2. Shake to remove excess clippings.
3. Replace attachment head onto groomer body by gently snapping into place.

Product Disposal

The PG6250 contains a NiMH battery. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the NiMH battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do no short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

1. Make sure the appliance is unplugged.
2. Remove attachment head from trimmer (Press release buttons and pull head straight away from trimmer body).
3. Using a small screwdriver pry the inner body (white out from the main body).
4. The inner body containing the motor, circuit and battery will slide out from main body.
5. Cut the wires holding the battery.
6. Remove the battery of the device.
7. Dispose of batteries.

U.S. and Canadian residents: To order accessories call 800-392-6544, visit your local retailer, or visit RemingtonProducts.com.

Warranty

Limited Three-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a three-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will

replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THREE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com.

Remington Guarantees Satisfaction After 30 Days! Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® brand Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

100-240Vac 50/60Hz

TYPE: PG07A

® Registered Trademark and TM Trademark of Spectrum Brands, Inc.

Questions or comments: Call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.

255 Longside Drive, Unit 101

Mississauga, ON L5W 1L8

© 2020 Spectrum Brands, Inc. 12/19 27232

Made in China. T22-7000282-C

Contains a listed adaptor