

REMINGTON®

Virtually Indestructible
Lithium Grooming Kit
PG6855



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

SAVE THESE INSTRUCTIONS

Product Features

1. Full-Size Trimmer
2. Groomer Body
3. On/Off Switch
4. Nose/Ear Trimmer
5. 10-Length Adjustable Comb
6. Beard and Stubble Combs: 1.5mm, 3mm, 6mm, 9mm, 12mm
7. Adaptor (not shown)
8. Travel Pouch (not shown)



Before Using

Before using your Personal Groomer for the first time, charge the unit for 4 hours for optimal performance:

1. Ensure the product is turned off.
2. Connect the power adaptor cord to the product. Plug into electrical outlet.
 - Runtime from fully charged is up to 90 minutes.
 - Charge time to charged is 4 hours. Includes a 5 minute quick charge function.

How to Use

What Attachments to Use

	Full Size Trimmer	Nose/Ear Trimmer	Hair Length Combs
Beard	x		x
Beard line	x		
Ear		x	
Eyebrow		x	x
Mustache	x		x
Nape of neck	x		
Nose		x	
Sideburns	x		x
Head Hair			x

Note: this product is for cordless use only.

- Switch the product on by sliding the On/Off switch upward.

ATTACHING AND REMOVING THE TRIMMING ATTACHMENTS

Note: Always ensure the groomer is switched off before changing any attachments.

- To attach place the desired trimming head on top of the groomer and rotate clockwise to lock into place.
- To remove rotate the trimmer head counter-clockwise until it unlocks and then lift off the groomer.

ATTACHING AND REMOVING BEARD/STUBBLE COMBS ON FULL-SIZE TRIMMER

To Attach

- With the trimmer blade facing away from you, hook front of comb onto blade teeth and push back end down until it clicks into position.

To Remove

- With the trimmer blade facing away from you, carefully push the tab on the back of the guide comb upwards and away from the trimmer blade.

How to Use

ATTACHING AND REMOVING ADJUSTABLE COMB ON THE FULL-SIZE TRIMMER

- To attach line up the comb rails and slot on the groomer until firmly secured. Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.
- To remove press and hold the adjustment button and push the comb up and off the groomer.

BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the Full-Size trimmer.
- Place either the adjustable comb or a fixed comb on the trimmer blade, select the desired length and switch on.
- Start trimming under the chin, following the jawbone line. Work toward the ear and upper beard line using an upward motion.

TO TRIM EDGE OF BEARD OR MOUSTACHE

- Attach the Full-Size trimmer.
- Hold the groomer with the cutting blade facing you.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

TO TRIM SIDEBURNS

- Hold the groomer with the cutting blade facing you.
- Select the desired length on the adjustable comb or select the desired guide combs.
- Use light pressure and well-controlled movements to trim hair.

TRIMMING THE NAPE OF YOUR NECK

- Attach the Full-Size trimmer.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.

- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

TO REMOVE HAIR FROM NOSE AND EAR

- Attach the Nose/Ear trimmer.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

TO REMOVE HAIR FROM EYEBROWS

- Attach the Nose/Ear trimmer.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.
- Use short, well-controlled movements.

TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

Cleaning, Care and Maintenance

NOTE: Always clean trimmer attachments regularly to ensure maximum performance and a proper operating life.

DO NOT RINSE TRIMMER HANDLE.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of power handle.

OILING BLADES AND CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.

Warranty

Lifetime Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for the life of the product. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

Warranty excludes:

- The blades are not included in lifetime warranty

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THE LIFE OF THE PRODUCT.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington® and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington® and postmarked no later than 60 days after purchase of the Remington® branded product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington®, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz TYPE: PG6855

® Registered Trademark of Spectrum Brands, Inc.

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

© 2019 Spectrum Brands, Inc. 4/19 24964

Made in China

T22-0005507-C

Contains a listed adaptor