

REMINGTON®

CORDLESS HAIRCUT KIT

HC9000



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Make sure the cord is disconnected from the clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.

SAVE THESE INSTRUCTIONS

PRODUCT FEATURES

HC9000 REMINGTON CORDLESS HAIRCUT KIT

Thank you for purchasing your new Remington® Haircut Kit. Inside this manual you will find tips on using and caring for your hair clipper.



KEY PARTS

1. On/Off Switch
2. Comb Length Setting Indicator
3. Adjustable Comb (3-15mm)
4. Adjustable Comb (18-30mm)
5. Integrated Hair Texture Function
6. Comb Length Adjustment Wheel
7. Charging Indicator Light

Also Includes:

- Scissors
- Barber Comb
- Travel Pouch
- Lubricating Oil
- Cleaning Brush
- Power Adaptor

HC9000 SPECIFICATIONS

Power System	Cord/Cordless
Full Charge Time	16 Hours
Run Time	45 Minutes
Indicators	Charging
Worldwide Voltage	Yes

Power System

Cord/Cordless – can be used with or without the power cord.

Charging Indicator

Red light that glows when the hair clipper is being charged.

Voltage Type

Worldwide Voltage – automatically adapts to an outlet voltage between 100-240V.

CHARGING YOUR CLIPPER

Cordless Use

- Before using your hair clipper for the first time, charge it for 16 hours. Run time from fully charged is up to 45 minutes.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the power outlet. The charging LED light will display on the clipper.
- If the product is not going to be used for an extended period time (2-3 months), unplug it from the power outlet and store.
- Fully recharge your hair clipper when you would like to use it again.
- It is not recommended to use this hair clipper directly from the power outlet when it has been fully charged. However, while using the hair clipper in cordless mode, if there is a noticeable drop in power, you can use the hair clipper directly from the power outlet.
- To preserve the life of your batteries, let them run out every six months then recharge for 24 hours.

Corded Use

- Connect the charging adaptor to the product and then to the power outlet.
- When the cord is connected to the power outlet, a charging LED light is displayed on the hair clipper.
- **CAUTION:** Extended corded-only use will result in reduced battery life.

HOW TO USE

Before Starting to Cut

1. Inspect the hair clipper making sure that it is free from hair and dirt.
2. Ensure that the hair is thoroughly dry and tangle free.
3. The blades on your hair clipper should be oiled before every haircut.

Lubricating the Hair Clipper Blades

Place a few drops of oil on the teeth of the blades. Use only the light grade oil supplied or a suitable alternative like sewing machine oil. Do not use hair oil, grease or any oil mixed with kerosene or any solvent as the solvent will evaporate and leave the thick oil, slowing the blades.

If oil is not applied to the blades or only a small amount of oil is applied, this may cause cutting problems. Blades will wear prematurely and not cut properly if they are not sufficiently lubricated. There may also be a pulling sensation on the hair.

Instructions for Hair Cutting

NOTE: For even cutting, allow the trimmer comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum length trimmer comb, until you know how short you would like your hair to be.

Comb Settings

MARK	LENGTH SETTING	
	Comb 1 - Short	Comb 2 - Long
1	3mm	18mm
.	4.5mm	19.5mm
3	6mm	21mm
.	7.5mm	22.5mm
5	9mm	24mm
.	10.5mm	25.5mm
7	12mm	27mm
.	13.5mm	28.5mm
9	15mm	30mm

HOW TO USE (CONTINUED)

NOTE: The comb guide lengths described for use in the steps below are an example only, if you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.

Step 1 - Nape of the Neck

1. Use 3mm or 6mm setting.
2. Hold the hair clipper with the blade teeth pointing upwards. Begin starting at the center of the head at the base of the neck.
3. Slowly lift the hair clipper, working upwards and outwards through the hair, trimming just a little at a time.

Step 2 - Back and Side of the Head

With the 9mm or 12mm setting in place, cut the hair at the back and sides of the head using upward strokes.

Step 3 - Sideburns

With the 9mm or 12mm setting in place, trim sideburns.

Step 4 - Top of the Head

1. With the setting of your choice, cut the hair on top of the head against the direction in which the hair normally grows.
2. For longer hair on top, use scissors. Lift the hair on top of the head with styling comb. Cut over the styling comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
3. Always work from the back of the head.

Step 5 - The Finishing Touches

1. Use the hair clipper without an attachment comb for close trimming around the base and sides of the neck.
2. To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed hair clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

CLEANING AND MAINTENANCE

To ensure long lasting performance of your hair clipper, clean the blades and unit regularly.

NOTE: Ensure that the hair clipper is turned off and unplugged when cleaning.

After Each Use

1. Ensure the hair clipper is switched off and disconnected from the power outlet household power outlet.
2. Brush the accumulated hair from the blades. Do not submerge the hair clipper in water.
3. To clean the body of the unit, wipe with a damp cloth and dry immediately.
4. Gently brush the remaining hairs away from the hair clipper comb and hair clipper blade.

Every Six Months

At regular intervals the blade set should be removed and cleaned.

1. Ensure that the hair clipper is empty of power, is switched off and disconnected from the mains household power outlet.
2. Remove the comb attachment.
3. Hold the hair clipper in one hand so that the blades are at the top, and the front of the hair clipper is facing you.
4. Place your thumb of the opposite hand underneath the blades at the front of the unit, hold the back of the blade set with your fore finger and middle finger and firmly press upwards with your thumb. The blade set will detach from the hair clipper.
5. Brush the accumulated hair from the hair pocket and blades.
6. Replace the blade set by inserting the notch (on the inside at the bottom of the blade set) into the groove of the hair pocket and firmly push down with the palm of your hand until you hear an audible 'click' and the blade set is locked into place.

Storage

When not in use, unplug the hair clipper and store it out of reach of children in a safe dry place. Never wrap the cord around the hair clipper as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections.

TROUBLESHOOTING

The hair clipper does not work when turned on:

Hair clipper must be charged for a full 16 hours, or use hair clipper while plugged into wall.

Hair clipper cutters do not move:

The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintenance section.

Hair clipper does not hold charge:

Fully discharge the battery by running hair clipper until it stops; then follow recharging instructions in Charging Your Clipper section.

THIS PRODUCT IS NOT SUITABLE TO USE IN THE BATH OR SHOWER.

PRODUCT DISPOSAL

When your rechargeable clipper reaches the end of its useful life, the batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

The following procedure should be followed for battery removal:

- Ensure device is unplugged from any electrical outlet.
- Remove screws from back housing.
- Pull housings apart.
- Remove internal structure to access batteries.
- Remove batteries from circuit board.

THIS DEVICE USES EITHER NICKEL METAL HYDRIDE (NiMH), OR NICKEL CADMIUM (Ni-Cd) RECHARGEABLE BATTERIES (see side of removed battery for indication of type). **CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS.** Do not put in fire or mutilate, as the battery may burst or release toxic materials. Do not short-circuit, as this may cause burns.

Spectrum Brands, Inc. is a proud participant in the EPA-approved Rechargeable Battery Recycling *Call2Recycle*SM, which collects and recycles these batteries at the end of their useful life when taken out of services in the United States or Canada. The RBRC[®] program provides a convenient alternative to placing used batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERYSM or visit www.call2recycle.org for information on battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc.'s involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

WARRANTY

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. and Canada.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington[®] branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington[®] branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington[®] branded Men's Shave and Groom product:
 - a. The Remington[®] product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

100-240VAC 50/60Hz **Type: HC9000**

Questions or comments: Call 800-736-4648 in the U.S. or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

® Registered Trademark of Spectrum Brands, Inc.

© 2018 Spectrum Brands, Inc. 7/18 22366

Made in China.
T22-7000328-A

Contains a listed adaptor