

REMINGTON®

Use and Care Guide

MB4850



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Do not reach for a plugged-in trimmer that has fallen into water. Unplug immediately.
- Do not place or store trimmer where it can fall or be pulled into a tub or sink while plugged in.
- Except when charging, always unplug this trimmer from the electrical outlet immediately after using.
- Unplug this trimmer before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Do not crush, disassemble, expose to excessive heat or incinerate the appliance.
- Your trimmer should never be left unattended when plugged in, except when charging your rechargeable trimmer.
- Close supervision is necessary when this trimmer is used by, on, or near children or persons with certain disabilities.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this trimmer if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use this trimmer with a damaged or broken cutting unit, as facial injury may occur.
- Always attach plug to trimmer, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Always store your trimmer and adapter in a moisture-free area. Make sure the cord is disconnected from the trimmer.
- Keep trimmer out of extreme heat and cold. Product must be stored at 0° F to 120° F.

- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- For household use only.
- Do not store in tub or shower.
- Do expose the trimmer to liquids other than water.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features



Feature Checklist

1. Beard Blade
2. Stubble Blade
3. Goatee/Detail Blade
4. Quick Release Button
5. Zoom Wheel
6. Length Indicator
7. Adjustable Comb (1.5-18mm)
8. On/Off Switch
9. Charging Indicator
10. Power Port
11. Cleaning Brush
12. Adapter (not shown)

Before Using

Before Using Your Trimmer

- Before using your trimmer for the first time, charge the unit 4 hours for optimal performance.
- Make sure your face and facial hair are clean and dry.

- Double check that the Adjustable Comb is the desired position. Cutting length is visible in Length Indicator.

Quick Release Blades

Quick Release Blades

- The blade assembly can be removed to change blades or for easy cleaning.
- To remove blade assembly, press the Quick Release Button and pull blade away from trimmer body.
- To replace blade, align the guide rails of the blade assembly with the slots on the trimmer body and snap into place. Make sure blade is secure before turning on trimmer.

Operating Your Trimmer

Charging/Recharging

To recharge this trimmer, use only the charging adapter provided.

- Turn the trimmer off. Insert the adapter plug into the Power Port, then plug the adapter into an electric wall outlet. The Charging Indicator will blink, indicating unit is charging. A full charge will take approx. 3 – 5 hours. The light will stop blinking and remain illuminated to indicate that the trimmer is fully charged.
- You may leave your trimmer plugged in between uses. However, if the trimmer is not going to be used for an extended period (2 weeks), unplug the unit and recharge when resuming use.

- Charge the trimmer at temperatures between 40 – 90°F, to avoid adversely affecting battery life.

- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 3–5 hours.

- Lithium (LiFePO₄) batteries are included in this trimmer (see battery removal section for proper disposal of batteries).

- In cordless mode, your trimmer will run for 120+ minutes before additional charging is required.

Corded Operation

In the event that you run out of cordless power, this trimmer can be plugged in and used immediately in corded mode to complete your trim.

Zoom Wheel and Removable Adjustable Comb

NOTE: Adjustable Comb must be attached to the trimmer in order to use the Zoom Wheel.

The Zoom Wheel and Adjustable Comb ensures precise trimming and has nine adjustable positions:

Setting	Beard Style	Length
1	Stubble look	1.5mm
2		2.5mm
3		4mm
4	Medium	5.5mm
5		7mm
6		9mm
7	Long	11mm
8		14mm
9		18mm

- To adjust, roll the Zoom Wheel toward the top of the trimmer for a longer length, and toward the bottom of the trimmer for a shorter length. The wheel will click into one of nine positions.
- Begin trimming at one of the longest settings 8 or 9 to avoid accidentally trimming hair too short. As you become familiar with the settings, you can then select your desired length setting.

Adjustable Comb

Remove Adjustable Comb if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck, or if you want to clean cutter assembly.

To remove:

- Be sure the trimmer is in OFF position.
- While holding trimmer in one hand, and holding the Zoom Wheel to prevent it from turning, gently pull the Adjustable Comb away from the trimmer. The comb can be removed and replaced on any setting.

To replace:

- Be certain trimmer is in OFF position.
- While holding the trimmer in one hand, and holding the Zoom Wheel to prevent it from turning, slide the comb over the top of the trimmer until it “clicks” into position.

NOTE: The Adjustable Comb can only be placed on the trimmer one way; if it does not fit properly, remove and reverse it.

How to Use

Trimming Beards

■ Before you begin, comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.

■ Determine how much hair you want to cut and position the hair length selector accordingly. Remember, until you are familiar with using the trimmer, it is always better to select a longer hair setting initially in order not to trim too much hair.

To Trim the Beard's Hair Length

■ Make sure Adjustable Comb and Beard Blade is on.

■ Turn the trimmer so the front of the cutting unit (Zoom Wheel side) is facing away from you.

■ Start trimming under your chin and, following your jawbone line, work toward your ear and upper beard line using an upward motion. Allow the Adjustable Comb to follow the contours of your face. You may trim either against or with the direction of beard growth, whichever is preferred.

To Define the Beard Line

■ Remove Adjustable Comb.

■ Hold trimmer vertically with cutting blades facing you.

■ Start with edge of beard line. With the cutting blades resting lightly against your skin, use motions towards edge of beard line to trim it to desired location in facial area and away from beard in neck area.

■ For trimming in tight spots or small areas attach Goatee Blade.

Creating the “Stubble Look”

■ Adjustable Comb should be on and set to position 1 (1.5 mm) or 2 (2.5 mm).

■ Hold trimmer horizontally with the cutting unit facing either up or down.

■ Trim hairs using an upward or downward motion against or with the direction of hair growth, whichever is preferred.

■ For an even closer “stubble look,” remove the Adjustable Comb and repeat the previous two steps using the Stubble Blade.

To Trim Sideburns

■ Comb sideburns following the direction of your hair growth.

■ Be certain Adjustable Comb attachment is on.

■ Hold trimmer vertically with front of trimmer facing you.

■ Trim sideburns using a downward motion.

Trimming the Nape of Your Neck

■ You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.

■ Remove the adjustable comb: the beard blade or stubble blade may be used.

■ Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.

■ Using your other hand, hold the trimmer horizontally to the base of your neck with the cutting unit facing up, and move the trimmer along the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

■ Use the hand mirror to inspect the results of the operation and ensure all hairs along the nape of the neck have been trimmed.

Cleaning and Maintenance

Cleaning and Maintaining Your Trimmer

Clean your trimmer regularly to ensure that the unit's operating life is not prematurely shortened.

■ Unplug adapter from wall outlet and insure that your trimmer is turned off.

■ Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the unit's main body.

■ Remove Adjustable Comb. Tap or blow out any excess hairs that may be on the comb.

■ Use cleaning brush to brush away excess hair clippings from trimmer blade.

■ The removable blades and trimmer body can be rinsed under water. Rinse blade and/or body under warm running water for several seconds, making sure hair debris is removed. Dry any excess water that may remain on blade before reattaching. See "Quick Release Blades" for information on detaching and reattaching blade assembly.

■ If blade is rinsed, it is recommended to add 1 or 2 drops of sewing machine oil to the blade.

Troubleshooting

The trimmer does not work when turned on:

■ Trimmer must be charged for a full 4 hours initially.

Trimmer cutters do not move:

■ The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintenance section.

Trimmer does not hold charge:

■ Fully discharge battery by running trimmer until it stops; then follow recharging instructions (see section on "Operating Your Trimmer").

Battery Removal and Disposal

Battery Disposal

This trimmer contains two Lithium Iron Phosphate (LiFePO₄) batteries. These batteries must be disposed of properly and responsibly according to your state and local regulations.

Battery Removal Instructions

1. Remove the blade cartridge from the trimmer.
2. Remove the 4 screws from the back side of the trimmer body.
3. Pry apart the two halves of the trimmer body to expose the internals.
4. With the top half of the trimmer body removed and the internals facing upward, pull the end of the charge port upward to release the battery enclosure.
5. Cut the red and black wires which lead into the battery enclosure
6. Pry up the small plastic plate on the end of the battery enclosure that the red and black wires lead into and move it out of the way
7. Remove the 2 screws from the end of the battery enclosure
8. Pry off the battery enclosure end cap
9. Pull firmly on what remains of the red and black wires to remove the batteries and circuit board from the battery enclosure
10. Firmly pull the individual batteries away from the circuit board to remove them from the circuit board and better expose the red and black battery leads.
11. Cut the remaining red and black battery leads to fully disconnect the batteries
12. Dispose of the batteries safely and responsibly according to your state and local regulations and to the warnings section of this instruction book

U.S. residents: To order accessories call 800-392-6544, visit www.RemingtonProducts.com, or visit your local retailer.

Canadian residents: To order accessories, please call 800-268-0425, visit www.RemingtonProducts.com, or visit your local retailer.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. is a global consumer products company with a diverse portfolio of world-class brands, including Remington-branded electric shavers. Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

*Applies to US and Canadian customers' returns only.
**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:

- a. The Remington® product;
- b. The original sales receipt indicating price and date purchased; and
- c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.

3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

100-240 VAC 50/60 Hz

Questions or comments:

Call 800-736-4648 in the US, or 800-268-0425 in Canada, or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.
131 Saramia Crescent
Vaughan, ON L4K 4P7

© Registered Trademark of Spectrum Brands, Inc.
© 2015 Spectrum Brands, Inc. 6/15 13051-00
Made in China.

T22-0003524

Contains a listed adaptor