

REMINGTON®

Stubble and Detail Kit

Use and Care Guide

MB4900



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

To reduce the risk of electric shock:

- Do not place or drop into liquid other than water.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not charge product while wet. Dry off trimmer before connecting to charger.
- Do not charge in shower or sink. The charger should not be exposed to water.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use the foil shaver attachment on your scalp.
- Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Make sure the cord is disconnected from the trimmer when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.
- Do not allow product to come in contact with water while plugged in.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Feature Checklist

1. T-Blade
2. On/Turbo/Off button
3. Fuel gauge
4. Travel case
5. Foil Shaver Attachment
6. Precision comb
7. Guide comb, 1.5mm (#0)
8. Guide comb, 3mm (#1)
9. Guide comb, 6mm (#2)
10. Guide comb, 9mm (#3)
11. Guide comb, 12mm (#4)
12. Adaptor
13. Cleaning brush
14. Blade oil



Before Using


CHARGING

- Before using your trimmer for the first time, fully charge the unit for 4 hours.
- Ensure the product is switched off.
- Connect the adaptor to the product and then to the power outlet.
- Typical charging will take 4 hours.
- Run time from fully charged is up to 5 hours of typical use.
- Turbo mode uses up the charge more quickly than normal mode.

Note: To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

WARNING: Do not charge the trimmer in the shower or near water.

FUEL GAUGE DISPLAY OF CHARGE LEVELS

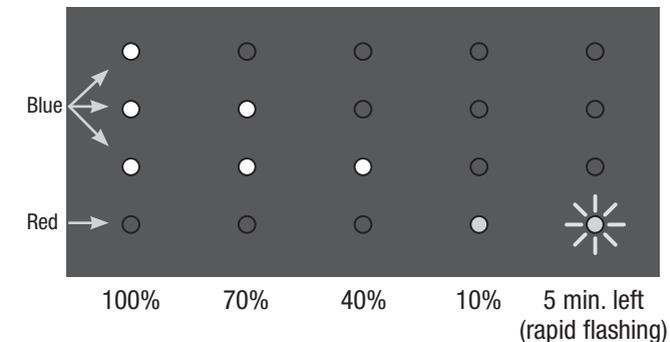

Instructions For Use

- Switch the product on by pressing the On/Turbo/Off button once for normal mode, again for turbo mode, and again to turn it off
- Turbo mode is intended for thick beards or heavier areas of facial hair.

To Attach And Remove the Trimming Attachments

Note: Always ensure the trimmer is switched off before changing any attachments

- To attach, slide the T-blade head onto the body until it clicks into place.
- To remove, press on the eject symbol on the back of the head and slide forward. For the T-Blade, make sure the blade is facing away from you.
- The foil shaver attachment has a release button. To remove, press then slide off.

Precision Comb

- The precision comb can be adjusted to give you length settings of 1.0mm to 5.0mm by turning the wheel to the desired length.
- Turn the wheel clockwise for longer length and counterclockwise for shorter lengths. The wheel has an indicator that points to the length setting.

Attaching and Removing Combs

- To attach, with the trimmer blade facing away from you, hook the guide comb on the front of the trimmer blade and push down to click into position.
- To remove, pull the tab on the back of the guide comb upwards and away from the trimmer blade.
- Use the trimmer without a comb for trimming hair close to the skin.

Before You Begin

- Ensure that blades are clean and oiled before each use.
- Comb facial hair with a fine comb before you start trimming.
- For best results, hairs should be dry and free of waxes or lotions before trimming.

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

Instructions For Use

To Thin and Taper the Beard/Moustache

- Attach a comb to the trimmer blade. If you are trimming for the first time start with the maximum trimming length.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimmer process, switch the unit off, pull the comb and brush the hair off.

Trimming Edge of Sideburns

- Hold the trimmer with the trimmer blade facing you.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.

Using the Shaver

- Attach the foil shaver.
- Use short, well-controlled movements. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

Note: always trim your facial hair before shaving.

TRAVEL LOCK FEATURE

Model MB4900 is equipped with a Travel Lock feature, intended to prevent the trimmer from turning on and discharging accidentally while packed in luggage.

To Set the Travel Lock:

1. Depress and hold the on switch for 3 seconds. The trimmer will turn on, then will shut off after the 3 seconds. The LED display will flash 4 times to indicate the lock is set.
2. While the travel lock is set, if the on switch is pressed, the LED display will flash 4 times to indicate the trimmer is in travel lock mode.

To Unlock the Travel Lock:

1. Depress and hold the on switch for 3 seconds. The LED display will flash 3 times while the button is being held and then the trimmer will turn on.

Cleaning and Maintenance

After Each Use

- Turn the trimmer off.
- Release the head assembly from the trimmer body.
- Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.
- To remove debris, the blades can be rinsed under water while running.
- Completely dry and oil trimmer blade.

Cleaning Cautions

- Do not use harsh or corrosive cleaners on the unit or their blades.
- Never use the cleaning brush on the foils as damage may occur.
- At regular intervals, put a drop of lubricant onto the shaving head and the main trimmer head.

Storage

- Store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

Troubleshooting

The trimmer does not work when turned on:

- Trimmer must be charged for a full 4 hours initially.

Trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning and Maintenance section.

Trimmer does not hold charge:

- Fully discharge battery by running trimmer until it stops; then follow recharging instructions (see section on "Operating Your Trimmer").

Product Disposal

Battery Disposal

The MB4900 contains a lithium-ion battery. To ensure proper disposal of the product, please refer to the battery removal instructions below.

When your rechargeable trimmer reaches the end of its useful life, the Lithium-Ion battery must be removed from the product and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the product with batteries.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

- The battery must be removed from the appliance before it is scrapped.
- Ensure the trimmer is discharged of all power.
- With the back side of the trimmer facing upwards, pry the panel off the unit to expose the fasteners.
- Remove the screws and pull the internal cover off the trimmer.
- Pry the small circuit board at the end of the trimmer out of the body.
- Pry up the main circuit board to expose the batteries.
- Pry the batteries from the trimmer body.
- Cut the leads which connect the batteries to the main circuit board and dispose of them properly.

U.S. residents: To order accessories call 800-392-6544, visit RemingtonProducts.com, or visit your local retailer.

Canadian residents: To order accessories, please visit RemingtonProducts.com, or visit your local retailer.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada or visit RemingtonProducts.com.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada or visit RemingtonProducts.com.

Performance Guarantee

Remington Guarantees Satisfaction After 30 Days!

Remington Men's Shave and Groom 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded Men's Shave and Groom product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

*Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
 2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded Men's Shave and Groom product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
 3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
 4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
 5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
 6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
 7. Please allow 4-6 weeks to receive your refund by check.
- Questions or comments:** Call 800-736-4648 in the US or 800-268-0425 in Canada or visit **RemingtonProducts.com**.

100-120 VAC 50/60 Hz

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.
131 Saramia Crescent
Vaughan, ON L4K 4P7

© Registered Trademark of Spectrum Brands, Inc.
© 2016 Spectrum Brands, Inc. 2/16 14553-00
Made in China.
T22-0004001-A

Contains a listed adaptor