

REMINGTON®

DETAIL TRIMMER

NE 3000 Series

Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits: Proof of ownership • Product protection • Product registration
• Special offers Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used

- by, on, or near children or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store the appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with damaged or broken cutters, as injury may occur.
- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the trimmer more than 1/4" (6mm) into your nose or ear. Foreign objects should not come into contact with your ear drum.

Use & Care

Inserting the Battery

All Remington® Nose and Ear trimmers run on one "AA" ALKALINE battery.

1. To open the battery compartment, turn the base of the unit approximately 1/4 inch counterclockwise and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1/4 inch clockwise to lock it into place.

Battery cautions

- Use of non-alkaline batteries will impair the unit's operating performance.
- Battery should not be left in the unit if the unit is not in use for long periods.

- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

Changing the Attachment Heads (if applicable)

Some models have interchangeable attachments. You may want to use the rotary head to trim nose hairs, the linear head for ear and eyebrow hairs, and the linear for sideburns and necklines.

To change heads:

1. Turn the trimmer off.
2. Detach cutting head by turning it counterclockwise to the unlocked position and pulling it off.
3. Once the previous head is removed, attach the other head by placing it on top of the unit and turning it clockwise to the locked position.

Turning on your trimmer:

The on/off switch is integrated into the battery cap.

1. Rotate the battery cap clockwise to turn on.
2. To turn off, simply rotate the battery cap, counterclockwise, back to the off position.

Cleaning Your Trimmer

Your nose and ear trimmer is designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmer, follow these simple cleaning and lubricating tips:

After each use, brush or blow accumulated hair from the cutting unit.

Rinsing Your Trimmer

- Your Remington® trimmer can be rinsed with cool or warm water. Just hold the unit's head under the faucet - it is not necessary to remove the head first. Do not use hot water.
- If the trimmer needs additional cleaning, the cutting head can be removed by turning it 1/4 inch counterclockwise and pulling it off. Then blow out the accumulated hair or rinses it more thoroughly under running water.
- Afterward, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1/4 inch clockwise until it locks into place

Lubricating the cutters

- After rinsing the unit, apply a drop or two of mineral oil or baby oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Warranty excludes:

- Cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

® Registered Trademark of ROVICAL, Inc.

Questions or comments: Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit www.RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Madison, WI 53711
Dist. by: Spectrum Brands Canada, Inc.
Mississauga, ON L5L 0A1

© 2010 ROVICAL, INC 03/10 Job #CS38168

**Manufactured to Remington's specifications in the PRC.
T22-28568**