

REMINGTON®

T-Series

Ultimate Precision Detail Trimmer

Use and Styling Guide

NE3160



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using your personal groomer, basic precautions should always be observed, including the following. Read all instructions before using this groomer.

READ ALL INSTRUCTIONS BEFORE USING.

WARNING

To reduce the risk of burns or injury:

- This appliance is for household use only.
- This appliance should never be left unattended when it's running.
- Close supervision is necessary when this appliance is used on or near children or invalids.
- Use the groomer only its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this groomer with a damaged or broken cutting unit, as injury may occur.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- Do not attempt to recharge alkaline, heavy-duty or regular batteries in battery charger.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

SAVE THESE INSTRUCTIONS




This trimmer may be used in a bath or shower.

Your New Trimmer

Before Using Your Trimmer

- Beard, mustache, or sideburn hairs should be dry. Avoid using lotions before using your trimmer.
- Be certain hair length attachment is at the desired setting. When first using, you may want to begin on the highest setting (longest hair) to prevent trimming off too much hair initially.
- Comb hairs outward so they are at their maximum height and facing in the same direction.
- Clean and lubricate cutter blades regularly (see Maintenance section).
- Never use trimmer with damaged or broken cutter units.

For assistance or help, call our customer service at 1-800-736-4648.

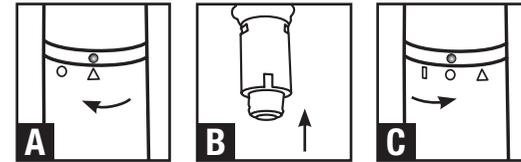

Inserting the Battery

This Remington® trimmer runs on one "AA" ALKALINE battery.

1. To open the battery compartment, turn it counterclockwise until the raised dot lines up with the triangle (A) and pull it off.
2. Insert one AA battery, with the positive end first, into the main unit. (B)
3. Slide battery cap back on, lining up the raised dot and the triangle.
4. Rotate battery cap (clockwise) to the OFF position, with the raised dot lined up with the 0. (C)

Battery Cautions

Use of any batteries other than alkaline will negatively affect the unit's operating performance. Batteries should not be left in the unit if the unit is not in use for long periods. To prevent battery corrosion the unit should be kept in a dry environment. Dead batteries should be removed immediately and disposed of properly. Do not use rechargeable batteries. The lower voltage in recharged batteries impairs the performance of the cutting unit.

Using the trimmer in the shower

- This appliance allows for use in or out of the shower.
- This appliance can be stored in the shower. It is recommended to dry off excess water and moisture after use.
- The trimmer should not be submerged in water, bath or sink.

NOTE: trimmer will not operate if battery is inserted incorrectly.

Product Features

1. Dual-Sided Trimmer
2. Washout Button (for easy cleaning)
3. 6mm Comb Attachment (for dual-sided trimmer)
4. Nose and Ear Trimmer
5. Adjustable 5-Length Comb (1mm to 5mm)
6. Precision Detail Trimmer
7. Trimmer Handle
8. On/Off Control
9. Battery Compartment
10. AA Battery (included, not shown)



Operating Your Trimmer

Changing Attachments

Remove an attachment by rotating it a 1/4 inch turn to the left (counter-clockwise) and pull off. Place another attachment on the unit and rotate it to the right (clockwise).

Hair Length Attachment

The 5-Length Adjustable Comb (with 5 settings) controls the length of the cut. To fasten the hair length attachment, place the front hooks on the hair length attachment over the front of the groomer's trimmer head and pivot onto back-side of the groomer's trimmer head to lock into place. (D)

To remove, push up on tab on back of hair length attachment.

Trimming Beards or Mustaches



- Before you begin. Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Place the adjustable length comb on the unit's trimmer head and determine how much hair you want to cut. Remember, it's always better to select a longer hair setting initially in order not to trim too much hair.
- Turn on the unit by rotating the battery compartment counterclockwise until the raised dot lines up with the rectangle, and begin trimming. (E)
- Start trimming under your chin, and following your jawbone line, work toward your ear and upper beard line using an upward motion. Allow the hair length attachment to follow to contours of your face. (F)
- When finished trimming, turn the unit's power off by rotating the battery compartment clockwise until the raised dot lines up with the 0. (G)

To Trim Edge of Mustache

- Remove adjustable length comb.
- Mustache hairs should be dry and avoid any waxes or lotions before using trimmer.
- Hold unit with trimmer cutting blade facing you.
- Trim hairs using a downward motion following the direction of your hair growth or trim against your hair growth, whichever is preferred. (H)

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- After trimming desired length, use a downward motion to blend whiskers.
- **NOTE:** Use slow and light pressure. Too much pressure may trim off more hair than desired.
- Turn unit off.

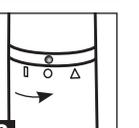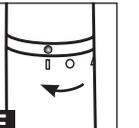

To Trim Sideburns

- Comb sideburns following the direction of your hair growth.
- Place the adjustable length comb on the unit's trimmer head and determine how much hair you want to cut.
- Hold unit vertically with trimmer cutting blade facing you.
- Trim sideburns using a downward motion.
- Turn unit off.

Trimming the Nape of Your Neck

- You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.
- Remove the adjustable length comb.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer. (I)
- Using your other hand, hold unit horizontally to the base of your neck with the cutting blade facing up, and move the trimmer along the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the groomer.
- Use the hand mirror to inspect the results of the operation and ensure all hairs along the nape of the neck have been trimmed.



To Define the Beard Line

- Remove the adjustable length comb.
- Hold unit with trimmer blade facing you.
- Start with edge of beard line, and with the cutting blades resting lightly against your skin, use motions towards edge of beard line to trim the beard line to desired locations in facial area and away from beard in neck area.



To Thin and Taper the Beard

- Remove the adjustable length comb.
- Use a small comb to comb and hold the beard hairs in place while trimming. (J)
- Hold the unit with the cutting unit facing away from you, move the trimmer along the length of the comb.

Technique for Nose and Ears

Here are a few tips for trimming the various parts of your face.

To remove hair from nose:

- Install Nose and Ear Trimmer.
- Turn unit on.

- Insert unit's trimmer gently into the nostril.
- For best cutting efficiency, gently move the groomer in and out of the nostril. (K)
- Remember to avoid inserting the groomer more than 1/4" into your nostril to ensure safe trimming.



To remove hair from ear:

- Install Nose and Ear Trimmer.
- Turn unit on.
- Insert groomer's cutting unit gently into the outer ear canal opening. (L)
- To trim hairs protruding from the surface of your ear surrounding the outer ear canal, guide the groomer around the edge of the ear.
- Remember to avoid inserting the groomer more than 1/4" into your ear canal to ensure safe trimming.



To remove hair from eyebrows:

- Install Dual-sided trimmer. Optional - to control length, use the 6mm comb attachment.
- Turn unit on.
- Gently guide trimmer to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself. (M)
- Move the unit slowly and carefully so as not to accidentally cut any hairs you do not intend to trim. *It is not recommended that you use the groomer to define or trim the entire eyebrow.*



Cleaning and Maintenance

Cleaning and Maintaining Your Groomer

Clean and lubricate your groomer regularly to insure your unit's operating life is not prematurely shortened.

- Do not apply pressure or hard objects to cutters.
- Do not use harsh or corrosive cleaners on unit or cutters.
- If groomer is not used regularly, remove battery to prevent possible chemical leakage.

Weekly

Your groomer has rust-resistant stainless steel cutting blades that permit the cutting assembly to be rinsed under running water, if desired. Or, you can clean your unit with a small, soft brush.

Cleaning with water

- Rinse attachments under running water. Use warm water. DO NOT use hot water. Hot water may cause damage to components.
- To dry off the attachments, you can use a hair dryer on a cool or medium heat setting to help dry them before reassembly onto the groomer. *Caution: Too high a heat will damage attachments.*

Cleaning the Dual Sided Trimmer Attachment

- After each use, brush or blow accumulated hair from the cutting unit.
- While running water over the blades, push down on the water drop symbol (N) to separate blades and get a more thorough clean. For best results, turn trimmer on while rinsing under water. Shake excess water off trimmer and pat dry with cloth.
- If the trimmer needs additional cleaning, the cutting head can be removed by turning it 1/4 inch counterclockwise and pulling it off. Then blow out the accumulated hair or rinse it more thoroughly under running water.
- Afterward, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1/4 inch clockwise until it locks into place



Lubricating the cutters - Optional

- After rinsing the unit, apply a drop of mineral oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

Troubleshooting

The groomer does not work when turned on:

- Be certain battery has been properly installed. Groomer will not operate unless battery is correctly positioned.
- If battery power has been depleted, replace with 1 "AA" alkaline battery (see Battery section).

Groomer cutters do not move:

- The cutting unit may be dirty and clogged. Clean and lubricate the unit as directed in Cleaning section.

Performance Guarantee

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than

60 days after purchase of the Remington® product:

- a. The Remington® product;
- b. The original sales receipt indicating price and date purchased; and
- c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day.**

3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked "Product Takeback: Please Recycle!"

1.5VDC Type: RG028A

Questions or comments: Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com.**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

®/TM are owned by Spectrum Brands, Inc.
© 2020 Spectrum Brands, Inc. 7/20 28015

Made in China
T22-7001697-A