

REMINGTON®

Tame the Mane™ Detangling Brush

Use and Care Guide
DT7432



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this appliance if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Always store this appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with damaged or broken teeth as injury may occur.
- Do not use while bathing or showering.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

SAVE THESE INSTRUCTIONS

Product Features

Thank you for purchasing the Remington® Tame the Mane™—the detangling brush that makes detangling faster and easier than ever. No tangles, no tears, no tantrums!* This unit functions on two AA batteries.

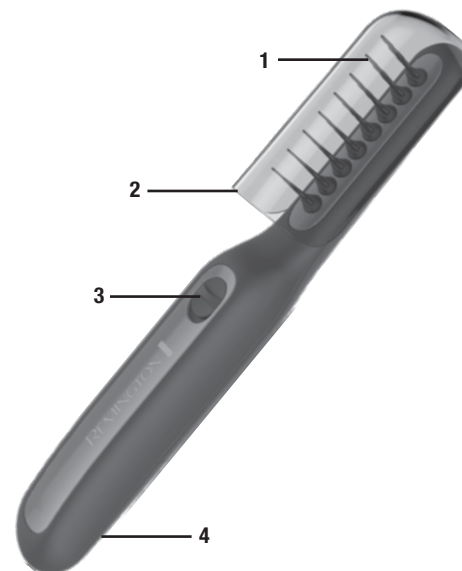

Key Features

- 1 Brush teeth
- 2 Brush cover
- 3 ON/OFF switch
- 4 Battery door
- 5 Two AA Batteries (Not Shown)

*Results vary by hair type and technique.

How To Use

Usage Instructions

Use the Tame the Mane™ much like you would use a normal brush, on wet or dry hair. Work on small sections at a time. Detangle the ends first and use short strokes.

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with towel— this creates split ends and frizziness.
2. Divide hair into manageable sections.
3. Work with one small section of hair at a time. Securely hold the section of hair 4 or 5 inches from the end.
4. Place the detangling brush in the hair just below your hand and ease it through the hair to the ends using short strokes.
5. Move your hand to grasp the section of hair a few inches higher, and repeat the process.



6. Gradually work your way up the section of hair like this until you can run the detangling brush smoothly from the roots to the ends. The detangling brush should glide easily through wet or dry hair, so do not try to force it. If you come across a difficult tangle, simply take the detangling brush out of the hair and start again. Avoid allowing the teeth to press against the scalp.
7. Repeat for each section of hair, until all the tangles have been combed through.

Cleaning and Maintenance

Cleaning

- Make sure the unit is turned off before cleaning.
- Do not immerse the detangling brush in water.
- Remove any hairs from the detangling teeth.
- Clean the teeth and handle of the detangling brush with a soft, damp cloth. Do not use any solvents or cleaning agents.
- After the detangling brush has been cleaned, replace its brush cover

To Replace Batteries

- Remove screw from battery door at bottom of handle on rear of unit using a small Phillips screwdriver.
- Lift open battery door.
- Remove existing batteries (if applicable).
- Insert two AA batteries in the direction shown in the battery compartment.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. *Applies to US and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

3 Vdc

Questions or comments:

Call 800-736-4648 in U.S. Or visit **RemingtonProducts.com**

® Registered Trademark and TM Trademark of Spectrum Brands, Inc.

©2016 Spectrum Brands, Inc. 9/16 16122-00
Spectrum Brands, Inc. Middleton, WI 53562

Made in China.
T22-0004635-A