

CI41T1



## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

### KEEP AWAY FROM WATER.

### DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.




KEEP AWAY FROM CHILDREN

## SAVE THESE INSTRUCTIONS

## Product Features

Thank you for purchasing this Remington® product. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

- High heat - 360-410° F
- Fast heat up - ready in 30 seconds.

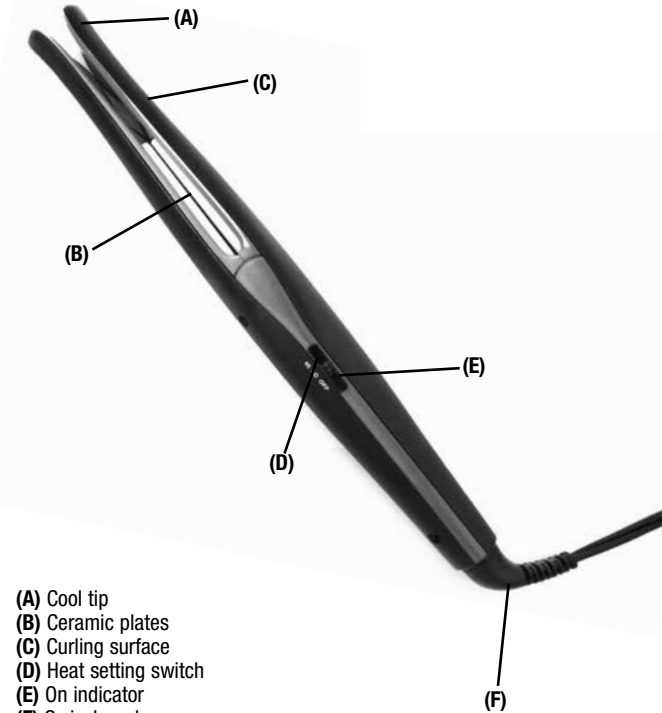

- (A) Cool tip
- (B) Ceramic plates
- (C) Curling surface
- (D) Heat setting switch
- (E) On indicator
- (F) Swivel cord
- (G) Heat resistant pouch (not shown)

## How to Use

### Heat Settings

Take extra care when using a styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

Setting	Hair Type
Low	fine, fragile or damaged hair
High	normal to thick or difficult to style hair

### Auto-off

After approximately one hour, the unit will automatically shut itself off. To reactivate the unit, press the ON/OFF switch.

## Usage Tips

### For all styles

1. Hair should be dry and free of tangles before using the styling iron.
2. Plug the styler into an electrical outlet. Press the power button to turn the unit on.
3. Adjust the temperature setting to desired setting. The ready light will flash while the unit heats up, then glow steadily when it has reached the selected temperature.
4. Divide the hair into manageable sections and clip the upper layers on top of your head out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

### Curling

1. Feed a section of hair through the split barrel. The styler should be positioned at the top of your head, near the crown.
2. Holding the styler at approximately a 45° angle to the section of hair, begin slowly rotating the styler so your hair passes through the ceramic plates and wraps around the curling surface (rotating towards your head). Continue rotating the styler until the entire section of hair has passed through the ceramic plates.
3. Release the hair at the bottom and twirl the section of hair into a curl with your fingers.
4. Repeat on remaining sections.



### Waves

1. Feed a section of hair through the split barrel. The styler should be positioned at the top of your head, near the crown.
2. Rotate the styler 180° away from the head and hold in place for several seconds. The hair should be taut across the edge and top of the curling sleeve during this step.
3. Turn the styler back to center and move down the strand of hair about one inch.
4. Rotate the styler 180° towards your head and hold in place for several seconds. The hair should be taut across the edge and top of the styler during this step.
5. Turn the styler back to center and move down the strand of hair. Repeat the rocking motion, alternating directions down the section of hair.
6. Repeat on remaining sections.

To view a how-to video, visit the tutorials tab at [remingtonproducts.com](http://remingtonproducts.com).



## Maintenance

### Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

### Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

## Performance Guarantee

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

### Remington Guarantees Satisfaction After 30 Days!

### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington product:
  - a. The Remington product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).

4. Returns should be mailed prepaid (no collect returns accepted):  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532

5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

120 VAC, 60 Hz

Questions or comments: Call 800-736-4648 in the U.S. or Canada  
Or visit [RemingtonProducts.com](http://RemingtonProducts.com)

® Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 2/17  
Job# 11107-01

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Made in China  
T22-0004844-B

