

REMINGTON®

AS8606



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately. Do not reach into the water.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.

- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.

- Do not direct hot air toward the eyes or other heat sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- While using the appliance, keep your hair away from the air inlets.
- Do not operate with a voltage converter.
- Do not use this product to dry (or brush) a wig made of something that may burn easily.
- Do not use this product to dry (or brush) a wig that has been cleaned in something that may burn if it may still have some of the cleaner on or in it.

KEEP AWAY FROM CHILDREN SAVE THESE INSTRUCTIONS

Safety Instructions

ALCI Safety Device

This Remington® airstyler is provided with an appliance leakage circuit interrupter (ALCI) safety device built into the plug. This device is designed to make the unit inoperable under some abnormal conditions, such as accidental immersion in water. The ALCI safety device is equipped with a test button so that its operation can be checked. This unit should be tested before each use to confirm that the safety device is operational.

To test:

After plugging in your airstyler:

1. Press the reset button on the ALCI device.
2. Press the test button. The reset button will pop out. This verifies that the safety device is operating properly.
3. Press the reset button to reactivate your ALCI safety device.
4. Your airstyler is now ready for use.

Note: This unit may automatically trip when unplugged. If so, the unit must be reset after it is plugged in. If the dryer doesn't reset after following the above testing procedure, call 800-736-4648.

1. Should the ALCI safety device trip (i.e., reset button pops out) during use, press the reset button. Should the airstyler fail to reset, call 800-736-4648. Never operate this appliance if it has been dropped in water.
2. The airstyler is designed to work on ordinary household current only, 125 volts A.C., 60 Hz. It is not intended for commercial use.
3. This appliance is equipped with an automatic thermal limiter, which will cycle off when overheated and come back on when cooled down. If the unit cycles off, unplug the cord for several minutes before restarting.



THIS MESSAGE ABOUT

GROUND FAULT CIRCUIT INTERRUPTERS

CAN SAVE A LIFE!





A GFCI can save your life!

Compared to that, the price is small!

Don't wait... install one now!

*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

Product Features

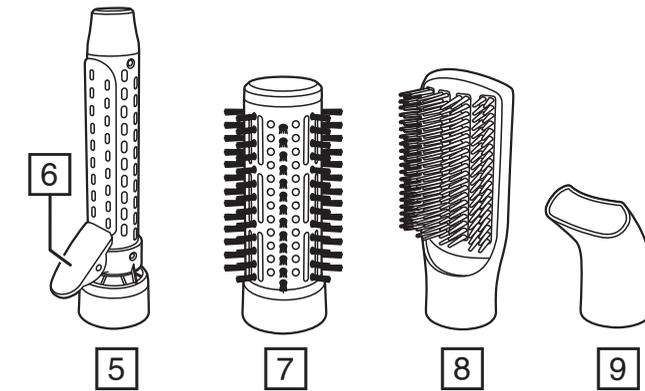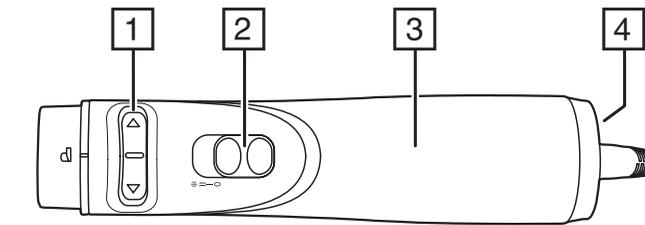




1. Rotation switch
2. Temperature control switch
3. Handle
4. Inlet grill
5. 30 mm rotating clipped barrel
6. Barrel clip
7. 40 mm soft bristle brush

8. Firm paddle brush
9. Pre-styling nozzle

Not shown:

- Luxury storage case
- Protective cover

How to Use

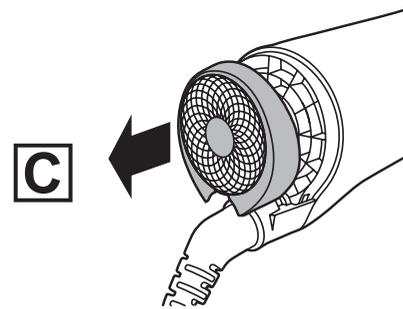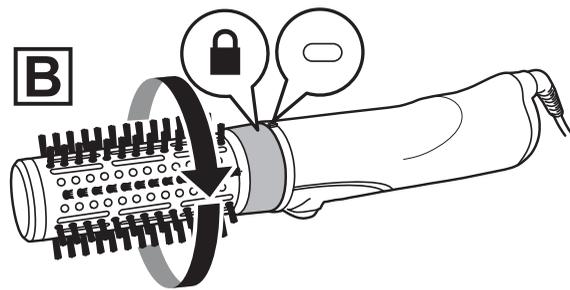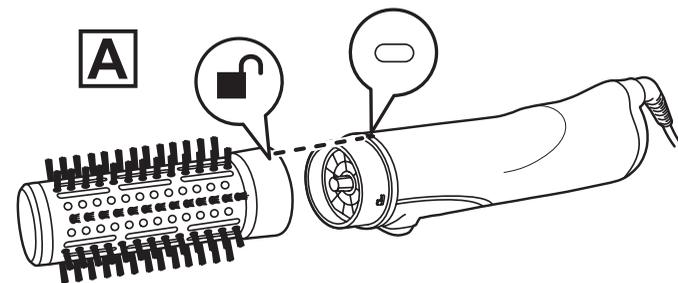

- Plug the product into the power outlet.
- Select your attachment before you turn on the appliance.

To fit an attachment:

- Align the  symbol on the attachment with the  mark on the body (fig. A).
- Turn the ring on rotating attachments (30 mm tong and 40mm brush), or the attachment itself (paddle brush or pre-styling nozzle) until the  symbol is aligned with the  mark to secure (fig. B).

To remove an attachment

- Align the  symbol with the  mark and pull the attachment off the handle.

Temperature settings

- There are three temperature settings on the styler High, Low and Cool (for setting the style).
- To turn the appliance on slide the temperature control switch to **I** for low heat, **II** for high heat or  for the cool setting.

- Select the appropriate temperature for your hair type:

Temperature	Hair Type
Low	Thin/fine, damaged or bleached hair
High	Thick and difficult to style hair

Rotation settings

Only the 30 mm tong and the 40 mm brush rotate.

To use the rotating function press the right arrow () on the rotation switch to rotate the attachments clockwise and the left arrow () to rotate the attachments anti clockwise.

- NOTE: The brush and tong attachments will only start rotating when a temperature setting has been selected.

Prepare the hair for styling

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Using the pre-styling nozzle rough dry the length and roots until 80% dry.
- Divide the hair into sections, style the lower layers first.

Create volume and shape using the 40mm rotating brush

- To dry your roots and add volume, place the brush underneath the section close to the roots and hold for a few seconds, lifting the hair as you dry.
- Move the styler downwards through the hair section, at the same time rotate the brush away from the head by pressing and holding  or  as required.
- Keep moving the styler downwards to resist the brush rotation. Doing this will create tension through the section of hair.
- If the brush spins too quickly release the rotation switch and remove the brush from your hair.
- To create shape, continue rotating the brush until you reach the ends of the hair and then roll the ends under.
- For even more volume, wrap the bottom of the hair section around the brush. Press and hold the applicable rotation switch ( ) and wind the entire length of the section around the barrel, stopping at the roots. Release the rotation switch and hold the brush in the hair for a few seconds or until the section is dry.
- Repeat this around the head.
- Let the hair cool before styling.
- Let the attachment cool before removing.
- Place the protective cover over the brush head to protect the bristles from damage in storage.

Create loose curls with the 30 mm rotating tong

- Place the end of a section of hair underneath the tong clip.
- Press and hold the applicable rotation switch (- +) and wind the entire length of the section around the barrel, stopping at the roots.
- Release the rotation switch and hold the tong in your hair for 10 seconds or until the section is dry.
- Unwind the tong and release the curl.
- Repeat this around the head.
- Let the hair cool before styling.
- Let the attachment cool before removing.

Create smooth, sleek hair using the firm paddle brush

- Starting at the roots, slowly brush through each section just as you would with a normal brush.
- To add additional volume tip your head upside down and brush the underneath of your hair.
- When dry use your fingers to shape the hair and ends.
- Let the attachment cool before removing

Cool setting

- To set your style whilst using any of the attachments, use the cool setting. To operate slide the temperature control switch to the  position.

Storage, cleaning and maintenance

This appliance has no user serviceable parts.

After use, turn the appliance off by moving the temperature control switch to the **0** position.

- Unplug the appliance and allow to cool before cleaning and storing away.
- Wipe all surfaces with a damp cloth
- Don't use harsh or abrasive cleaning agents or solvents.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille.
- Remove the grille as shown (fig. C), clean with a cloth or soft brush, then replace it.

Store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked "Product Takeback: Please Recycle!"

Warranty

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:

Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

125 VAC 60 Hz Type: AS13A

Questions or comments: Call 800-736-4648 in the U.S. or visit **RemingtonProducts.com**.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
© Registered Trademark of Spectrum Brands, Inc.
© 2020 Spectrum Brands, Inc. 8/20 28116

Made in China.
T22-7001774-A