

REMINGTON®

S24A-S25A Series



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.**

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:


- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Hold the straightener with the steam vents facing away from your scalp.



**KEEP AWAY FROM CHILDREN
SAVE THESE INSTRUCTIONS**

Product Features

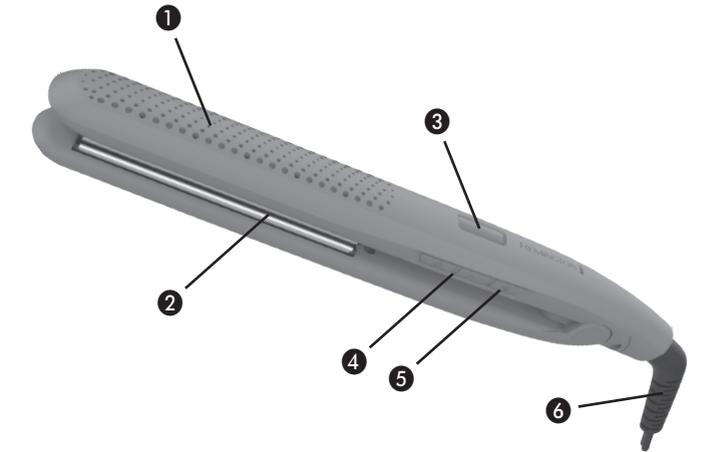

Wet2Style™ Features

- | | |
|--|---------------------------|
| 1. Steam Vents - safely remove excess water from hair as steam | 5. On/Off button |
| 2. Ceramic Plates - protect hair from heat damage | 6. Swivel cord |
| 3. LCD Temperature Display | 7. Hinge Lock (not shown) |
| 4. Digital Controls - 10 Heat Settings | |

Unique Venting System:

Unique steam vents and channels allow this styler to be safely used on wet or dry hair. The channels extract moisture from damp hair and allow steam to escape through the vents, drying hair and sealing the cuticle at the same time. Creates salon straight, shiny hair in less time, with less damage.

How to Use

Styler Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct settings for your hair type.

Wet/Dry Settings

This styler can be used on wet or dry hair. To toggle between the wet and dry modes hold down the + button for 2 seconds.

STYLE CHEAT CHART

ICON ☞ AND BLUE SCREEN for damp hair.

NO ICON AND NON COLORED SCREEN for dry hair.

Dry Hair: 280°F-320°F

Damp Hair: 340°F-370°F

Wet Hair: 390°F-450°F

Usage Tips

NOTE: Please see "Wet/Dry Setting" above.

Straightening Your Hair

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with a towel, as this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Plug the styler into an electrical outlet. Push the on/off button to turn the styler on. The LCD temperature display will turn on.
3. Adjust the temperature using the digital temperature controls.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with the underneath layers first.
5. Test the styler on a small section of hair, and then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher setting while styling your hair, simply adjust the styler to a higher number.
 - While styling your hair, if you find that you need a lower temperature, adjust the styler to a lower heat setting.
6. Take a small section of hair and comb through it with a fine-toothed comb. Pull hair down and away from your scalp, and hold it taut.

7. Hold the straightener with the steam vents facing away from your scalp.

Starting at the roots, clamp hair firmly between the plates and run the slyer down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.

8. To speed up drying at the roots, you may wish to run the styler over the first few inches of hair nearest the root several times. Repeatedly run the unit smoothly down the entire strand until hair is fully dried. (NOTE: The unit may make a steaming/hissing noise when used on damp hair. This is okay! The unique design of this styler will channel the moisture away from hair and out the steam vents.)

9. Repeat with all sections of your hair, working with the underneath layers first, then the top and sides, until your hair is fully dried.

10. When you are finished styling, press the on/off button to turn the unit off, unplug it, and allow it to cool before storing.

NOTE: Hold the straightener with the steam vents facing away from your scalp.

Maintenance

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Limited Four-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product from an authorized source, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or in Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. dollars and will be provided only if all terms and conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120 VAC 60 Hz

TYPE: S24A, S25A

Questions or comments: Call 800-736-4648 in the US or in Canada. Or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

® Registered Trademark of Spectrum Brands, Inc.

© 2020 Spectrum Brands, Inc. 1/20 27297

Made in China.

T22-7001481-A

