

REMINGTON®

S-7280



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:


- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Hold the straightener with the display and steam vents facing away from your scalp.



**KEEP AWAY FROM CHILDREN
SAVE THESE INSTRUCTIONS**

Product Features

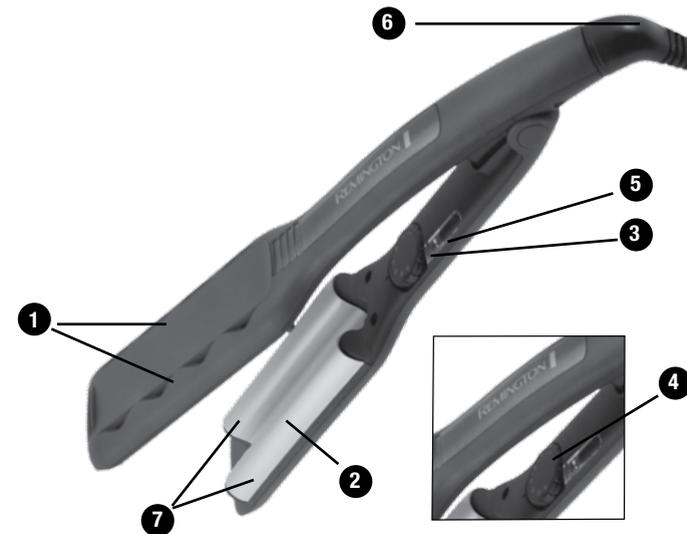

Features

- | | |
|---|--|
| 1. Vent channel – releases excess moisture as steam | 4. Temperature settings – 30 heat settings |
| 2. Ceramic extra-long plates – provide high, even heat for less frizz | 5. On/Off button |
| 3. LED light <ul style="list-style-type: none">- on/off indicator- wet/dry indicator - color changes between wet/dry styling | 6. 6 ft. swivel cord |
| | 7. Waved plates |

Unique steam vent and channel design:

Unique steam vents and channels allow this styler to be safely used on wet or dry hair. The channels extract moisture from damp hair and allow steam to escape through the vents, drying hair and sealing the cuticle at the same time. Creates salon straight, shiny hair in less time, with less damage.

Ceramic: Ceramic protects against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

Automatic shutoff:

This styler is equipped with automatic shutoff. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair.

How To Use

Styler Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct settings for your hair type.

Wet/Dry Setting

This styler can be used on wet or dry hair. When the light is amber, it is safe to use on dry hair. When the light is green, it is safe to use on damp/wet hair.

Dry Hair: 1 - 20

Damp Hair: 20 - 25

Wet Hair: 25 - 30

Usage Tips

NOTE: Please see "Wet/Dry Setting" to the left.

Styling Your Hair

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with a towel, as this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Plug the styler into an electrical outlet. Press the on/off button to turn the styler on. The indicator light will begin to glow.
3. Adjust the temperature using the dial (**NOTE: The indicator light turns different colors depending on what heat setting is use.** A green light, for wet hair, indicates the styler is on settings 20-30. An amber light, for dry hair, indicates the styler is on settings 1-19.)
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with the underneath layers first.
5. Test the styler on a small section of hair, and then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher setting while styling your hair, simply adjust the dial to a higher number.
 - While styling your hair, if you find that you need a lower temperature, adjust the dial to a lower heat setting.
6. Take a small section of hair and comb through it with a fine-toothed comb. Pull hair down and away from your scalp, and hold it taut.
 7. **Hold the styler with the steam vents facing away from your scalp.** Starting at the roots, clamp hair firmly between the waved plates and hold for 4-5 seconds. Move down the strand of hair starting at the point on the strand where the style ends, clamping firmly and holding the styler there for 4-5 seconds until the whole strand is styled.
 8. To speed up drying at the roots, you may wish to clamp and hold the styler there for 4-5 seconds several times. Repeatedly clamp and hold the unit down the entire strand until the hair is fully dried. (**NOTE: The unit may make a steaming/hissing noise when used on damp hair. This is okay! The unique design of the styler will channel the moisture away from hair and out the steam vents.**)
 9. Repeat with all sections of your hair, working with the underneath layers first, then the top and sides, until your hair is fully dried.
 10. When you are finished styling, press the on/off button to turn the unit off, unplug it, and allow it to cool before storing.

Maintenance

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons

- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

120 VAC 60 Hz

Questions or comments: Call 800-736-4648 in the US or 800-268-0425 in Canada. Or visit www.RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Madison, WI 53711

Dist. by: Spectrum Brands Canada, Inc., Mississauga, ON L5L 0A1

® Registered Trademark of ROVCAL, Inc., a subsidiary of Spectrum Brands, Inc.

© 2012 ROVCAL, Inc. 5/12 Job #CS 43184_RevA

Manufactured to Remington's specifications in the PRC.

T22-0000133



Certified to CAN/CSA
E60335-2-23. Conforms
to UL Std. 859.