



## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:  
 Proof of Ownership • Product Protection • Product Registration • Special Offers  
 Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
 KEEP AWAY FROM WATER.**

## DANGER

**As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:**

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

## WARNING

**To reduce the risk of burns, fire, electric shock or injury to persons:**

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use attachments not recommended by the manufacturer.



**KEEP AWAY FROM CHILDREN**

**SAVE THESE INSTRUCTIONS**

## PRODUCT FEATURES



Thank you for purchasing this Remington® product. Please carefully read the instructions contained in the booklet, and keep them in a safe place for future reference.

**Ceramic, tourmaline ionic, smooth glide coating for even heat and snag-free styling**

**High heat – 230°F to 375°F.**

**60 second heat up**

### TEMPERATURE SETTINGS

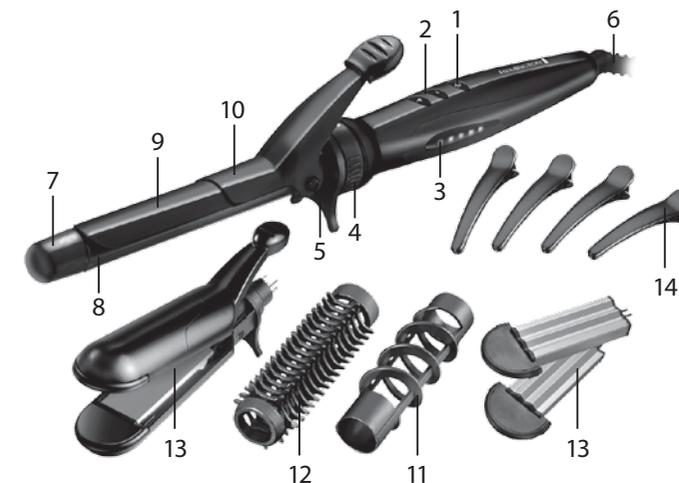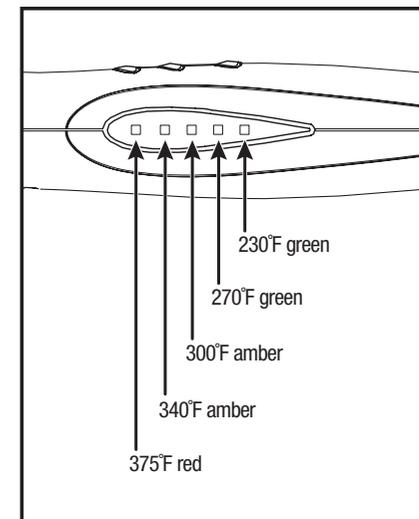

### Key Features

- |                                    |  |
|------------------------------------|--|
| 1 On/Off button                    | 12 Brush sleeve                                      |
| 2 Temperature controls             | 13 Interchangeable straightening and crimping plates |
| 3 LED temperature indicator lights | 14 4 sectioning clips                                |
| 4 Attachment locking function      | 15 Storage bag (not shown)                           |
| 5 Stand                            |  |
| 6 Swivel cord                      |  |
| 7 Cool tip                         |  |
| 8 19mm tong                        |  |
| 9 Long tong clip                   |  |
| 10 Short tong clip                 |  |
| 11 Spiral sleeve                   |  |


## HOW TO USE

- Before use, ensure the hair is clean, dry and tangle-free.
  - For extra protection use a heat protection spray.
- Hairsprays contain flammable material – do not use while using this product.**

- Select your attachment before you turn on the appliance.

### To Secure Attachments to the Handle

- Ensure the locking ring is in the unlocked position, ready to insert the attachment.
- Locate the pins on the attachment holes on the handle (fig. 1).
- Firmly push together (fig. 2).
- Turn the locking ring anti-clockwise to secure the handle and the attachment together, while still pressing down on the attachment (fig. 3).

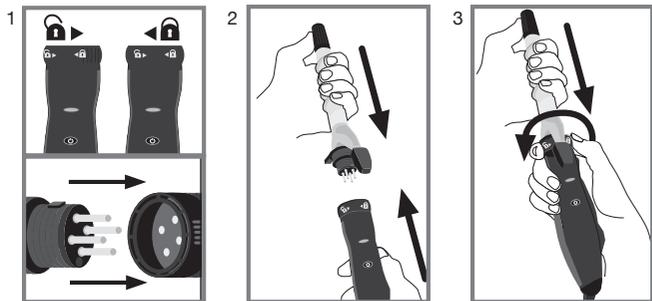

### To Change the Straightening/Crimping Plates

**Note:** The crimping plates are located on the other side of the straightening plates.

- Ensure the unit is switched off and cool.
- Slide the plates out holding the plastic edges.
- Turn the plates over and slide back into place.

### To Attach the Brush and Spiral Sleeve

- Slide spiral sleeve over the 19mm tong barrel, over the long tong clip and secure under the shorter tong clip.
- To use the brush sleeve, slide over both tong clips.
- Section the hair prior to styling. Style the lower layers first.
- Plug in the styler and press and hold the on button to switch on.
- Start styling on lower temperatures first. Select the appropriate temperature for your hair type using the controls on the top of the styler.
- To increase the temperature press the button marked '+' to decrease the temperature press the button marked '-'.

### Recommended temperatures:

Temperature	Hair Type
230°F - 340°F (110°C - 170°C)	Fine
340°F - 375°F (170°C - 190°C)	Medium/Thick

- The LED temperature indicator lights will stop flashing once the desired temperature is reached.

### For tight bouncy curls use the 19mm tong

- Place a section of hair under the long tong clip (smaller sections create tighter curls – larger sections create large curls or waves).
- Turn the styler to roll the hair round the barrel.
- Wait about 10 seconds for curl to form.
- Unwind the tong and release the curl.

### For spiral curls or to aid with curling use the spiral sleeve.

- Secure hair under the short tong clip and wind the hair up the barrel using the spiral sleeve as a guide.
- For looser curls or curved and finished ends use the brush sleeve.
- Curl hair around the brush, hold in place for 20 seconds then gently unwind.

### For straight hair use the straightening plates.

- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- Only repeat twice per section to prevent damage to the hair.

### To crimp hair use the crimper plates.

- Take a section of hair. Starting at the roots place the crimping plates over the section of hair, press them shut and hold for a few seconds.
- Repeat down the section of hair until a wave is created in the full length.
- Allow the hair to cool before styling.
- Let the attachments cool before removing.
- To remove the attachment turn the locking ring clockwise to the unlocked position and pull the attachment away from the handle.
- After use, press and hold the off button to turn off then unplug the appliance.

## MAINTENANCE

### Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required. This appliance has no user serviceable parts.

### Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

## WARRANTY

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in U.S. or 800-268-0425 in Canada.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### Remington Guarantees Satisfaction After 30 Days!

#### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at [RemingtonProducts.com/60day](http://RemingtonProducts.com/60day).
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

#### 120-240 VAC 50/60 Hz

#### Questions or comments:

Call 800-736-4648 in U.S. or 800-268-0425 in Canada

or visit [RemingtonProducts.com](http://RemingtonProducts.com)

® Registered Trademark of Spectrum Brands, Inc.

©2016 Spectrum Brands, Inc. 9/16 16558-00

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.

255 Longside Drive, Unit 101  
Mississauga, ON L5W 1L8

Made in China.

T22-0004329-B



Intertek