

# REMINGTON®

S-8700



## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:  
Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

## DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

## WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Unplug this appliance before filling. Fill reservoir with distilled water or Remington's protect conditioner only. Do not overfill.



**KEEP AWAY FROM CHILDREN  
SAVE THESE INSTRUCTIONS**

## Product Features

Thank you for purchasing the Remington® flat iron. Please carefully read the instructions contained in the booklet, and keep it in a safe place for future reference.

### T|Studio Protect Styling Collection

#### Key Features:

**Next Generation Floating Ceramic Plate**

**Instant high heat - ready in 30 seconds**

**Digital precise heat - 300°-450°**

**ON/OFF button**


**Highest Grade Ultra Ceramic - smooth, snag free glide**

**Cool Vapor Generator**

**Automatic shutoff after 1 hour**

**Salon length, swivel cord**

**Temperature Lock heat control**

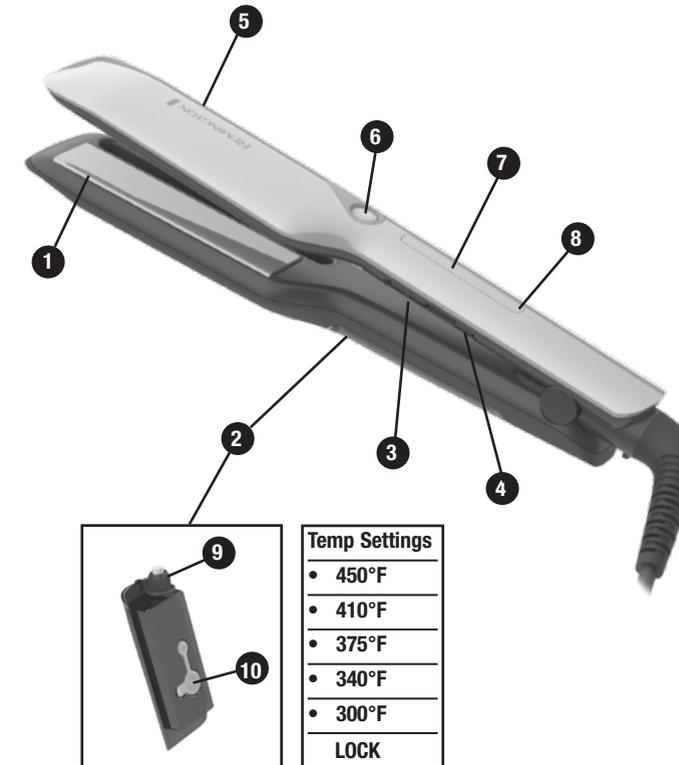

Temp Settings	
• 450°F	
• 410°F	
• 375°F	
• 340°F	
• 300°F	
LOCK	

#### Straightener Features

- |                         |                          |
|-------------------------|--------------------------|
| 1. Ultra ceramic plates | 6. Vapor button          |
| 2. Removable reservoir  | 7. Temperature settings  |
| 3. Temp. +/-            | 8. Button lock indicator |
| 4. Power button         | 9. Wick                  |
| 5. Vapor channel        | 10. Reservoir cap        |

## HOW TO USE

### Heat Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

### +/- Button Features

- Set to desired temperature setting.
- During heat up time, the temperature display will pulse until the desired temperature is reached.
- When the appliance reaches the desired temperature, the pulsing will stop.
- Turbo Mode:** (hold time about 2 seconds)
  - Activating: Press "+" Button and hold button for about 2 seconds to increase temperature to maximum 450°F setting.
  - Decreasing: Press "-" Button to decrease the temperature like the normal function mode.

### Temperature Lock Mode:

- Activating: Press and hold "-" button for about 2 seconds. All the keys will be locked and the unit will display the lock symbol.
- Unlocking: Press and hold "-" button for about 2 seconds. All the keys will be unlocked and the lock symbol will disappear.

Temp.	Hair Type
A. 300°-340°F	Very fine, fragile, damaged hair
B. 375°F	Normal, easy to straighten hair
C. 410°-450°F	Thick, difficult to straighten hair

### Automatic Safety Shutoff

After approximately one hour, the unit will automatically shut itself off. To reactivate the unit, press the ON/OFF button.

### Hinge Lock

This professional flat iron has a closing lock to make the unit easier to store. To lock the iron, simply squeeze the plates together and turn the switch to the locked position. To unlock, turn the switch to the unlock position.

**NOTE: Do not heat the unit in the locked position.**

## Using Vapor Feature

To use the vapor feature fill the reservoir with distilled water or Remington's Protect Conditioner. Filling the reservoir with any other liquids will harm the vapor generator.

First, make sure unit is unplugged and cool. Then remove the reservoir by pulling the reservoir out by lifting at the notch in the handle at the rear of the reservoir.

Next, remove the reservoir cap. Fill the reservoir with distilled water or protect conditioner. Replace the cap. Insert the wick end into the unit and press down on the reservoir until seated.

Press and hold the vapor button for two seconds, the button should illuminate. Ensure the vapor faces away from your scalp to apply the vapor to your hair before heat is applied. Vapor will only dispense when unit begins to close.

### WARNING:

- Do not operate vapor feature when empty
- Use only distilled water or Remington Protect Conditioner
- Mineral rich tap water will clog the vapor generator

### USE ONLY AS DIRECTED. STRAIGHTENER TO BE USED ONLY WITH DISTILLED WATER OR REMINGTON CONDITIONING TREATMENT.

## Protect Conditioner

### Directions:

1. Shake well.
2. Open the capsule and fill the straightener reservoir with the Remington Hair Conditioning Treatment until full.
3. Activate "vapor" button on the PROtect straightener and style!  
Use weekly or more often for desired results.

### 12 mL - 0.4 FL OZ U.S.

**CAUTION: External use only. Avoid contact with eyes. Keep out of reach of children.**

INGREDIENTS: Aqua, Glycereth-8 Macadamia Seed Oil Esters, Sodium Arganaphoacetate, Keratin, Hydrolyzed Keratin, Phenoxyethanol, Ethylhexylglycerin

## Usage Tips

### Straightening Your Hair

1. Hair should be dry and free of tangles before using the styling iron.
2. Plug the styler into an electrical outlet. Press and hold the ON/OFF button until the unit turns on and the lights up.
3. Adjust the temperature using the temperature buttons. The display will flash while the unit heats up, and then glow steadily when it has reached the selected temperature.
4. Divide hair into manageable sections and clip the upper layers on top of your head, out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

### NOTE:

- If you find that you need a higher setting while styling your hair, simply adjust the temperature to a higher heat setting.
- While styling your hair, if you find that you need a lower setting, adjust the temperature to a lower heat setting. Because the unit is already hot, it may take a few minutes to cool off.

6. Take a small section of hair, pull down and away from your scalp, and hold it taut.
7. Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold the styler in one area for a long period of time or damage to hair may occur.
8. To create curves or flicks, rotate your wrist to turn the styler in toward your head or out away from your head as you run the styler down the hair strand.
9. Repeat with all the sections of your hair, working with the underneath layers first, then the top and sides to finish.
10. When you are finished styling, press and hold the ON/OFF button to turn the unit off, unplug it, and allow it to cool before storing.

## MAINTENANCE

### Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required. This appliance has no user serviceable parts.

### Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

**NOTE: This unit contains no user serviceable parts.**

## Warranty

### Limited Four-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in U.S. or 800-268-0425 in Canada.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

### SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

## Performance Guarantee

### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US.

\*Applies to US and Canadian customers' returns only.

\*\*Terms and conditions apply.

### Terms and Conditions

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington branded product:
  - a. The Remington product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
**Remington 60-Day MBG**  
**507 Stokely Drive, Box 1**  
**DeForest, WI 53532**
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

### 120 VAC 60 Hz

Questions or comments:  
Call 800-736-4648 in U.S. or 800-268-0425 in Canada  
or visit **RemingtonProducts.com**

® Registered Trademark of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc. 5/16 15509-00

Dist. by: Spectrum Brands, Inc. Middleton, WI 53562

Dist. by: Spectrum Brands Canada, Inc.  
131 Saramia Crescent, Vaughan, ON L4K 4P7

Made in China

T22-0003000-B

