



H-5600

## Use and Care Guide

### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers  
 Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

## DANGER

#### To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

## WARNING

#### To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug; if it is not working properly; if it has been dropped, damaged, or dropped into water.

- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not touch the posts that hold the rollers. They are hot.
- Do not use an extension cord with this appliance.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

## Product Features

Thank you for purchasing Remington® Hot Rollers. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

### Ionic Hot Rollers


- Before setting, hair should be dry or only slightly damp, never wet.
- Plug unit into outlet and allow rollers to warm up before use.
- Rollers will be ready to use after 3 minutes of warm up time.

### Storage Match: For Easy Clean-up

- To put rollers back in the setter unit, match the dot(s) found on each roller end to the dot(s) found next to the ring roller openings on your setter unit.

### Setter

- (A) Ready dot
- (B) On indicator light
- (C) Velvety roller (H-5600)
- (D) Cool-touch end rings
- (E) Color coded clips
- (F) Storage Match

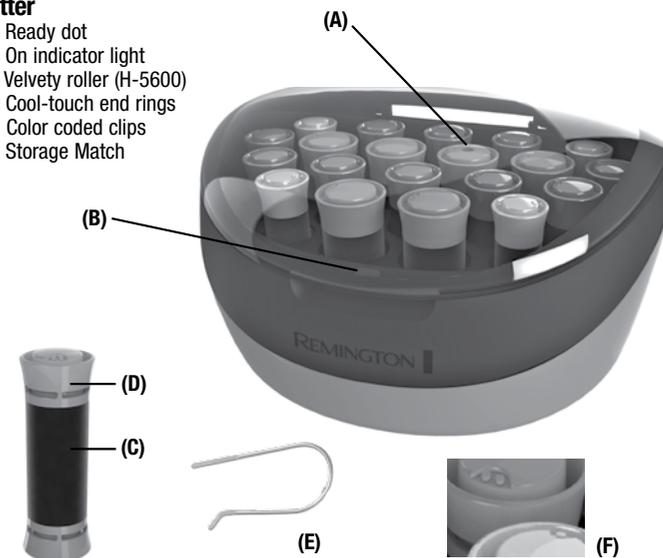

## How to Use

### 1. Get Ready

Section hair and comb it smooth. Roll hair as usual, in the direction of desired style. Secure each roller with the correct size clip. FOR CURLS: Start end of hair on roller and continue to wind toward the roots. FOR MORE VOLUME: Start rolling hair at the roots; and then wrap the end of hair around the roller.



### 2. Get Set

Once the entire head is set, wait until rollers are cool, then unwind. Start with the rollers you placed in first. The time the roller is left in the hair regulates the curl size: the longer the time, the tighter the curl and the longer the curl will last. Unplug the unit. Rollers will remain curling active for ten minutes.



### 3. Go!

To release secured roller, remove each clip and roller gently. Unwind, never pull. Place roller back on correct post. Let each new curl spring back into position and cool for a moment. Then brush out hair and style. **Spritz hair for extra hold.**



## Usage Tips

### Long and Wavy

For long, voluminous, smooth waves, use the medium or large rollers. Roll the top, front layer of hair back to your crown, using one roller. Next, use three other medium or large rollers to roll the remaining hair in three equal sections on the back and sides of the head. Roll the hair under, up the nape of the neck. Leave rollers in place for about five to ten minutes. Unwind, don't pull, the rollers out in the order you put them in, and let the curl cool for a minute to set. Lean forward and brush hair through. Toss head back and smooth, brushing top to one side and turning ends under.

### Short and Chic

Use two or three of the small sized rollers to roll the top, front layer of your hair back to the crown. Then randomly, place the remaining small or medium sized rollers around the back and sides of the head, rolling all the curlers under. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to "set" and then use your fingers to separate and shape. Spritz hair for extra hold.

### The Flipped Bob

Use a medium or large sized roller on a large section of the hair on your crown to give height. Roll the hair back and under to crown. Next, take large sections all around the sides of your head, and roll up so the hair will flip out. You should roll curlers up to the level of the top of your ear. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to set. Next, brush hair out, using your hand to shape the flip outward. Spritz for extra hold.

**Quick Touch-Ups** – *To add some fullness before an evening out, here are some tips:*

**Short Hair:** Use a few small sized rollers in the front section of hair, and mist with hairspray. Remove after just 30 seconds to add fullness. Let cool, and separate curls with finger.

**Medium Hair:** Use several medium sized rollers to add more flip to your bob, rolling ends of hair so hair flips out. Mist with hairspray, and remove after about 1 minute. Remove rollers, let cool, and brush hair to smooth.

**Long Hair:** Use several large sized rollers to curl ends under. Remove after 1 minute, let cool, and brush through.

## Operating and Maintenance

### Operating Instructions

1. This appliance is designed to work on ordinary household current only (120VAC, 60Hz). It is not intended for commercial use.
2. Place the unit on a hard, flat, heat resistant surface.
3. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Never try to defeat this safety feature.
4. Plug cord into the outlet to activate the heat-up process. A red indicator light at the front of the unit will glow when the unit is on. Allow the rollers to heat up with the lid closed. Refer to the How to Use section of these instructions for heat up times.
5. When finished applying rollers in hair, unplug the unit from the outlet and allow it to cool down before moving or storing away.
6. Avoid damage or loss of rollers by placing them back into the post holds of the unit after use.

### Maintenance Instructions

1. Clean unit with damp cloth only. No other maintenance is required.
2. Rollers may be cleaned with a damp cloth and mild detergent or soap.
3. Store appliance and cord where they will not be damaged.
4. **Do not wrap cord around appliance.**
5. Do not attempt to repair the appliance yourself.

### Storage

When not in use, unplug the unit. Allow it to cool, and store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding warranty. Handle cord carefully for long life, and avoid jerking, twisting or straining it, especially at plug connections.

## Performance Guarantee

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, DeForest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

**SPECTRUM BRANDS, INC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

## Warranty

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### *Remington Guarantees Satisfaction After 30 Days!*

#### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in US Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington product:
  - a. The Remington product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day.**
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532

5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
  6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
  7. Please allow 4-6 weeks to receive your refund by check.
- \*Applies to US and Canadian customers' returns only.

120VAC 60Hz

**Questions or comments:** Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit **RemingtonProducts.com**

® Registered trademark of ROVICAL, Inc., a subsidiary of Spectrum Brands, Inc.

© 2013 ROVICAL, Inc. 6/13 Job# 2013-5-28-167

Dist by:  
Spectrum Brands, Inc.  
Madison, WI 53711

Spectrum Brands Canada, Inc.  
131 Saramia Crescent  
Vaughan, ON L4K 4P7

**Made in China.**

**T22-0001247**

