

BLACK+DECKER

COUNTERTOP OVEN

use and care manual

TOD1770G



Thank you for your purchase!



Register online at

www.prodprotect.com/blackanddecker



Rate and review your products at

www.BlackAndDeckerAppliances.com



Share your pictures & stories with us online



Should you have any questions or concerns with your new product, please call our Customer Service Line at 1-800-465-6070 (U.S. and Canada). Please do not return to the store.

CONTENTS

Important Safeguards 4

Getting to Know Your Countertop Oven 6

How to Use 7

Toasting 7

About Natural Convection 8

Natural Convection Baking 8


Broiling 9

Warm 9

Care and Cleaning 10

Function Chart 10

Warranty and Customer Service Information 11

| | |
|--|---|
|  <small>ELBOL.COM 800-226-0642 No. 80004-000</small> | <h1>CAUTION</h1> |
| | <p>THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.</p> |

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow time to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact consumer support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, press Start/Stop button until the Indicator Light is flashing for Bake, Broil, or Toast. Then unplug from wall outlet.
- Do not use appliance for other than intended use.
- Use caution when removing tray or disposing of hot grease.
- Do not clean oven with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing risk of electric shock.
- Do not attempt to clean the heating elements.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the unit while in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and other items not constructed of oven safe metal and glass pans.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating in the oven.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not leave unattended while in operation. Food ignition may occur. If this happens, unplug the unit, but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and other combustible materials.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

1. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used:
 - a) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord should be a grounding-type 3-wire cord.
 - c) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power cord is damaged, please contact the warranty department listed in these instructions.

GETTING TO KNOW YOUR COUNTERTOP OVEN



- | | |
|--|---|
| 1. Door handle | 6. Function/Temperature knob |
| 2. Easy view glass door | 7. Indicator Lights: Bake, Broil, Toast |
| 3. Wire rack (Part# TO1745-06) | 8. Digital display |
| 4. Baking pan (Part# TO1745-05) | 9. Time knob |
| 5. Slide out crumb tray (Part# TO1745-04) | 10. Start/Stop button (Turns unit ON or OFF) |
| | 11. Rubber foot pads, 4pcs (Part # TOD1770-01) |

Product may vary slightly from what is illustrated.

HOW TO USE

This appliance is intended for household use only.

Getting Started

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Please go to www.prodprotect.com/blackanddecker to register your warranty.
- Wash all removable parts as instructed in Care and Cleaning Section.
- Select a location where this unit is to be used, allowing enough space from the back of the unit and wall to allow heat to flow without damage to cabinets and walls.

Important information about using your oven

1. This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
2. When using the oven for the first time, you may notice smoke or a slight odor during the first few minutes. This is normal.
3. Be sure food or baking pan does not come within 1 ½ inches (3.8 cm) of the top heating elements.
4. Food should not extend beyond the edges of the baking pan to avoid drippings from falling onto the heating elements.
5. Many factors influence cook times such as altitude, humidity and variations in electrical grids. For best results, monitor the end of the cook cycle.
6. **Cooking Containers:** Metal, ovenproof glass or ceramic bakeware can be used in your oven. Follow the manufacturer's instructions. Be sure the top edge of the container is at least 1 ½ inches (3.81cm) away from the upper heating elements.


TOASTING

It is not necessary to preheat the oven for toasting.

1. Open oven door and insert slide rack in the middle slot.
2. Place items to be toasted directly on slide rack and close the door.

NOTE: for optimal toast, bread should be of uniform thickness and placed in one of the locations shown.

3. Set Function/Temperature selector knob to Toast position. The Toast indicator light will blink.
4. Use the Time knob to select desired toast shade on digital display, with 1 being the lightest and 7 being the darkest.
5. Press the Start/Stop button to begin toasting. The light will turn solid while toasting.
6. There will be 2 audible beeps once the cooking cycle is complete. After 60 seconds the unit will turn off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
8. Unplug appliance when not in use.

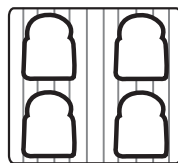

ABOUT NATURAL CONVECTION

What is Natural Convection?

Answer: When in Bake mode, your oven automatically defaults to Natural Convection Baking. In your countertop oven there is carefully designed venting built into the oven that contributes to improved airflow throughout the chamber and as a result, cooks your food faster and more evenly.

Do I need to adjust my time when in Bake mode to accommodate for Natural Convection?

Answer: On average, Natural Convection will shorten the cooking time, but it will vary by food. It's suggested to shorten your cooking time to start and then add additional time if needed.

NATURAL CONVECTION BAKING

Note: This oven has been designed to cook faster. Please inspect your items earlier than the prescribed cook time for a conventional oven to ensure that they do not get overcooked.

Note: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Place items to be baked directly on wire rack or place pan on wire rack.
2. Set Temp selector knob to desired temperature. The Bake indicator light will blink, indicating the oven is on stand by.
3. Turn the Time knob to set cook time on digital display.
4. Press the Start/Stop button to begin baking. The digital display will count down while cooking, showing the time remaining.
5. There will be 2 audible beeps once the cooking cycle is complete. After 60 seconds the unit will turn off.
6. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
7. Unplug appliance when not in use.

BROILING

Note: When broiling, preheat oven for 10 minutes.

1. If the items are going to be placed directly on the wire rack, slide the baking pan into the guide under the wire rack to catch drippings during broiling.
2. Place items to be broiled directly on wire rack, or in the baking pan on top of the wire rack.
3. Set Temp selector knob to Broil position. The Broil indicator light will blink, indicating the oven is on stand by.
4. Turn the Time knob to set Broil time on digital display.
5. Press the Start/Stop button to begin broiling. The digital display will count down while cooking, showing the time remaining.

Note: For best results when broiling meat, turn over the meat half-way through broiling.

6. There will be 2 audible beeps once the cooking cycle is complete. After 60 seconds the unit will turn off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
8. Unplug the appliance when not in use.

WARM

1. Set Temp selector knob to Warm position. The Bake indicator light will blink, indicating the oven is on stand by.
2. Turn the Temp knob to adjust to desired temperature.
3. Turn the Time knob to set cook time on digital display.
4. Place food on rack or in pan. Press the Start/Stop button to begin cooking. The digital display will count down while cooking, showing the time remaining.
5. There will be 2 audible beeps once the cooking cycle is complete. After 60 seconds the unit will turn off.
6. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the food.
7. Unplug appliance when not in use.

CARE AND CLEANING

This product contains no user serviceable parts. Refer to service qualified service personnel.

Cleaning

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

Note: Do not allow food debris to accumulate in oven cavity. Do not use aerosol or spray oven cleaners.

1. Clean the glass door with a sponge, soft cloth, or nylon pad and dish soap and warm water. Do not use a spray cleaner.
2. Remove wire rack and bake pan; wash in hot water with dish soap. To remove stubborn spots, use a polyester or nylon pad.
3. Pull out crumb tray and dispose of crumbs. Wipe tray with a damp cloth and dry thoroughly before placing back into the oven.
Note: *The racks, are dishwasher safe. We recommend washing the bake pan and crumb tray by hand with hot water and dish soap.*
4. Wipe the outside of the oven with a damp cloth or sponge. Dry thoroughly.
5. Do not attempt to clean the heating elements. Any food that comes into contact with the elements will burn off on its own.

FUNCTION CHART

| | Default Settings** | | Function Ranges | |
|------------------------------|---------------------------|---------|---------------------------|-----------------------------|
| FUNCTION | TEMPERATURE | TIME | TEMPERATURE | MAXIMUM TIME |
| Toast | - | Shade 4 | - | 1-7 Shades |
| Natural Convection/ Bake* | 200°F-450°F 93°C-230°C | 15 min | 200°F-450°F 93°C-230°C | 60 min Stay-on Available |
| Broil | 475°F 245°C | 15 min | 475°F 245°C | 60 min Stay-on Available |
| Keep Warm | 150°F 65°C | 15 min | 150°F 65°C | 60 min Stay-on Available |

*Natural Convection Baking is default on the Bake Setting.

**Default settings apply only after the unit has been unplugged and plugged back in (Bake Function is Default). Once a setting has been used, the last function, time and temperature selections will be saved.

WARRANTY INFORMATION

For service, repair or any questions regarding your appliance, call the appropriate 800 number listed within this section. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

Two-Year Limited Warranty (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/blackanddecker, or call toll-free **1-800-465-6070**, for general warranty service.
- If you need parts or accessories, please call **1-800-738-0245**.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

BLACK+DECKER

®

www.BlackAndDeckerAppliances.com



1150W 120V~ 60Hz

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Made in China.

© 2017 The Black & Decker Corporation and Spectrum Brands, Inc., Middleton, WI 53562

18400-00

T22-5004021